

S1102-01 MS-S336

Server System
User Guide

Contents

Regulatory Notices	4
Safety Information	6
System Specifications	7
System Overview	8
Motherboard Block Diagram	11
System LED Indicators	12
Motherboard Overview	13
Motherboard Connectors	
Expansion Slots	16
Power Connectors	17
Cooling Connectors	
Other Connectors	20
Motherboard Jumpers	26
Motherboard LEDs	27
Getting Started	28
Necessary Tools	28
Safety Precautions	28
System Setup	29
Drive Bay	29
Installing 3.5"/2.5" Storage Drive	29
System Cover	30
Removing System Cover	30
CPU & Heatsink	31
Installing CPIT & Heatsink	32

Revision

V1.3, 2024/02

Memory	33
Recommended Memory Population	33
Installing Memory Modules	34
M.2 M Key	35
Installing M.2 M Key	35
Air Duct	36
Installing Air Duct	
Slide Rail	38
Disassembling Slide Rail	38
Installing Inner Rail to System	39
Retracting Outer Rail Bracket	40
Attaching Outer Rail Bracket to Rack Frame	40
Installing System into Rack	41
Detaching Outer Rail Bracket from Rack Frame	42
Netaching Inner Rail from System	4.2

Regulatory Notices

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

https://csr.msi.com/global/index

CE Conformity

Hereby, Micro-Star International CO., LTD declares that this device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.



FCC-A Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Battery Information

Please take special precautions if this product comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children

European Union:



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

BSMI:



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: http://www.dtsc.ca.gov/hazardouswaste/perchlorate/

Copyright and Trademarks Notice







Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://eps.msi.com/support for further guidance.


Safety Information

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- · Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- The openings on the enclosure are for air convection hence protects the equipment from overheating. Do not cover the openings.
- Make sure the voltage of the power source and adjust properly before connecting the equipment to the power inlet.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- Always unplug the power cord before inserting any add-on card or module.
- All cautions and warnings on the equipment should be noted.
- Never pour any liquid into the opening that could damage or cause electrical shock.
- If any of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or you can not get it work according to User's
 - The equipment has dropped and damaged.
 - The equipment has obvious sign of breakage.
- . Do not leave this equipment in an environment unconditioned, storage temperature above 60°C (140°F), it may damage the equipment.


System Specifications

Model	S1102-01
Form Factor	1U
Dimensions	1.71"H (43.5mm) x 17.26"W (438.5mm) x 21.56"D (547.6mm)
Processor	 1 x AMD® Ryzen™ 7000 series Processors, TDP 105W Processor socket AM5
Chipset	AMD B-class Chipset
Memory	4 x DIMM slots Supports DDR5, up to 5200MT/s (2DPC) Supports ECC/ non-ECC UDIMM, up to 1286B
Network	 2 x 10GbE RJ45 ports Intel® Ethernet controller X710-AT2 JLAN1 support shared NIC
Drive Bays	 4 x 2.5"/3.5" SATA hot-swap drive bays (front side) 2 x 2.5" SATA drive bays (internal)
Internal Storage	 4 x SATA 3.0 ports [SATA1-4, w/ 1 x VCC] 2 x SATA 2.0 ports [SATA3_1] 2 x M.2 M-Key [PCIe 4.0 x4, 22110/ 2280] M2_1*: Choose either M2_1 or PCIE_2 for the desired function. M2_2: Supports PCIe 4.0 x4 * The PCIE_2 and M2_1 slots cannot operate simultaneously. You can use the JSEL_M1 jumper
Expansion Slots	to select which one to enable. • 1x PCIe slot - PCIE_1*: PCIe 4.0 x16 signal with riser kit, FHHL [111.28mm x 167.65mm] * The PCIE_1 expansion slot supports PCIe 5.0 x16 signal without a riser kit.
Security	TPM 2.0 Case intrusion switch
Server Management	 Aspeed AST2600 IPMI 2.0 with iKVM 1 x GbE RJ45 port (for Mgmt.) Chipset: Realtek® RTL8211FD-CG PHY
Cooling	 1 x Passive CPU heatsink @105W (with air duct) 4 x 40mm x 28mm PWM Hot-swap fans
Environmental	 Operating Temperature: 0°C ~ 40°C Non-operating Temperature: -20°C ~ 70°C Operating Humidity: 0% ~ 85% (non-condensing)
Accessory	1 x Slide Rail Kit (optional)
Power Supply	ATX 450W hot-plug Redundant PSU
Certifications	CE, FCC (Class A)

System Overview

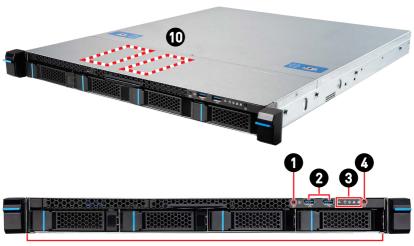

4 x 2.5/ 3.5" SATA Hot-Swap Drive Bays

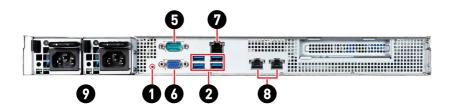


	UID Button								
0	The UID (Unit Identification) button help users identify and locate a system, especially in high-density rack environments.								
	USB 3.2 Gen 1 Port								
2	This connector is provided fo	r USB peripher	al devices. (S	peed up to 5 Gbps)					
	⚠ System Status LED								
	HDD Activity LED								
3	Power LED								
	器 LAN Activity LED								
4	() System Power Button/ L	_ED							
	COM Port								
6	A COM port, also called a serial port or DB9 connector, is a communication interface for transferring data between a computer and external devices such as barcode scanners, printers, and credit card machines. It's commonly used for initial system configuration and diagnostics on server boards and for connecting legacy devices that lack modern interfaces. Users can connect a specially configured serial cable to establish a serial connection.								
	VGA Port								
6	The DB15-pin female connec	tor is provided	for monitors.						
	GbE RJ45 Port (for Mgmt.)								
	The standard RJ45 LAN jack is provided for connection to the Local Area Network (LAN). You can connect a network cable to it.								
		LED	Status	Description					
0		1 . 1 / A	Off	No link					
	LINK/ACT — SPEED	Link/ Activity LED	Green	Linked					
	LED		Blinking	Data activity					
			Off	10 Mbps					
		Speed LED	Orange	100 Mbps					
			Green	1 Gbps					


Continued on next column

10 GbE RJ45 Port The standard RJ45 LAN jack is provided for connection to the Local Area Network (LAN). You can connect a network cable to it. LED Status Description 8 O Off No link LINK/ACT-SPEED Link/ Activity Green Linked LED LED LED Blinking Data activity Off 10 Mbps JLAN1 (Left) JLAN2 (Right) Speed LED Orange 1 Gbps 10 Gbps Green Ω **Power Supply Unit** 1 2.5" SATA Internal Drive Bay

Motherboard Block Diagram

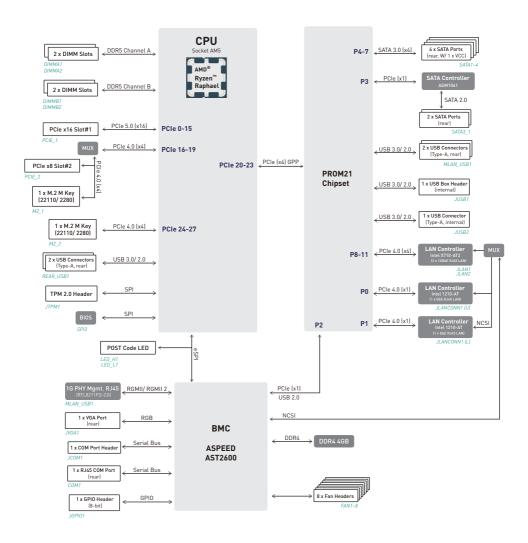


System LED Indicators

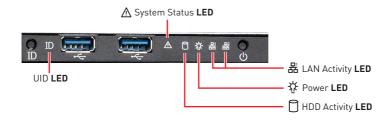

LED	LED State	Description			
	Blue	System power is on			
		System power is on ACPI S0 state			
☆ Power LED	Blinking	System is sleeping			
	Off	System power is off			
	0011	System power is on ACPI S4, S5 state			
UID LED	Blue	Identify active via command or button			
OID LED	○ Off	No identification			
A C	Red	System has failed			
⚠ System Status LED	Off	System power is not present			
	Green	LAN link is established			
묆 LAN Activity LED	■ Blinking	LAN Activity is occurring			
	O Off	LAN link is not established			
	Yellow	HDD present, no activity			
HDD Activity LED	Blinking	HDD accessing			
	Off	No HDD activity			

Motherboard Overview

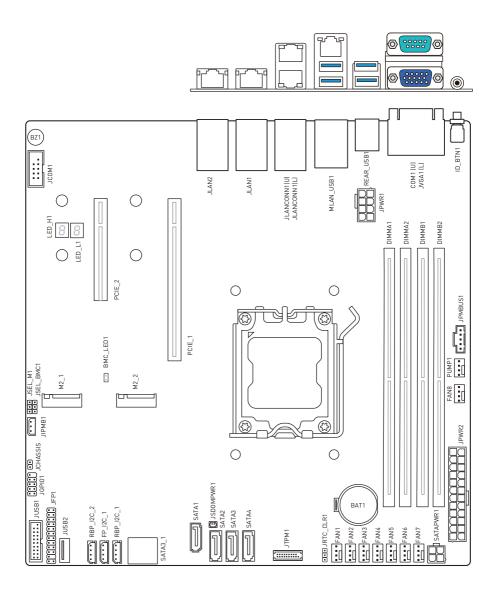

Motherboard Connectors


Storage Connectors


SATA1~4: SATA 3.0 6Gb/s Ports

These connectors are SATA 6Gb/s interface ports, it can connect to SATA devices.

SATA3_1: SATA 2.0 3Gb/s Ports

These connectors are SATA 3Gb/s interface ports, it can connect to SATA devices.

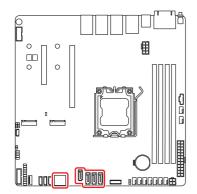

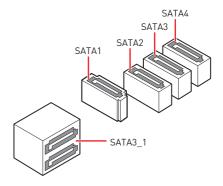





Important

- Please do not fold the SATA cable at a 90-degree angle. Data loss may result during transmission otherwise.
- SATA cables have identical plugs on either sides of the cable. However, it is recommended that the flat connector be connected to the motherboard for space saving purposes.

M2_1~2: M.2 Slots (M Key, PCIe 4.0, 22110/ 2280)


The M.2 slot supports solid-state drive (SSD). For Installation procedure, please refer to "System Setup > M.2 M Key".

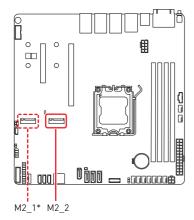

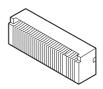

*M2_1: The M2_1 and PCIE_2 slots cannot operate simultaneously. You can use the <u>JSEL_M1 jumper</u> to select which one to enable.

Expansion Slots

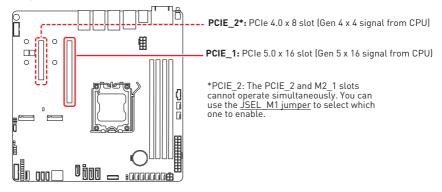


PCIE_1~2: PCIe Expansion Slots

The PCI Express(Peripheral Component Interconnect Express) slots support PCIe interface expansion cards.



When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

Power Connectors

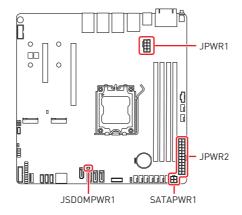


SATAPWR1: SATA Power Connector

This connector is used to provide power to SATA devices.

	4	1	GND	2	GND
SATAPWR1	2	3	P12V	4	P5V

JPWR1: 12V Power Connector

This connector allows you to connect an ATX power supply.

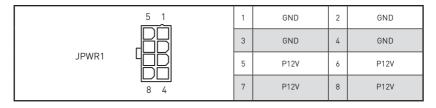

JPWR2: Main Power Connector

This connector allows you to connect an ATX power supply.

		1	+3.3V	2	+3.3V		
			12	3	GND	4	+5V
	12	5		GND	6	+5V	
		7	GND	8	PWR OK		
		9	5VSB	10	+12V		
JPWR2		11	+12V	12	+3.3V		
				13	+3.3V	14	-12V
		15	GND	16	PS-0N#		
		17	GND	18	GND		
1 13	19	GND	20	Res			
		21	+5V	22	+5V		
		23	+5V	24	GND		

JSD0MPWR1: SATA D0M Power Connector

This connector is used to provide power to SATA DOM devices.

JSDOMPWR1 2	1	GND	2	P5V
-------------	---	-----	---	-----




Important

Make sure that all power connectors are securely connected to the power supply to ensure stable operation of the motherboard.


Cooling Connectors

FAN1~8, PUMP1: Fan Power Connectors

The fan power connector supports system cooling fans with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND.

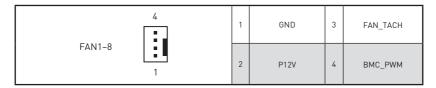



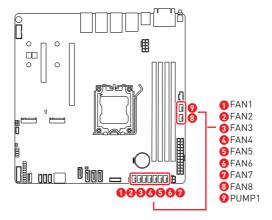


Other Connectors

JFP1: Front Panel Connector

The front panel connector is provided for electrical connection to the front panel switches and LEDs.


		1	PWR_LED+	2	FP_PWR
		3	N/A	4	SYS_ID_LED+
		5	PWR_LED-	6	SYS_ID_LED-
	24 23	7	HDD_ACT_LED+	8	SYS_FAULT_LED1-
		9	HDD_ACT_LED-	10	SYS_FAULT_LED2-
JFP1		11	PWR_BTN	12	NIC#1_ACT_LED+
		13	PWR_BTN_GND	14	NIC#1_ACT_LED-
		15	RST_BTN	16	SMB_SDA
	2 • 1	17	RST_BTN_GND	18	SMB_SCL
		19	SYS_ID_BTN	20	CHASSIS_INTRUSION
		21	WIRE_TEMP_SENSOR	22	NIC#2_ACT_LED+
		23	NMI_BTN	24	NIC#2_ACT_LED-

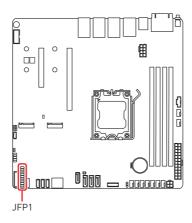

JTPM1: SPI TPM Module Box Header

This connector connects to a TPM (Trusted Platform Module) (optional). Please refer to the TPM security platform manual for more details.

	1	N/A	2	SPI_LOC_ROM_CS_N
	3	CPU_RSMEST_L	4	N/A
	5	GND	6	PVDD_P1V8_AUX
JTPM1	7	SPI_LOC_ROM_CLK	8	SPI_CPU0_WP_L
	9	SPI_CPU0_HOLD_L	10	SPI_LOC_ROM_MISO
19 3	11	N/A	12	SPI_LOC_ROM_MOSI
	13	CPU_SPI_TPM_CS_N	14	GND
	15	PVDD_P1V8_AUX	16	GND
	17	CPU_TPM_SPI_IRQ_N	18	PVDD_P1V8_AUX
	19	TPM_RESET_N	20	PVDD_P1V8_AUX

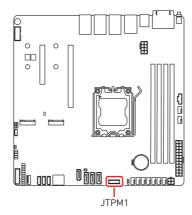


JGPI01: GPI0 Header


This connector is provided for the General-Purpose Input/Output (GPIO) peripheral module.

9	1	USER_GPI00	2	USER_GPI01
	3	USER_GPI02	4	USER_GPI03
JGPI01 -	5	USER_GPI04	6	USER_GPI05
1 2	7	USER_GPI06	8	USER_GPI07
	9	GND	10	No pin

JPMBUS1: PMBUS Box Header


Power Management Bus (PMBus) is a variant of the System Management Bus (SMBus) which is targeted at digital management of power supplies.

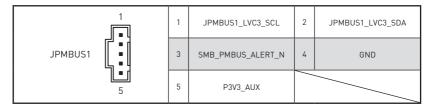

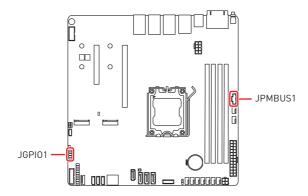


JCHASSIS: Chassis Intrusion Header


This connector connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.

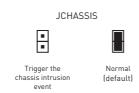

JIPMB1: IPMB Box Header

Intelligent Platform Management Bus (IPMB) box header is used to connect various management components, such as Baseboard Management Controller (BMC).

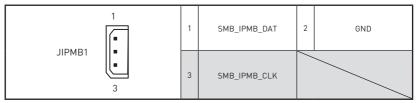

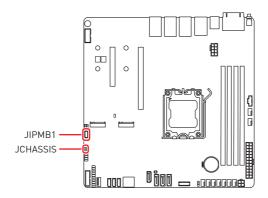

JUSB1: USB 3.2 Port Box Header


This port is backward-compatible with USB 2.0 devices and supports data transfer rate up to 5 Gbps.

		1	USB_VCC1	2	USB3_ESD_RX4N									
	20 1										3	USB3_ESD_RX4P	4	GND
			5	USB3_ESD_TX4N	6	USB3_ESD_RX4P								
		7	GND	8	USB3_ESD_DN8									
JUSB1				9	USB3_ESD_DP8	10	NC							
3002.				11	USB2_ESD_DP9	12	USB2_ESD_DN9							
		13	GND	14	USB3_ESD_TX5P									
		15	USB3_ESD_TX5N	16	GND									
			17	USB3_ESD_RX5P	18	USB3_ESD_RX5N								
		19	USB_VCC2	20	No Pin									

JUSB2: USB 2.0 Type-A Connector

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices. It supports up to 480Mbps data transfer rate.



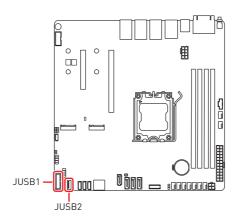

FP_I2C_1, RBP_I2C_1~2: I2C Box Headers


12C connectors are used to connect to the System Management Bus (SMBus). FBP_ I2C_1 is for front HDD backplane, and RBP_I2C_1~2 are for rear HDD backplanes.

FP_I2C_1	1	NC	2	I2C_CLK
RBP_I2C_2	2	I2C_DAT	4	GND

JCOM1: COM Port Box Header

This connector is a 16550A high speed communications port that sends/receives 16 bytes FIFOs. You can attach a serial device to it.


10 9 JCOM1 2 1	1	NDCD#_B	2	NSIN_B
	3	NSOUT_B	4	NDTR_B
	5	GND	6	NDSR#_B
	7	NRTS_B	8	NCTS#_B
	9	NRTS#_B	10	No pin

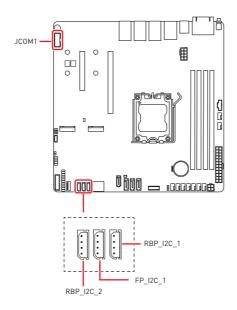


Motherboard Jumpers



Avoid adjusting jumpers when the system is on; it will damage the motherboard.

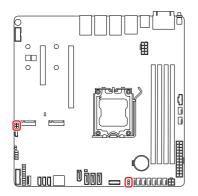

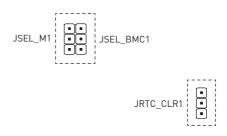


Jumper Name	Default Setting	Description
JSEL_M1	1	1-2: M.2_1 enabled, PCIE_2 disabled (Default) 2-3: PCIE_2 enabled, M.2_1 disabled
JSEL_BMC1	1	1-2: Using CPU (Default) 2-3: Using BMC
JRTC_CLR1	1	1-2: Normal (Default) 2-3: Clear CMOS

Motherboard LEDs

BMC LED1: BMC Heartbeat LED


This LED indicates the BMC (Baseboard Management Controller) status.

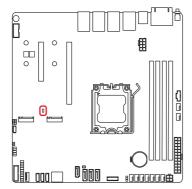


Status	Description			
Off	BMC is not activated			
Blinking	BMC is functioning normally			

LED_H1, LED_L1: Port 80 Debug LEDs

The Port 80 Debug LEDs display progress and error codes during and after POST (Power-On Self Test).

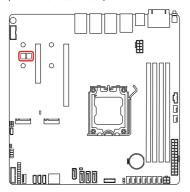

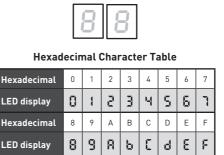

Getting Started



- All information is subject to change without prior notice.
- The system photos are provided for **demonstration purposes only**. The appearance and internal view of your system may vary depending on the model you purchased.

Necessary Tools



Safety Precautions

The following precautions should be observed while handling the system:

- Place the system on a flat and stable surface.
- Do not place the system in environments subject to mist, smoke, vibration, excessive dust, salty or greasy air, or other corrosive gases and fumes.
- Do not drop or jolt the system.
- Do not use a power adapter other than the one enclosed with the system.
- Disconnect the power cord before performing any installation procedures on the system.
- Do not perform any maintenance with wet hands.
- Prevent foreign substances, such as water, other liquids or chemicals, from entering the system while performing installation procedures.
- Use a grounded wrist strap before handling system components such as CPU, Memory, HDD, expansion cards, etc.
- Place system components on a grounded anti-static pad or on the bed that came with the components whenever the components are separated from the system.

System Setup




Before removing or installing any components, make sure the system is not turned on or connected to the power.

Drive Bay

Installing 3.5"/2.5" Storage Drive

- 1. Engage two embossed pins on the carrier into the side dimples on the 3.5" drive.
- For 2.5" drive, align the drive with the screw holes on the tray and secure it with screws*.
- 2. Carefully push down on the other side of the 3.5" drive until another two embossed pins lock into place.
- 3. With the lever open, insert the drive carrier horizontally into the drive bay until the locking lever engages.
- 4. Push the lever in to lock the carrier in place.

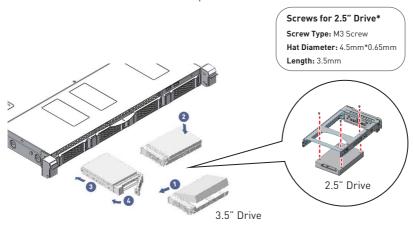


^{*}Screws for 2.5" drive are not included in the package.

System Cover


Removing System Cover

- 1. Loosen and remove the **screws** securing the system on both sides and the top.
- 2. Press down on the release latches on both sides of the rear top cover, then slide it towards the back of the system to remove it.
- 3. Slide the front top cover towards the back of the system to remove it.

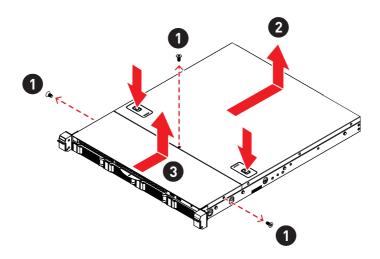

CPU & Heatsink

Use appropriate ground straps, gloves and ESD mats to protect yourself from electrostatic discharge (ESD) while installing the processor.

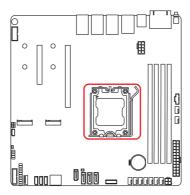




Important

- Overheating will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.
- While replacing the CPU, always turn off the power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.
- Confirm if your Heatsink is firmly installed before turning on your system.
- Do not touch the CPU socket pins to avoid damage.
- Whenever CPU is not installed, always protect your CPU socket pins with the plastic cap covered.
- Please refer to the documentation in the Heatsink package for more details about the Heatsink installation.
- Read the CPU status in BIOS.


Installing CPU & Heatsink




Images are for illustration purposes only; actual parts may vary.

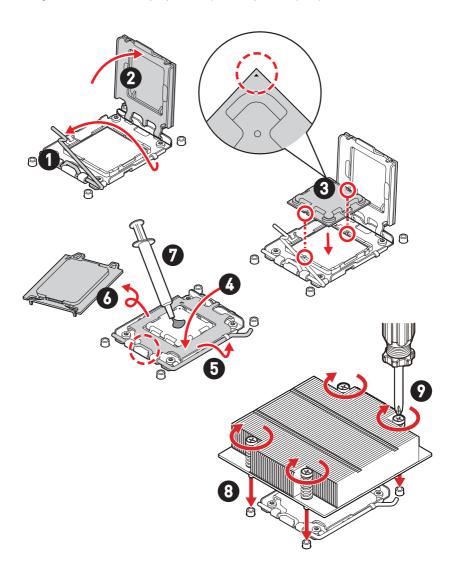

Memory

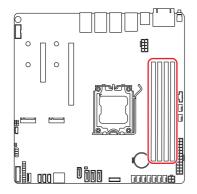

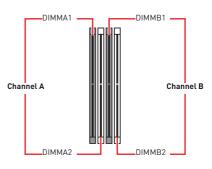

Recommended Memory Population

Quantity o	f DIMMs	1	2		3		4	
Channel A	DIMMA1				٧		٧	٧
Channet A	DIMMA2	٧	٧		٧	V	٧	٧
Channal B	DIMMB1			٧		V		٧
Channel B	DIMMB2		٧	٧		V	٧	٧


**"V" indicates a populated DIMM slot. **



- Only support **UDIMM**.
- There should be at least 1 DDR5 DIMM populated.
- Paired memory installation for Max performance.
- If only 1 DIMM is populated in a channel, then populate it in the DIMMA2 slot.
- Populate the same DIMM type in each channel, specifically: 1. Use the same DIMM size; 2. Use the same number of ranks per DIMM.
- We don't suggest other memory installation.

Installing Memory Modules

- 1. Open the side clips to unlock the DIMM slot.
- 2. Insert the DIMM vertically into the slot, ensuring that the off-center notch at the bottom aligns with the slot.
- 3. Push the DIMM firmly into the slot until it clicks and the side clips automatically close.
- 4. Verify that the side clips have securely locked the DIMM in place.

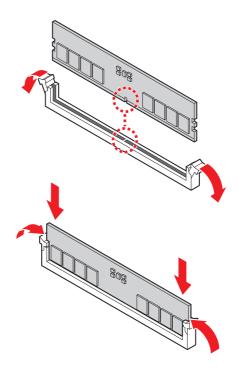



You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.

M.2 M Key

Installing M.2 M Key




Video Demonstration

Watch the video to learn how to Install M.2 SSD.




- 1. Loosen the M.2 riser screw from the motherboard.
- 2. Move and fasten the M.2 riser screw to the appropriate location according your M.2 SSD size.
- 3. Insert your M.2 SSD into the M.2 slot at a 30-degree angle.
- 4. Secure the M.2 SSD in place with the supplied M.2 screw.

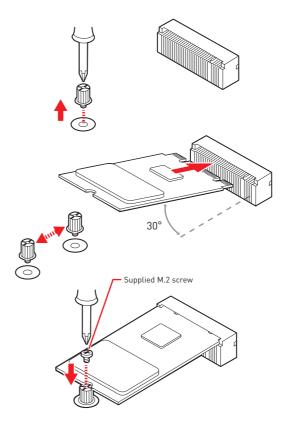


Air Duct

Installing Air Duct


1. Remove the riser card assembly.

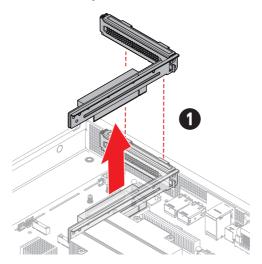

2. Flip the air duct over and remove the **polystyrene cube**.

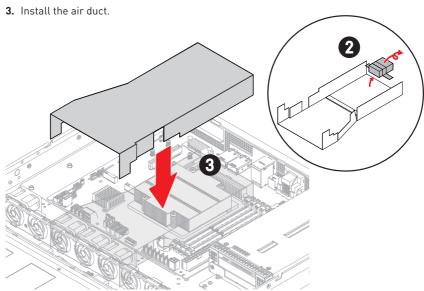


4. Reinstall the riser card assembly back into the chassis.

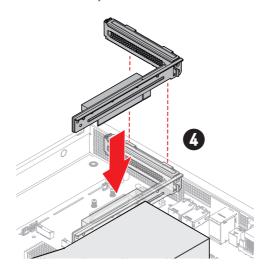

Slide Rail




The pre-installed screws on the outer rail bracket are intended only for square rack holes. For round holes, please switch to the "7.1 round hole screw".

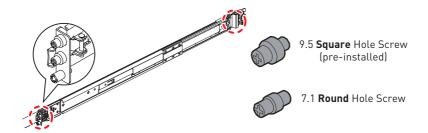


Disassembling Slide Rail

Slide the **release tab** forward to separate the inner rail from the bracket.

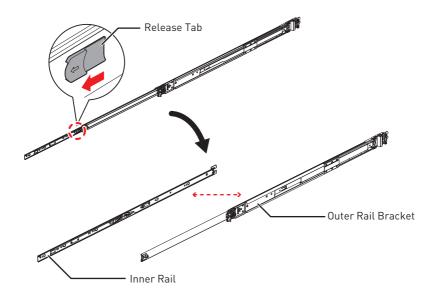


Installing Inner Rail to System

- 1. Align the standoffs on the side of the system with the hole on the inner rail, then pull the inner rail backwards till it locks into place.
- 2. Tighten the screw to secure the inner rail.
- 3. Repeat the same procedure to install the inner rail on the other side of the system.

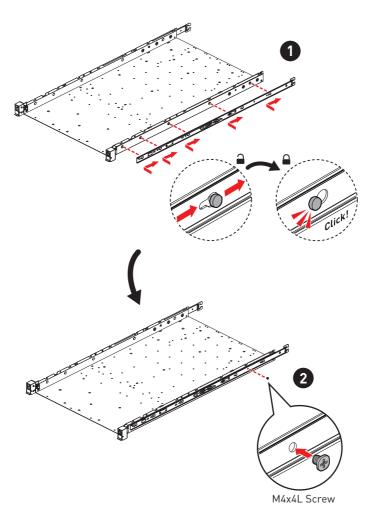


Retracting Outer Rail Bracket

Pull the latch downward to slide the middle rail back to the outer rail bracket.

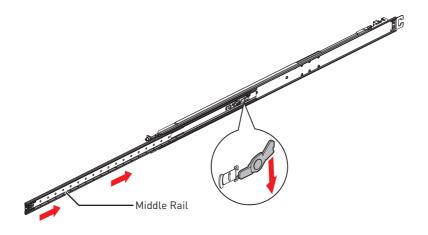

Attaching Outer Rail Bracket to Rack Frame

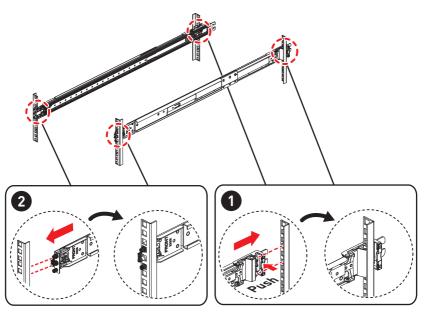


Installing System into Rack

- 1. Pull out the middle rails till it fully extended.
- 2. Engage the inner rails of the system to the middle rails, then push the system forward until it stops.
- 3. Push the system into the rack by sliding the two-way release tabs forward or backward.
- **4.** Tighten the screws to secure the system.




Important


Ensure the ball bearing retainers are locked forward on each middle rail.

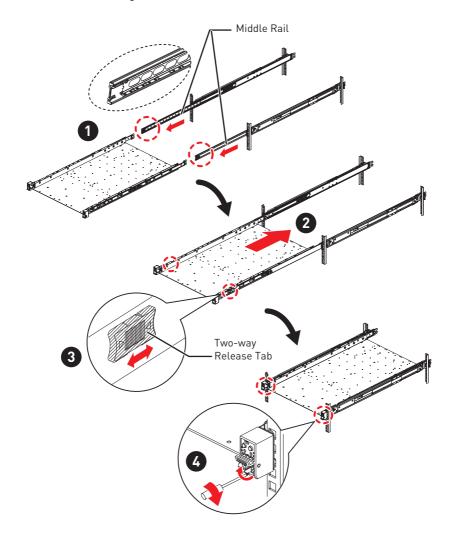

Detaching Outer Rail Bracket from Rack Frame

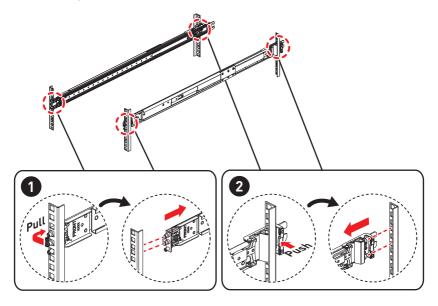

Detaching Inner Rail from System

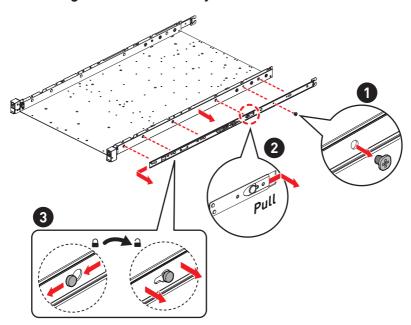



MSI.COM



EPS.MSI.COM