


7

1 turn  $\approx$  1 lbs  $\approx$  0.4kg


**NOTE:** Turn clockwise to reduce tension for lighter monitors and counter-clockwise to increase tension for heavier monitors.

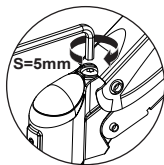

S=5mm


B

VESA Swivel Adjustment

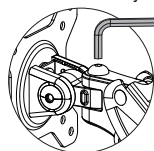


S=5mm

VESA Tilt Adjustment

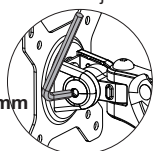

S=5mm

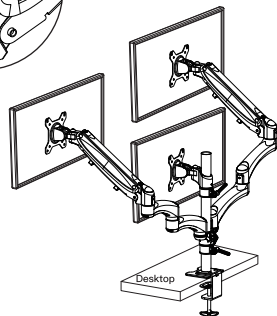

Desktop




Tighten the bolt with the Allen Key to make the tilt and swivel adjustment.

Use a hex wrench to adjust the height tension of the gas spring arm, to keep different weight of monitors still at any position.

8



C

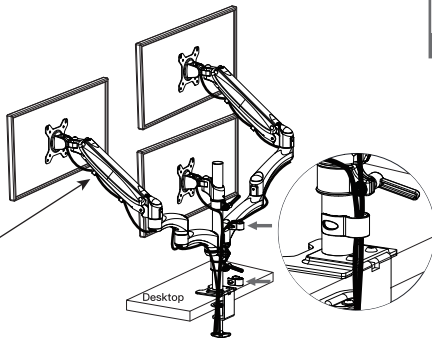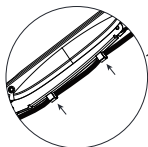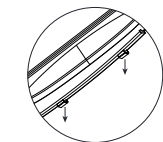

Desktop

Organize cables with cable management clips along the pole.

**Rosewill®**

Technical Support Information [techsupport@rosewill.com](mailto:techsupport@rosewill.com) 1-800-575-9885  
Please register your product at [www.rosewill.com](http://www.rosewill.com) for complete warranty information and support for your product.

 


RMS-E53\_A

**Rosewill®**

RMS-E53


Thank you for purchasing a Rosewill Monitor Desk Mount.  
Please read the instruction manual before use and retain for future reference.



15° - 32°



 0-8kgs/0-17.6lbs




75x75, 100x100



+90°/-85°



 180°








360°

**Installation**



**INSTRUCTIONS**

## WARNING STATEMENTS


### Warning

-  Prior to the installation of this product, the installation instruction must be read and completely understood. Failure to do so may result in personal injury, property damage or voiding of factory warranty.
-  Do not install on a structure that is prone to vibration, movement or chance of impact. Reinforce the structure as required before installation. Don't use the product on particle board.
-  The desk clamp can support a maximum thickness of 8 cm. Confirm the desk edge before installation.
-  Pay attention to the weight capacity of the mount. Exceeding the limitation can result in function unworkable or even serious personal injury and property damage.
-  Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.


## PRODUCT LINE GRAPH

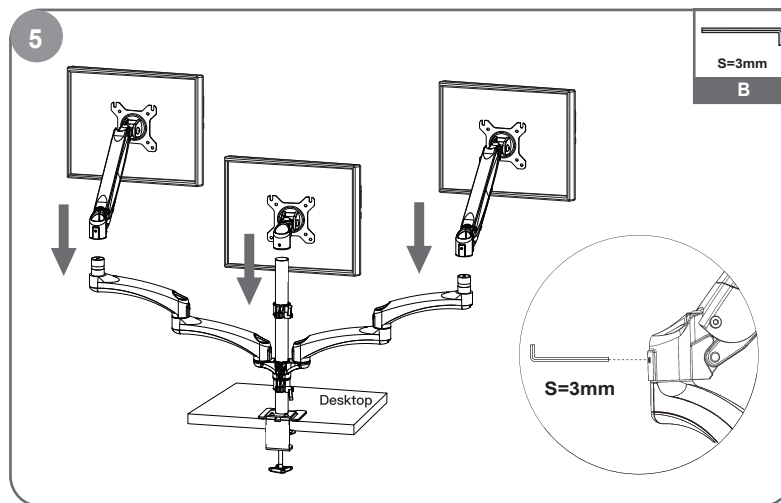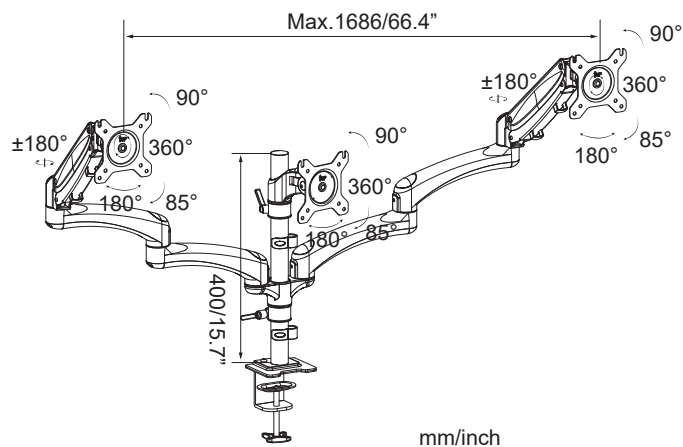


Lift the spring arm along with the monitor and put it on the supporting part.

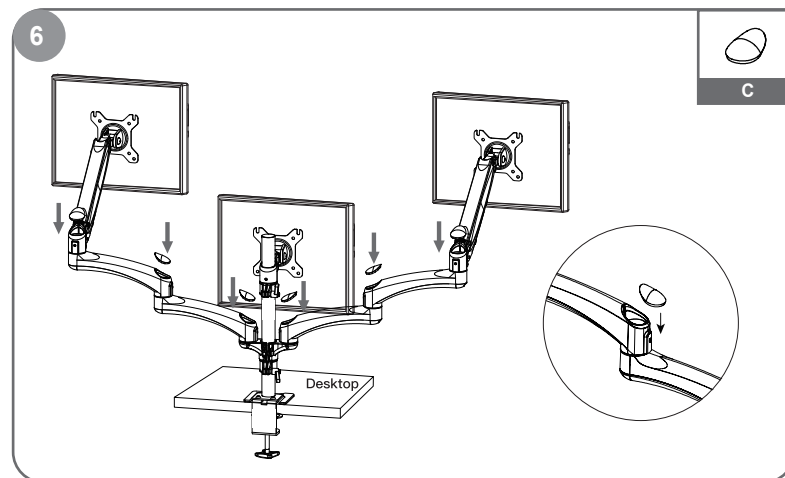

Insert plastic cover into monitor arms and extensions.

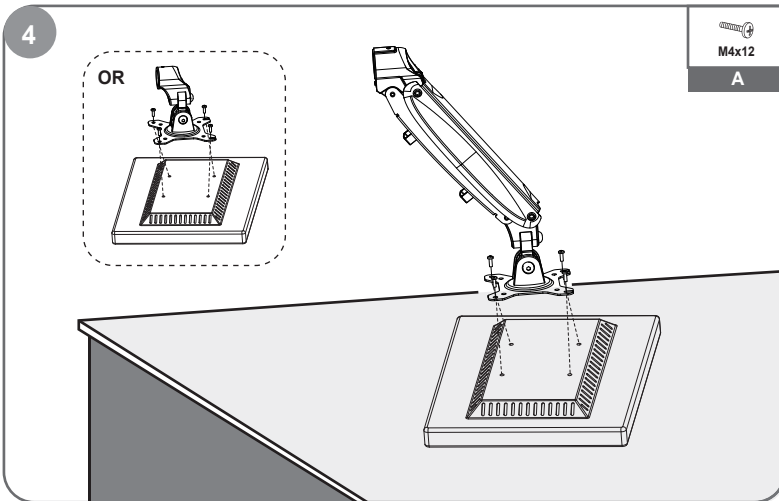

Flush surface installation: Install 4 screws through faceplate to monitor via mounting holes.

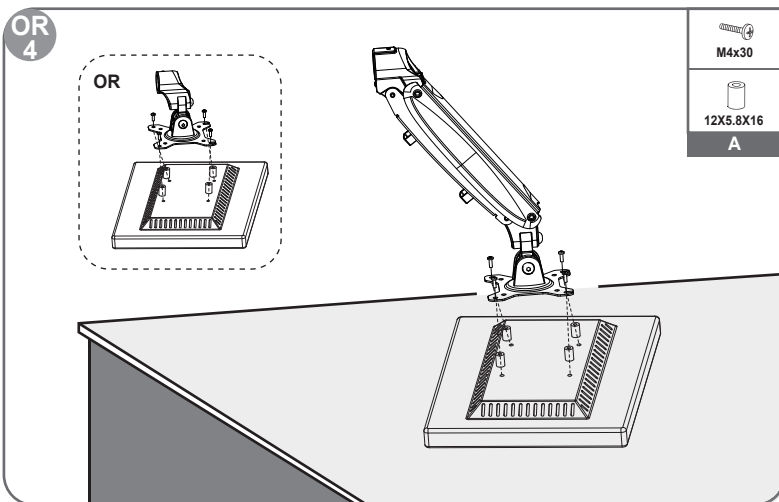





 




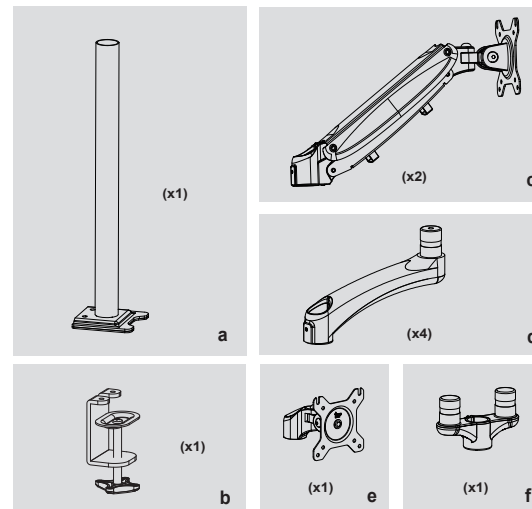

Recessed surface installation: Put 4 spacers between faceplate and monitor. Install 4 screws through faceplate, spacers to monitor via mounting holes.

## TOOLS REQUIRED NOT INCLUDED




## PARTS INCLUDED




A		
	M4x12 (x12)	M4x30 (x12)
B		
	12X5.8X16 (x12)	
C		
	M6x8 (x2)	
D		
	S=3mm (x1)	S=4mm (x1)
E		
	S=5mm (x1)	
F		
	(x2)	(x6)
G		
	(x2)	


## 1 Clamp Installation

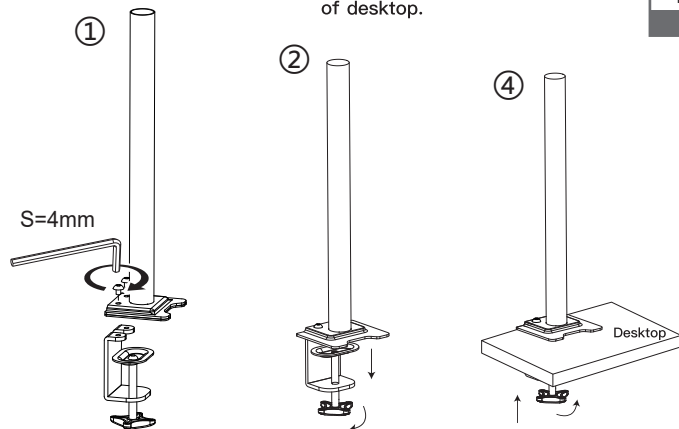

## OR Grommet Installation

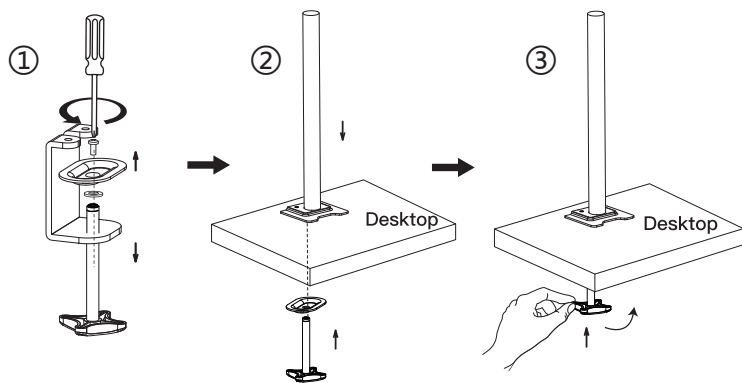


2

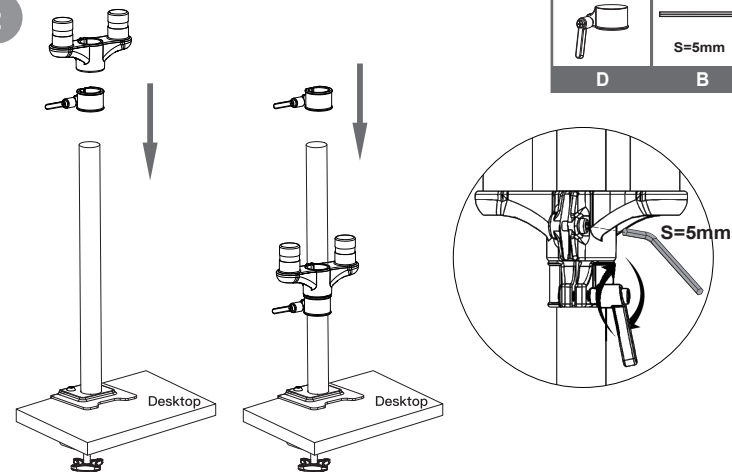

Adjust locating ring at proper height and screw up tight to hold the mount.  
Adjust aluminum support part above the locating ring and use a hex key to fix it.

3

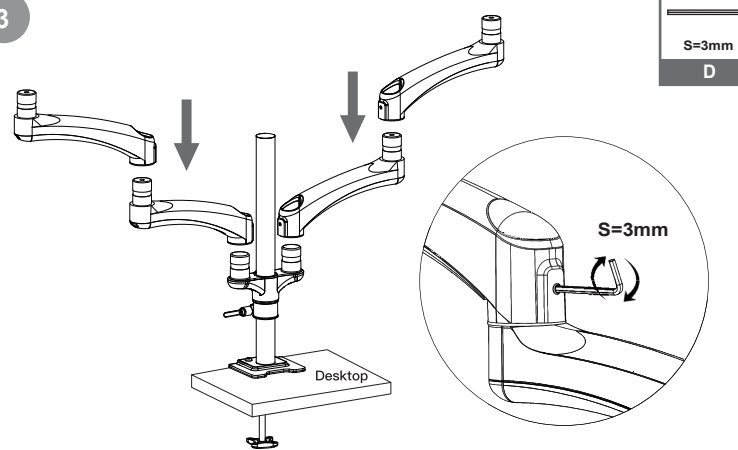

Insert extension arms to the supporting part.