#### MEK5080A9700XBT5, MEK5080A9700XBLT5 For technical support 1-877-599-6822 **ZOTA**<sup>C</sup>GAMING PERIPHERAL SETUP GUIDE

1-877-599-6822 9:00am – 6:00pm PST Mon – Fri.



Congratulations on your new PC! Accessing the I/O panel and connecting your peripherals to the MEK5080A9700XBT5/BLT5 is easy! Follow along this guide to learn how:







## STEP 3

Unscrew the two thumb screws and lift the top fan bracket latch to access the I/O ports. FRONT



BACK Disconnect any fan cables as needed to fully remove the top fan bracket.

## **STEP 2**


Remove the back panel by pulling the top notch for easier access to the I/O ports.




# STEP 4

Pass the cables through the designated side cutouts.



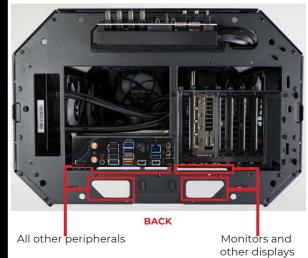

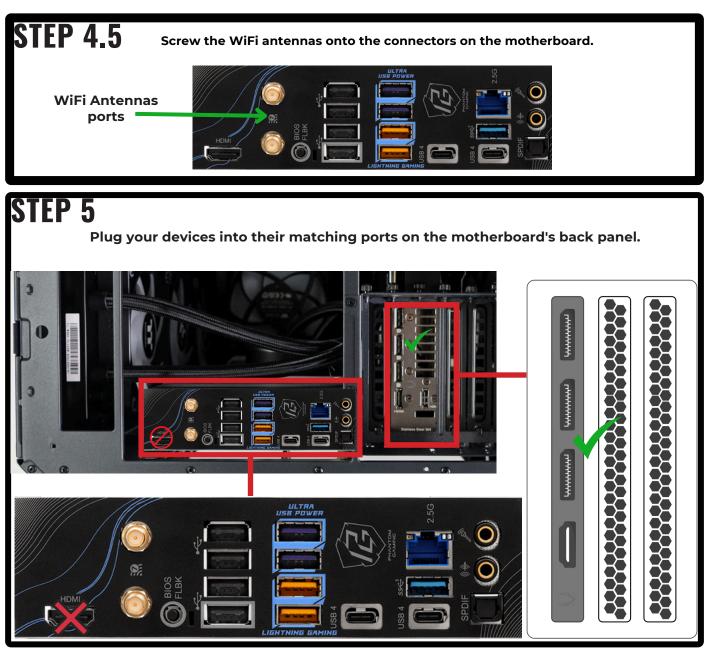

\*\* Images for reference only. Port layouts may vary based on the included components.

For monitors and displays, connect directly to the appropriate port(s) on the graphics card/GPU. Do NOT plug your monitor into the graphics port(s) on your motherboard, as it is disabled when a graphics card is installed in your system.

#### **EXAMPLE OF FINAL CABLE WIRING ROUTE**





