

OPEN Industry Standard, Flexible Architecture

GREEN Less Heat, Less Power Consumption

STABLE Robust Design, Quality Parts

Stable and
Reliable Solution

Server/Workstation
Motherboard

EC262D4U2-2Q/E810
EC262D4U2-2L2Q/E810
EC266D4U2-2L2Q/E810

User Manual

English



Version 1.03

Published Jan. 2025

Copyright©2025 ASRock Rack INC. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



WARNING

THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed, a button battery can cause serious injury or death.
Please keep batteries out of sight or reach of children.

ASRock Rack's Website: www.ASRockRack.com

INTEL END USER SOFTWARE LICENSE AGREEMENT
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.

LICENSE. Licensee has a license under Intel's copyrights to reproduce Intel's Software only in its unmodified and binary form, (with the accompanying documentation, the "Software") for Licensee's personal use only, and not commercial use, in connection with Intel-based products for which the Software has been provided, subject to the following conditions:

- (a) Licensee may not disclose, distribute or transfer any part of the Software, and You agree to prevent unauthorized copying of the Software.
- (b) Licensee may not reverse engineer, decompile, or disassemble the Software.
- (c) Licensee may not sublicense the Software.
- (d) The Software may contain the software and other intellectual property of third party suppliers, some of which may be identified in, and licensed in accordance with, an enclosed license.txt file or other text or file.
- (e) Intel has no obligation to provide any support, technical assistance or updates for the Software.

OWNERSHIP OF SOFTWARE AND COPYRIGHTS. Title to all copies of the Software remains with Intel or its licensors or suppliers. The Software is copyrighted and protected by the laws of the United States and other countries, and international treaty provisions. Licensee may not remove any copyright notices from the Software. Except as otherwise expressly provided above, Intel grants no express or implied right under Intel patents, copyrights, trademarks, or other intellectual property rights. Transfer of the license terminates Licensee's right to use the Software.

DISCLAIMER OF WARRANTY. The Software is provided "AS IS" without warranty of any kind, EITHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

LIMITATION OF LIABILITY. NEITHER INTEL NOR ITS LICENSORS OR SUPPLIERS WILL BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE, INTERRUPTION OF BUSINESS, OR INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHETHER UNDER THIS AGREEMENT OR OTHERWISE, EVEN IF INTEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

LICENSE TO USE COMMENTS AND SUGGESTIONS. This Agreement does NOT obligate Licensee to provide Intel with comments or suggestions regarding the Software. However, if Licensee provides Intel with comments or suggestions for the modification, correction, improvement or enhancement of (a) the Software or (b) Intel products or processes that work with the Software, Licensee grants to Intel a non-exclusive, worldwide, perpetual, irrevocable, transferable, royalty-free license, with the right to sublicense, under Licensee's intellectual property rights, to incorporate or otherwise utilize those comments and suggestions.

TERMINATION OF THIS LICENSE. Intel or the sublicensor may terminate this license at any time if Licensee is in breach of any of its terms or conditions. Upon termination, Licensee will immediately destroy or return to Intel all copies of the Software.

THIRD PARTY BENEFICIARY. Intel is an intended beneficiary of the End User License Agreement and has the right to enforce all of its terms.

U.S. GOVERNMENT RESTRICTED RIGHTS. The Software is a commercial item (as defined in 48 C.F.R. 2.101) consisting of commercial computer software and commercial computer software documentation (as those terms are used in 48 C.F.R. 12.212), consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4. You will not provide the Software to the U.S. Government. Contractor or Manufacturer is Intel Corporation, 2200 Mission College Blvd., Santa Clara, CA 95054.

EXPORT LAWS. Licensee agrees that neither Licensee nor Licensee's subsidiaries will export/re-export the Software, directly or indirectly, to any country for which the U.S. Department of Commerce or any other agency or department of the U.S. Government or the foreign government from where it is shipping requires an export license, or other governmental approval, without first obtaining any such required license or approval. In the event the Software is exported from the U.S.A. or re-exported from a foreign destination by Licensee, Licensee will ensure that the distribution and export/re-export or import of the Software complies with all laws, regulations, orders, or other restrictions of the U.S. Export Administration Regulations and the appropriate foreign government.

APPLICABLE LAWS. This Agreement and any dispute arising out of or relating to it will be governed by the laws of the U.S.A. and Delaware, without regard to conflict of laws principles. The Parties to this Agreement exclude the application of the United Nations Convention on Contracts for the International Sale of Goods (1980). The state and federal courts sitting in Delaware, U.S.A. will have exclusive jurisdiction over any dispute arising out of or relating to this Agreement. The Parties consent to personal jurisdiction and venue in those courts. A Party that obtains a judgment against the other Party in the courts identified in this section may enforce that judgment in any court that has jurisdiction over the Parties.

Licensee's specific rights may vary from country to country.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

"Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage caused by our goods. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASRock Rack Tel : +886-2-55599600 ext.123 (Standard International call charges apply)



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



ASRock Rack INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related UKCA Directives. Full text of UKCA declaration of conformity is available at: <http://www.asrockrack.com>



ASRock Rack INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related Directives. Full text of EU declaration of conformity is available at: <http://www.asrockrack.com>

ASRock Rack follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASRock Rack product is in line with global environmental regulations. In addition, ASRock Rack disclose the relevant information based on regulation requirements.

Please refer to <https://www.asrockrack.com/general/about.asp?cat=Responsibility> for information disclosure based on regulation requirements ASRock Rack is complied with:



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

Contents

Chapter 1 Introduction	1
1.1 Package Contents	1
1.2 Specifications	2
1.3 Unique Features	6
1.4 Motherboard Layout	7
1.5 Onboard LED Indicators	10
1.6 I/O Panel	11
1.7 Block Diagram	13
Chapter 2 Installation	14
2.1 Screw Holes	14
2.2 Pre-installation Precautions	14
2.3 Installing the CPU	15
2.4 Installing the CPU Fan and Heatsink	17
2.5 Installing Memory Modules (DIMM)	18
2.6 Expansion Slots (PCI Express Slots)	20
2.7 Jumper Setup	21
2.8 Onboard Headers and Connectors	22
2.9 Dr. Debug	28
2.10 Unit Identification purpose LED/Switch	34
2.11 Dual LAN and Teaming Operation Guide	35
2.12 M.2 SSD Module Installation Guide	36
Chapter 3 UEFI Setup Utility	38
3.1 Introduction	38

3.1.1	UEFI Menu Bar	38
3.1.2	Navigation Keys	39
3.2	Main Screen	40
3.2.1	Motherboard Information	41
3.2.2	Processor Information	41
3.2.3	Memory Information	42
3.3	Advanced Screen	43
3.3.1	CPU Configuration	44
3.3.2	DRAM Configuration	47
3.3.3	Chipset Configuration	48
3.3.4	Storage Configuration	50
3.3.5	NVME Configuration	51
3.3.6	ACPI Configuration	52
3.3.7	USB Configuration	53
3.3.8	Super IO Configuration	54
3.3.9	Serial Port Console Redirection	55
3.3.10	H/W Monitor	58
3.3.11	Network Stack Configuration	59
3.3.12	Intel SPS Configuration	61
3.3.13	Driver Health	62
3.3.14	Tls Auth Configuration	63
3.3.15	Instant Flash	64
3.4	Server Mgmt	65
3.4.1	BMC Network Configuration	67

3.4.2	DNS Configuration	69
3.4.3	System Event Log	71
3.4.4	BMC Tools	72
3.5	Event Logs	73
3.6	Security Screen	74
3.6.1	Expert Key Management	75
3.7	Boot Screen	79
3.8	Exit Screen	81
Chapter 4 Software Support		82
4.1	Download and Install Operating System	82
4.2	Download and Install Software Drivers	82
4.3	Contact Information	82
Chapter 5 Troubleshooting		83
5.1	Troubleshooting Procedures	83
5.2	Technical Support Procedures	85
5.3	Returning Merchandise for Service	85

Chapter 1 Introduction

Thank you for purchasing ASRock Rack **EC262D4U2-2Q/E810**, **EC262D4U2-2L2Q/E810** or **EC266D4U2-2L2Q/E810** motherboard, a reliable motherboard produced under ASRock Rack's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack's commitment to quality and endurance.

In this manual, chapter 1 and 2 contains introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contains the configuration guide to BIOS setup and information of the Software Support.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock Rack website without further notice. Find the latest memory and CPU support lists on ASRock Rack website as well. ASRock Rack's Website: www.ASRockRack.com

About this motherboard technical support, please visit the website for specific information <http://www.asrockrack.com/support/>

1.1 Package Contents

- ASRock Rack EC262D4U2-2Q/E810, EC262D4U2-2L2Q/E810 or EC266D4U2-2L2Q/E810 motherboard (Micro-ATX Form Factor: 9.6" x 9.6", 24.4cm x 24.4cm)
- Quick installation guide
- 1 x SLIMLINE to 4 SATA cable (60cm)
- 1 x I/O shield
- 2 x screws for M.2 sockets



If any items are missing or damaged, contact the authorized dealer.

1.2 Specifications

EC262D4U2-2Q/E810, EC262D4U2-2L2Q/E810, EC266D4U2-2L2Q/E810	
MB Physical Status	
Form Factor	Micro-ATX
Dimension	9.6" x 9.6" (244mm x 244mm)
Processor System	
CPU	Supports Intel® Xeon® E-2400 series processors
Socket	Single Socket V1 (LGA1700)
Thermal Design Power (TDP)	95W
Chipset	EC262D4U2-2Q/E810, EC262D4U2-2L2Q/E810: Intel® C262 EC266D4U2-2L2Q/E810: Intel® C266
System Memory	
Supported DIMM Quantity	4 DIMM slots (2DPC)
Supported Type	Supports DDR5 288-pin ECC UDIMM
Max. Capacity per DIMM	32GB
Max. Frequency	4400MT/s (2SPC - 1DIMM) / 4000MT/s (2SPC - 2DIMM 1R) / 3600MT/s (2SPC - 2DIMM 2R)
Voltage	1.1V
Note	memory support is to be validated
PCIe Expansion Slots	
SLOT6	PCIe5.0 x16 [CPU]
SLOT4	PCIe4.0 x4 [PCH]
Other PCIe Expansion Connectors	
M.2 Slot	1 M-key (PCIe4.0 x4 or SATA 6Gb/s); support 2230/2242/2260/2280 form factor [PCH] 1 M-key (PCIe4.0 x4)*; support 2280 form factor [PCH]
SlimSAS	EC262D4U2-2Q/E810, EC262D4U2-2L2Q/E810: 1 SlimSAS (PCIe4.0 x4) [CPU] 1 SlimSAS (4 SATA 6Gb/s) [PCH] EC266D4U2-2L2Q/E810: 1 SlimSAS (PCIe4.0 x4) [CPU] 2 SlimSAS (PCIe4.0 x4) [PCH] 1 SlimSAS (PCIe3.0 x4 or 4 SATA 6Gb/s) [PCH]
Note	* M.2 share lanes with 2x 25GbE SFP28, 2x SFP28 supports possible by depopulating M.2 and other BOM change

SATA/SAS Storage	
PCH Built-in Storage	Intel® C262/C266 (8 SATA 6Gb/s; RAID 0/1/5/10): 1 SlimSAS, 1 M.2
Ethernet	
Additional Ethernet Controller	<u>EC262D4U2-2L2Q/E810, EC266D4U2-2L2Q/E810:</u> 2 SFP28 (25GbE) by Intel® E810-XXVAM2* 2 RJ45 (1GbE) by Intel® i210 <u>EC262D4U2-2Q/E810:</u> 2 SFP28 (25GbE) by Intel® E810-XXVAM2*
Note	* M.2 share lanes with 2x 25GbE SFP28, 2x SFP28 supports possible by depopulating M.2 and other BOM change
USB	
Controller/Hub	Intel® C262 / Intel® C266
Connectors/Headers	External: 2 Type-A (USB3.2 Gen1) Internal: 1 header (19-pin, 2 USB3.2 Gen1) 1 vertical Type-A, 1 header (9-pin, 2 USB2.0)
Graphics	
Controller	ASPEED AST2600: 1 DB15 (VGA)
Security	
TPM	1 (13-pin, SPI)
Rear I/O	
UID Button/LED	1 UID button w/ LED
Video Output	1 DB15 (VGA)
Serial Port	1 DB9 (COM)
USB	2 Type A (USB3.2 Gen1)
RJ45	<u>EC262D4U2-2L2Q/E810, EC266D4U2-2L2Q/E810:</u> 2 RJ45 (1GbE), 1 dedicated IPMI <u>EC262D4U2-2Q/E810:</u> 1 dedicated IPMI
SFP+/SFP28/QSFP	2 SFP28 (25GbE)
Hardware Monitor	
Temperature	CPU, MB, Card side, DDR5, PCH, M.2, TR1 Temperature sensing
Fan	Fan Tachometer CPU Quiet Fan (Allow Chassis Fan Speed Auto-Adjust by CPU Temperature) Fan Multi-Speed Control

Voltage	3VSB, 5VSB, CPU_VCORE, VCCIN_AUX, VDD2, 1.05V_PCH, 0V82SB_PCH, DVDD, AVDD, 1V8SB, VCCSA, BAT, 3V, 5V, 12V
Server Management	
BMC Controller	ASPEED AST2600: iKVM, vMedia support
IPMI Dedicated GLAN	1 RJ45 Dedicated IPMI LAN port by Realtek RTL8211F
System BIOS	
Type	AMI 256Mb SPI Flash ROM
Features	Plug and Play, ACPI 6.4 and above compliance wake up events, SMBIOS 2.8 and above, ASRock Rack Instant Flash
Internal Connectors/Headers	
PSU Connector	1 (24-pin, ATX main power), 2 (8-pin, ATX 12V)
Auxiliary Panel Header	1 (18-pin): chassis intrusion, system fault LED, LAN1/LAN2 activity LED, locate, SMBus
System Panel Header	1 (9-pin): power switch, reset switch, system power LED, HDD activity LED
NMI Button	1
LAN3/LAN4 LED Header	<u>EC262D4U2-2L2Q/E810, EC266D4U2-2L2Q/E810:</u> 1 <u>EC262D4U2-2Q/E810:</u> N/A
VGA Header	1
Speaker Header	1 (4-pin)
Buzzer	1
Fan Header	7 (4-pin)
Thermal Sensor Header	1
TPM Header	1 (13-pin, SPI)
SGPIO Header	1
SMBus Header	1
PMBus Header	1
IPMB Header	1
Clear CMOS	1 (contact pads)
LED Indicators	
Standby Power LED	1 (5VSB)
80 Debug Port LED	1
Fan Fail LED	7
BMC Heartbeat LED	1

Support OS	
OS	Microsoft® Windows® - Server 2022 (64bit) Linux® - Red Hat Enterprise Linux Server 8.5 (64bit) / 9.2 (64bit) - SUSE Enterprise Linux Server 15 SP3 (64bit) / 15SP5 (64bit) - Ubuntu 21.04 (64 bit) / 22.04.2 (64bit) <i>*Please refer to the website for the latest OS support list.</i>
Enviroment	
Operating Temperature	10 - 35°C (50 - 95 degF)
Non-operating Temperature	-40 - 70°C (-40 - 158degF)

NOTE: Please refer to the website for the latest specifications.



This motherboard supports Wake from on Board LAN. To use this function, please make sure that the "Wake on Magic Packet from power off state" is enabled in Device Manager > Intel® Ethernet Connection > Power Management. And the "PCI Devices Power On" is enabled in UEFI SETUP UTILITY > Advanced > ACPI Configuration. After that, onboard LAN1&2 can wake up S5 under OS.




If installing Intel® LAN utility or Marvell SATA utility, this motherboard may fail Windows® Hardware Quality Lab (WHQL) certification tests. If installing the drivers only, it will pass the WHQL tests.

1.3 Unique Features

ASRock Rack Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows user to update system BIOS without entering operating systems first like MS-DOS or Windows[®]. With this utility, press the <F6> key during the POST or the <F2> key to enter into the BIOS setup menu to access ASRock Rack Instant Flash. Just launch this tool and save the new BIOS file to the USB flash drive, floppy disk or hard drive, then update the BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system.

1.4 Motherboard Layout

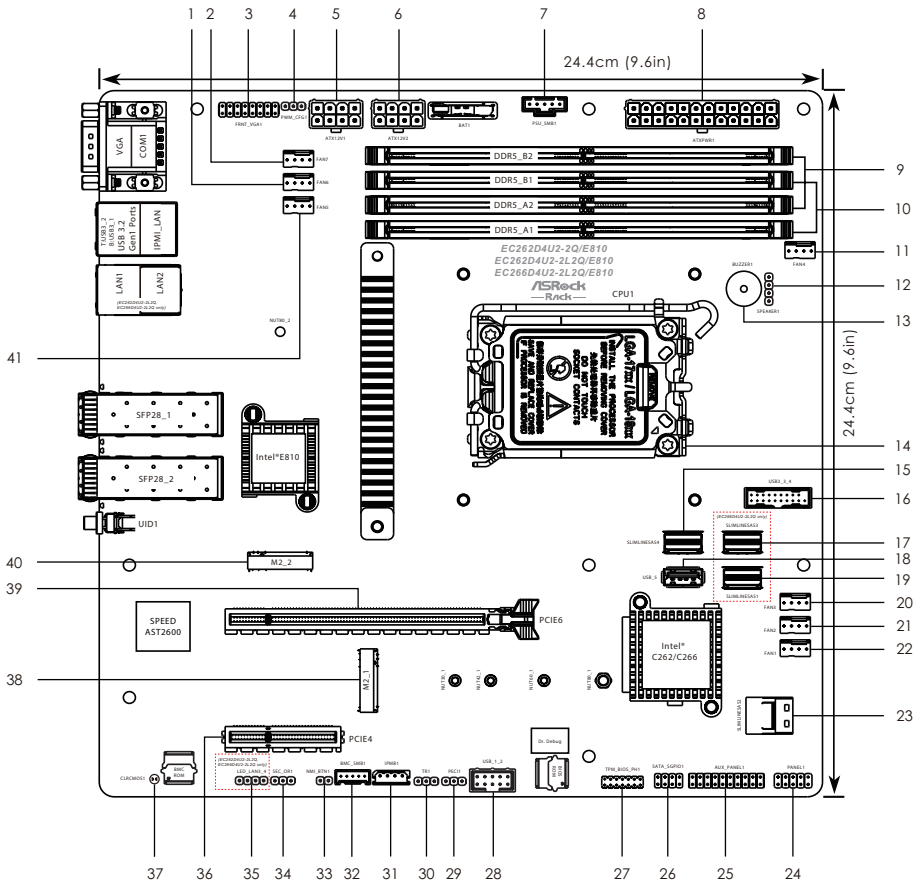


No.	Description
1	Chassis Fan Connector (FAN6)
2	Chassis Fan Connector (FAN7)
3	Front VGA Header (FRNT_VGA1)
4	PWM Configuration Header (PWM_CFG1)
5	ATX 12V Power Connector (ATX12V1)
6	ATX 12V Power Connector (ATX12V2)
7	PSU SMBus Header (PSU_SMB1)
8	ATX Power Connector (ATXPWR1)
9	2 x 288-pin DDR5 DIMM Slots (DDR5_A2, DDR5_B2)*
10	2 x 288-pin DDR5 DIMM Slots (DDR5_A1, DDR5_B1)*
11	Chassis Fan Connector (FAN4)
12	Chassis Speaker Header (SPEAKER1)
13	BUZZER (BUZZER1)
14	Single Socket (LGA-1700) (CPU1)
15	Slimline SAS PCIE4.0 x4 Connector (SLIMLINESAS4)
16	USB 3.2 Gen1 Header (USB3_3_4)
17	Slimline SAS PCIE4.0 x4 Connector (SLIMLINESAS3) (EC266D4U2-2L2Q/E810 only)
18	USB Connector (USB_5)
19	Slimline SAS PCIE4.0 x4 Connector (SLIMLINESAS1) (EC266D4U2-2L2Q/E810 only)
20	Chassis Fan Connector (FAN3)
21	Chassis Fan Connector (FAN2)
22	Chassis Fan Connector (FAN1)
23	Slimline SAS PCIE3.0 x4 or 4 SATA 6Gb/s Connector (SLIMLINESAS2)
24	System Panel Header (PANEL1)
25	Auxiliary Panel Header (AUX_PANEL1)
26	SATA SGPIO Connector (SATA_SGPIO1)
27	SPI TPM Header (TPM_BIOS_PH1)
28	USB 2.0 Header (USB_1_2)
29	CPU PECI Mode Jumper (PECI1)
30	Thermal Sensor Header (TR1)
31	Intelligent Platform Management Bus Header (IPMB1)
32	BMC SMBus Header (BMC_SMB1)
33	Non Maskable Interrupt Button (NMI_BTN1)

No.	Description
34	Security Override Jumper (SEC_OR1)
35	Front LAN LED Connector (LED_LAN3_4) (EC262D4U2-2L2Q/E810, EC266D4U2-2L2Q/E810 only)
36	PCI Express 4.0 x4 Slot (PCIE4)
37	Clear CMOS Pad (CLRMOS1)
38	M.2 Socket (M2_1) (Type 2230/2242/2260/2280)
39	PCI Express 5.0 x16 Slot (PCIE6)
40	M.2 Socket (M2_2) (Type 2280) (BOM option with E810)
41	Chassis Fan Connector (FAN5)

**For DIMM installation and configuration instructions, please see p.18 (Installation of Memory Modules (DIMM)) for more details.*


1.5 Onboard LED Indicators

The layout below is only for EC266 reference, both EC266 and EC262 LED locations are the same.

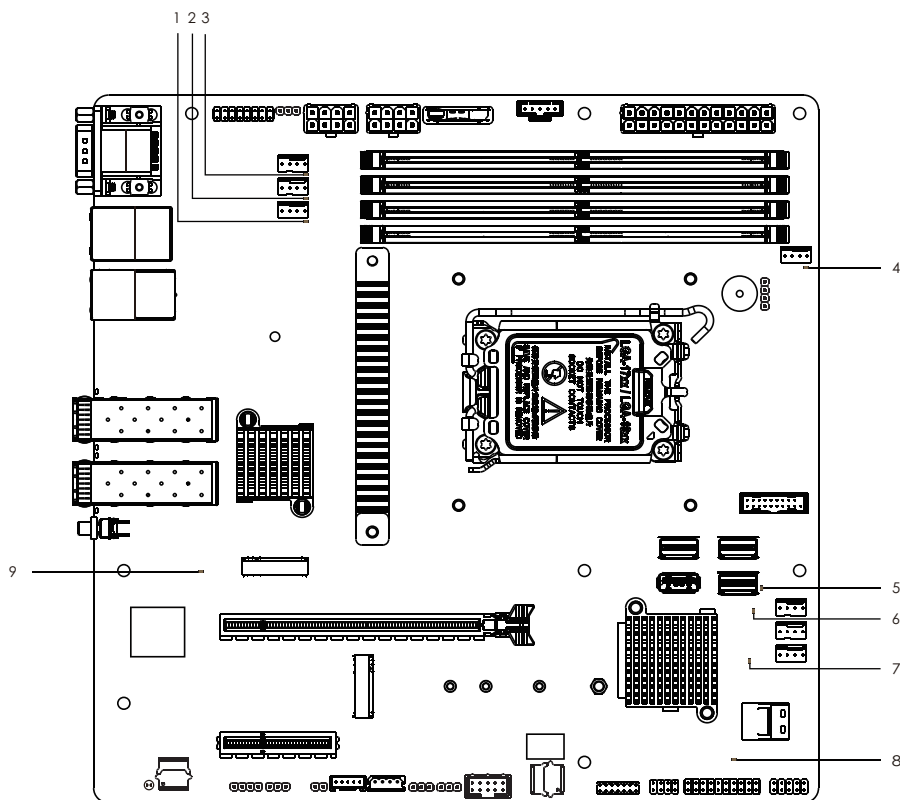

No.	Item	Status	Description
1	LED_FAN5	Red	FAN5 failed
2	LED_FAN6	Red	FAN6 failed
3	LED_FAN7	Red	FAN7 failed
4	LED_FAN4	Red	FAN4 failed
5	LED_FAN3	Red	FAN3 failed
6	LED_FAN2	Red	FAN2 failed
7	LED_FAN1	Red	FAN1 failed
8	SB_PWR1	Green	STB PWR ready
9	BMC_LED1	Green	BMC heartbeat LED

1.6 I/O Panel

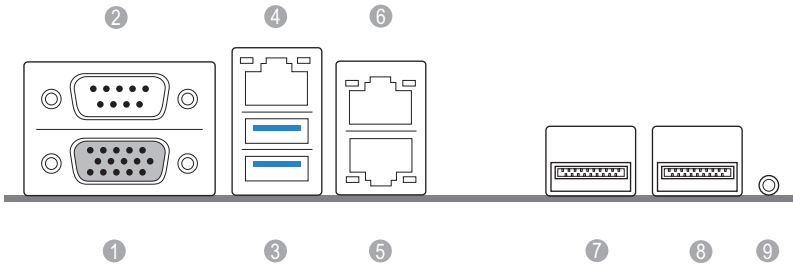


No.	Description	No.	Description
1	VGA Port (VGA)	6	1G LAN RJ-45 Port (LAN2)**
2	Serial Port (COM1)	7	25G SFP28 (Fiber) (SFP28_1, shard NIC)***
3	USB 3.2 Gen1 Ports (USB3_1_2)	8	25G SFP28 (Fiber) (SFP28_2)***
4	LAN RJ-45 Port (IPMI_LAN)*	9	UID Switch (UID1)
5	1G LAN RJ-45 Port (LAN1, shared NIC)**		

*EC262D4U2-2Q/E810 does not support LAN1 and LAN2.

LAN Port LED Indications


*There is an LED on each side of IPMI LAN port. Please refer to the table below for the LAN port LED indications.

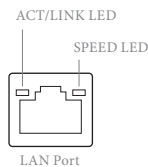

IPMI LAN Port LED Indications

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10M bps connection or no connection
Blinking Green	Data Activity	Orange	100M bps connection
On	Link	Green	1Gbps connection


**There is an LED on each side of 1G LAN port. Please refer to the table below for the LAN port LED indications.

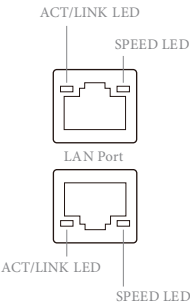

1G LAN Port LED Indications (EC262D4U2-2L2Q/E810, EC266D4U2-2L2Q/E810 only)

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection or no connection
Blinking Yellow	Data Activity	Orange	100Mbps connection
On	Link	Green	1Gbps connection


***There is an LED on each side of SFP LAN port. Please refer to the table below for the LAN port LED indications.

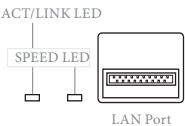

SFP LAN Port LED Indications

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	1Gbps connection or no connection
Blinking Yellow	Data Activity	Red/Orange	10Gbps connection
On	Link	Green	25Gbps connection

1.7 Block Diagram

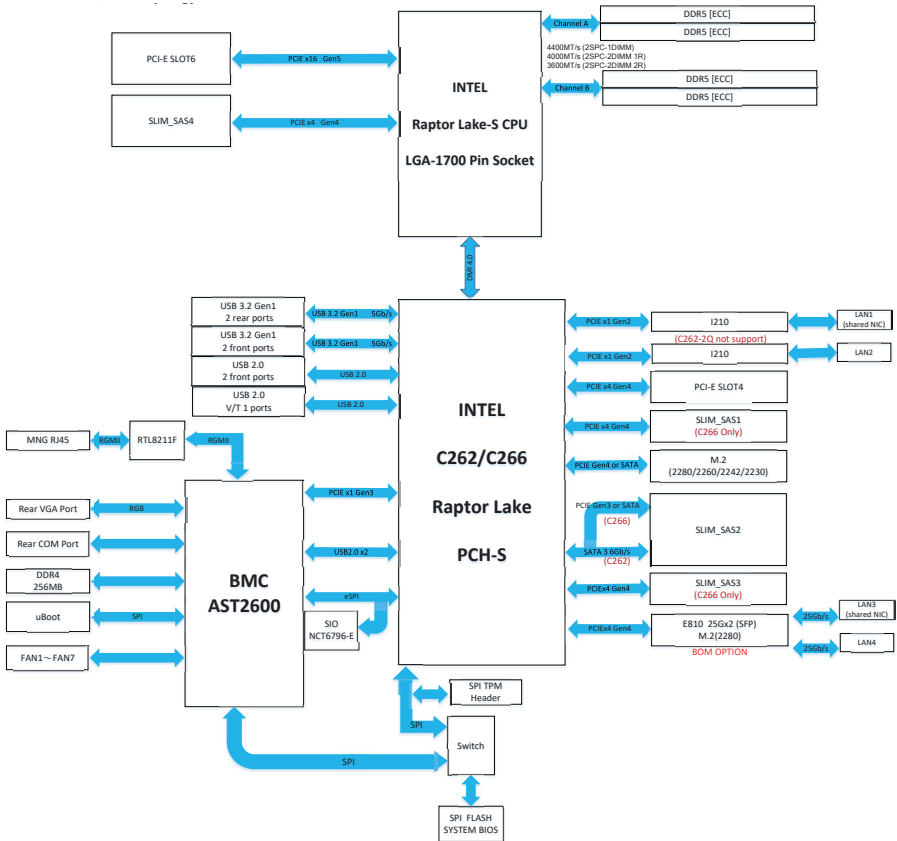

Chapter 2 Installation

This is a Micro-ATX form factor (9.6" x 9.6", 24.4cm x 24.4cm) motherboard. Before installing the motherboard, study the configuration of the chassis to ensure that the motherboard fits into it.



Ensure the motherboard battery is installed before unplugging the power cord or installing/removing the motherboard. Failure to follow this precaution may result in physical injury or damage to motherboard components.

2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before installing motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the motherboard's components due to static electricity, NEVER place the motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before handling the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.




Before installing or removing any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 Installing the CPU




1. Before inserting the 1700-Pin CPU into the socket, please check if the **PnP cap** is on the socket, if the CPU surface is unclean, or if there are any **bent pins** in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.


1




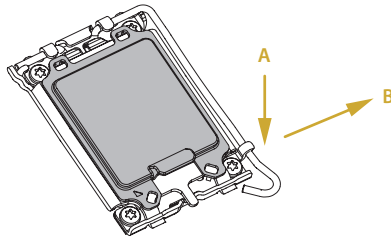


2

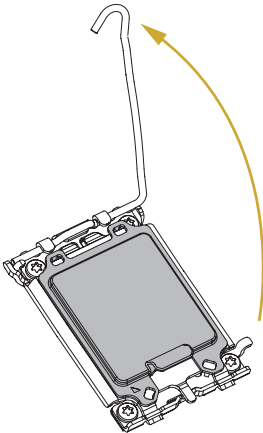


3

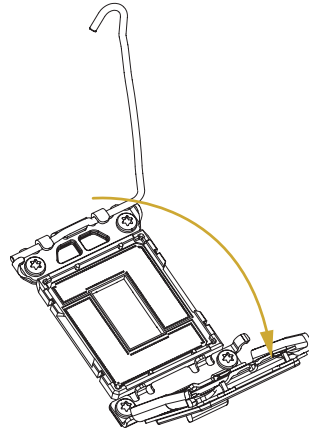

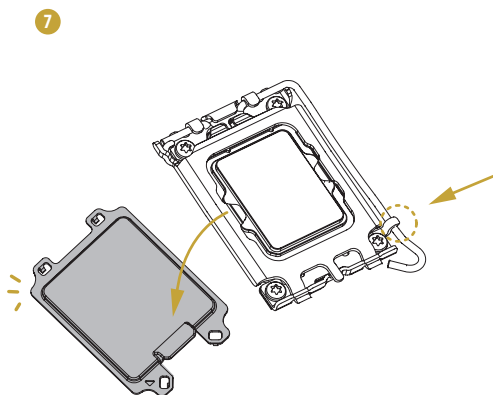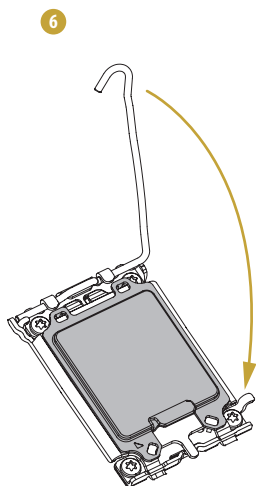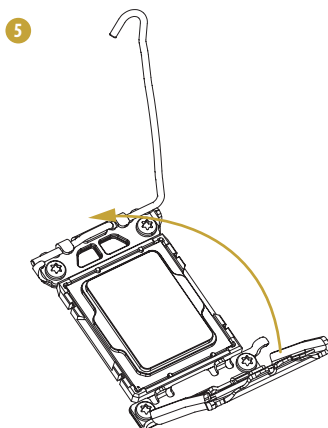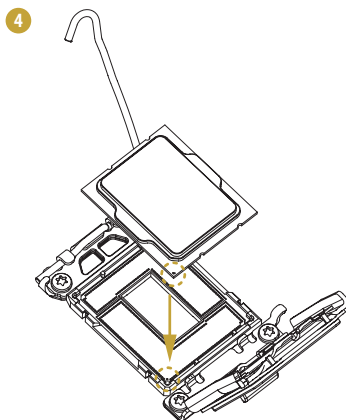


Please save and replace the cover if the processor is removed. The cover must be placed if wishing to return the motherboard for after service.


2.4 Installing the CPU Fan and Heatsink

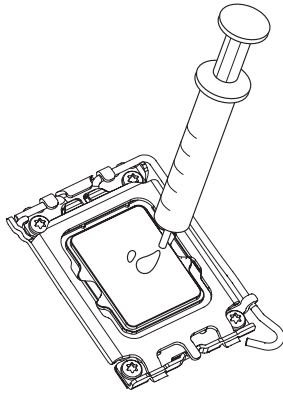

1

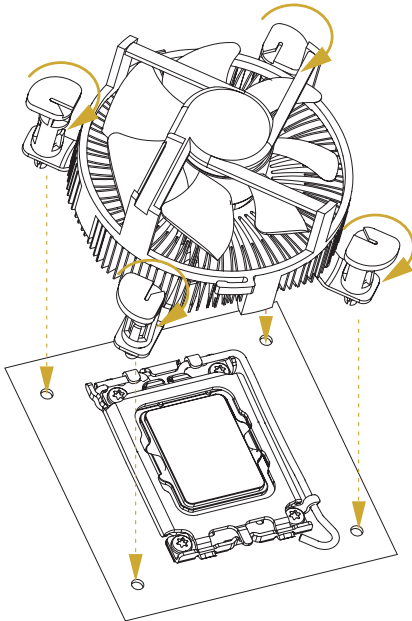

2

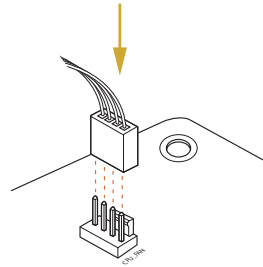

2.5 Installing Memory Modules (DIMM)

This motherboard provides four 288-pin DDR5 (Double Data Rate 5) DIMM slots, and supports Dual Channel Memory Technology.



1. For dual channel configuration, it always needs to install identical (the same brand, speed, size and chip-type) DDR5 DIMM pairs.
2. It is unable to activate Dual Channel Memory Technology with only one or three memory module installed.
3. It is not allowed to install a DDR, DDR2, DDR3 or DDR4 memory module into a DDR5 slot; otherwise, this motherboard and DIMM may be damaged.

Dual Channel Memory Configuration


Priority	DDR5_A1	DDR5_A2	DDR5_B1	DDR5_B2
1		V		V
2	V	V	V	V

The symbol V indicates the slot is populated.




The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if forcing the DIMM into the slot at incorrect orientation.


1

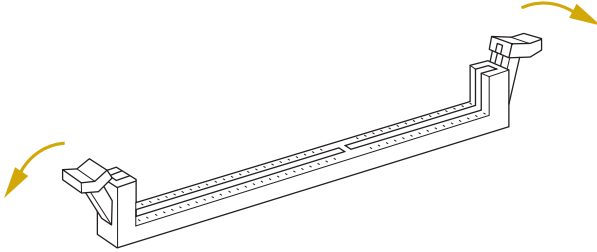

2

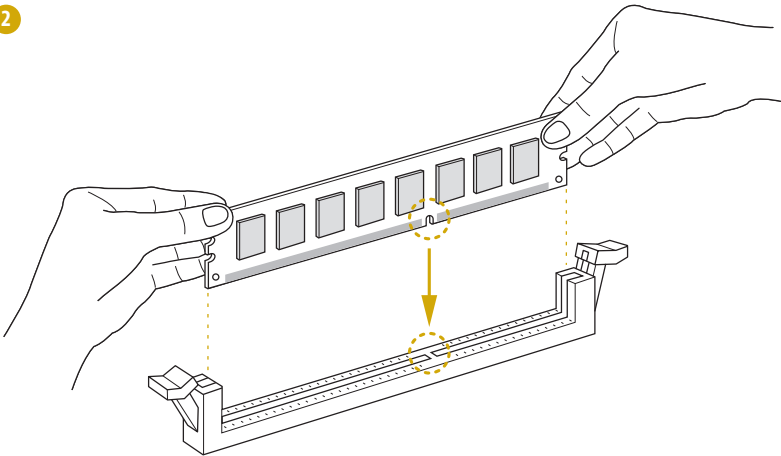

3

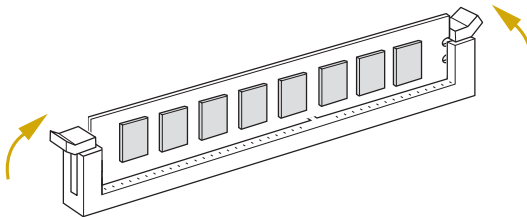

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if forcing the DIMM into the slot at incorrect orientation.

2.6 Expansion Slots (PCI Express Slots)

There are 2 PCI Express slots on this motherboard.

PCIe slots:

PCIe4 (PCIe 4.0 x4 slot) is used for PCI Express x1 lane width cards.

PCIe6 (PCIe 5.0 x16 slot) is used for PCI Express x16 lane width cards.


Slot	Generation	Mechanical	Electrical	Source
PCIe 4	4.0	x4	x4	PCH
PCIe 6	5.0	x16	x16	CPU

Installing an expansion card

- Step 1. Before installing an expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before starting the installation.
- Step 2. Remove the system unit cover (if the motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that intending to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.

2.7 Jumper Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on the pins, the jumper is “Short”. If no jumper cap is placed on the pins, the jumper is “Open”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when a jumper cap is placed on these 2 pins.

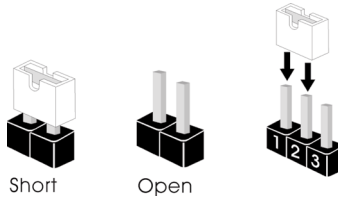

Security Override Jumper
 (3-pin SEC_OR1)
 (see p.7, No. 34)



Descriptor Security
 Override



Not override (Default)

CPU PECI Mode Jumper
 (3-pin PECI1)
 (see p.7, No. 29)



CPU PECI connected to
 PCH




CPU PECI connected to
 BMC (Default)

2.8 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard.

System Panel Header
(9-pin PANEL1)
(see p.7, No. 24)

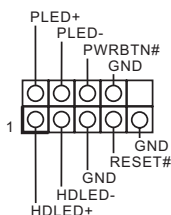

Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments. Particularly note the positive and negative pins before connecting the cables.



PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. Configure the way to turn off the system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):


Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED is off when the system is in S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting the chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

Auxiliary Panel Header (18-pin AUX PANEL1) (see p.7, No. 25)

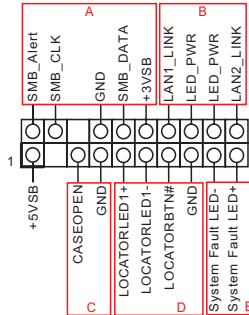

This header supports multiple functions on the front panel, including the front panel SMB, internet status indicator and chassis intrusion pin.



A. Front panel SMBus connecting pin (6-1 pin FPSMB)

This header allows user to connect SMBus (System Management Bus) equipment. It can be used for communication between peripheral equipment in the system, which has slower transmission rates, and power management equipment.

B. Internet status indicator (2-pin LAN1_LED, LAN2_LED)

These two 2-pin headers allow user to use the Gigabit internet indicator cable to connect to the LAN status indicator. When this indicator flickers, it means that the internet is properly connected.

C. Chassis intrusion pin (2-pin CHASSIS)

This header is provided for host computer chassis with chassis intrusion detection designs. In addition, it must also work with external detection equipment, such as a chassis intrusion detection sensor or a microswitch. When this function is activated, if any chassis component movement occurs, the sensor will immediately detect it and send a signal to this header, and the system will then record this chassis intrusion event. The default setting is set to the CASEOPEN and GND pin; this function is off.


D. Locator LED (4-pin LOCATOR)

This header is for the locator switch and LED on the front panel.

E. System Fault LED (2-pin LOCATOR)


This header is for the Fault LED on the system.

Front VGA Header (15-pin FRNT_VGA1) (see p.7, No. 3)

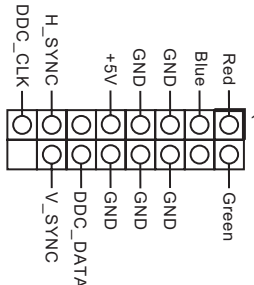


Please connect either end of VGA_2X8 cable to VGA header.

SPI TPM Header
(13-pin TPM_BIOS_PH1)
(see p.7, No. 27)

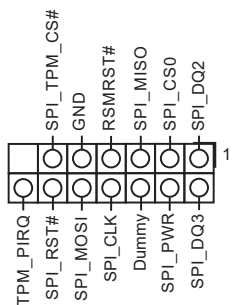


This connector supports SPI Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

USB 2.0 Header
(9-pin USB_1_2)
(see p.7, No. 28)

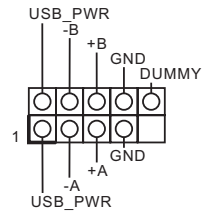


There is one USB 2.0 header on this motherboard. Each USB 2.0 header can support two ports.

Chassis Speaker Header
(4-pin SPEAKER1)
(see p.7, No. 12)

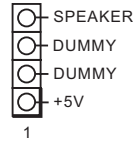


Please connect the chassis speaker to this header.

System Fan
Connectors
(4-pin FAN1)
(see p.7, No. 22)
(4-pin FAN2)
(see p.7, No. 21)
(4-pin FAN3)
(see p.7, No. 20)
(4-pin FAN4)
(see p.7, No. 11)
(4-pin FAN5)
(see p.7, No. 41)
(4-pin FAN6)
(see p.7, No. 1)
(4-pin FAN7)
(see p.7, No. 2)

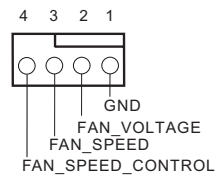


Please connect fan cables to the fan connectors and match the black wire to the ground pin. All fans support Fan Control.

ATX Power Connector
(24-pin ATXPWR1)
(see p.7, No. 8)

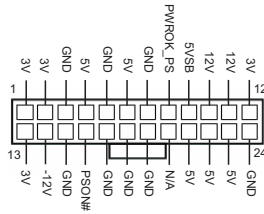

This motherboard provides a 24-pin ATX power connector. To use a 20-pin ATX power supply, please plug it along Pin 1 and Pin 13.

 
Serial ATA3 Connectors
(SLIMLINESAS1)
(see p.7, No. 19)
(SLIMLINESAS3)
(see p.7, No. 17)
(SLIMLINESAS4)
(see p.7, No. 15)
Right Angle:
(SLIMLINESAS2)
(see p.7, No. 23)



These connectors are used for the NVME PCIE devices.


**SLIMLINESAS1 and SLIMLINESAS3 are only available for EC266D4U2-2L2Q/E810.*

ATX 12V Power Connectors
(8-pin ATX12V1)
(see p.7, No. 5)
(8-pin ATX12V2)
(see p.7, No. 6)

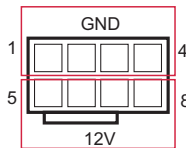


This motherboard provides two 8-pin ATX 12V power connectors.

Serial General Purpose Input/Output Header
(7-pin SATA_SGPI01)
(see p.7, No. 26)

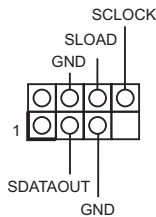


The header supports Serial Link interface for onboard SATA connections.

Front LAN LED Connector
(LED_LAN3_4)
(see p.7, No. 35)

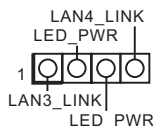


This 4-pin connector is used for the front LAN status indicator. (EC262D4U2-2L2Q/E810, EC266D4U2-2L2Q/E810 only)

 Thermal Sensor Header
(3-pin TR1)
(see p.7, No. 30)



Please connect the thermal sensor cable to either pin 1-2 or pin 2-3 and the other end to the device to monitor its temperature.

 PWM Configuration Header
(3-pin PWM_CFG1)
(see p.7, No. 4)




This header is used for PWM configurations.

Non Maskable Interrupt Button Header
(NMI_BTN1)
(see p.7, No. 33)




Please connect a NMI device to this header.

PSU SMBus
(PSU_SMB1)
(see p.7, No. 7)

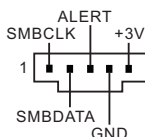


PSU SMBus monitors the status of the power supply, fan and system temperature.

Intelligent Platform Management Bus Header
(4-pin IPMB1)
(see p.7, No. 31)

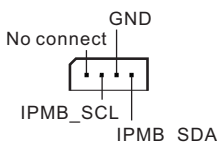


This 4-pin connector is used to provide a cabled base-board or front panel connection for value added features and 3rd-party add-in cards, such as Emergency Management cards, that provide management features using the IPMB.

Baseboard Management Controller SMBus Header
(5-pin BMC_SMB1)
(see p.7, No. 32)

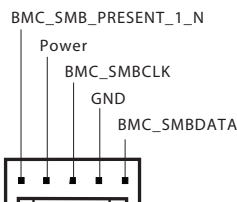

The header is used for the SMBUS devices.

USB 3.2 Gen1 Header
(19-pin USB3_3_4)
(see p.7, No. 16)

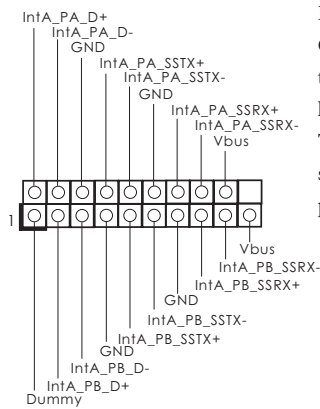

Besides two default USB 3.2 Gen1 ports on the I/O panel, there is one USB 3.2 Gen1 header on this motherboard. This USB 3.2 Gen1 header can support two USB 3.2 Gen1 ports.

USB Connector
(USB_5)
(see p.7, No. 18)



This port is used for USB device connection.

Clear CMOS Pad
(CLRMOS1)
(see p.7, No. 37)



CLRMOS1 allows user to clear the data in CMOS. To clear CMOS, take out the CMOS battery and short the Clear CMOS Pad.

2.9 Dr. Debug

Dr. Debug is used to provide code information, which makes troubleshooting even easier. Please see the diagrams below for reading the Dr. Debug codes.

Code	Description
0x10	PEI_CORE_STARTED
0x11	PEI_CAR_CPU_INIT
0x15	PEI_CAR_NB_INIT
0x19	PEI_CAR_SB_INIT
0x31	PEI_MEMORY_INSTALLED
0x32	PEI_CPU_INIT
0x33	PEI_CPU_CACHE_INIT
0x34	PEI_CPU_AP_INIT
0x35	PEI_CPU_BSP_SELECT
0x36	PEI_CPU_SMM_INIT
0x37	PEI_MEM_NB_INIT
0x3B	PEI_MEM_SB_INIT
0x4F	PEI_DXE_IPL_STARTED
0x60	DXE_CORE_STARTED
0x61	DXE_NVRAM_INIT
0x62	DXE_SBRUN_INIT

0x63	DXE_CPU_INIT
0x68	DXE_NB_HB_INIT
0x69	DXE_NB_INIT
0x6A	DXE_NB_SMM_INIT
0x70	DXE_SB_INIT
0x71	DXE_SB_SMM_INIT
0x72	DXE_SB_DEVICES_INIT
0x78	DXE_ACPI_INIT
0x79	DXE_CSM_INIT
0x90	DXE_BDS_STARTED
0x91	DXE_BDS_CONNECT_DRIVERS
0x92	DXE_PCI_BUS_BEGIN
0x93	DXE_PCI_BUS_HPC_INIT
0x94	DXE_PCI_BUS_ENUM
0x95	DXE_PCI_BUS_REQUEST_RESOURCES
0x96	DXE_PCI_BUS_ASSIGN_RESOURCES
0x97	DXE_CON_OUT_CONNECT
0x98	DXE_CON_IN_CONNECT

0x99 DXE_SIO_INIT

0x9A DXE_USB_BEGIN

0x9B DXE_USB_RESET

0x9C DXE_USB_DETECT

0x9D DXE_USB_ENABLE

0xA0 DXE_IDE_BEGIN

0xA1 DXE_IDE_RESET

0xA2 DXE_IDE_DETECT

0xA3 DXE_IDE_ENABLE

0xA4 DXE_SCSI_BEGIN

0xA5 DXE_SCSI_RESET

0xA6 DXE_SCSI_DETECT

0xA7 DXE_SCSI_ENABLE

0xA8 DXE_SETUP_VERIFYING_PASSWORD

0xA9 DXE_SETUP_START

0xAB DXE_SETUP_INPUT_WAIT

0xAD DXE_READY_TO_BOOT

0xAE DXE_LEGACY_BOOT

0xAF	DXE_EXIT_BOOT_SERVICES
0xB0	RT_SET_VIRTUAL_ADDRESS_MAP_BEGIN
0xB1	RT_SET_VIRTUAL_ADDRESS_MAP_END
0xB2	DXE_LEGACY_OPMON_INIT
0xB3	DXE_RESET_SYSTEM
0xB4	DXE_USB_HOTPLUG
0xB5	DXE_PCI_BUS_HOTPLUG
0xB6	DXE_NVRAM_CLEANUP
0xB7	DXE_CONFIGURATION_RESET
0xF0	PEI_RECOVERY_AUTO
0xF1	PEI_RECOVERY_USER
0xF2	PEI_RECOVERY_STARTED
0xF3	PEI_RECOVERY_CAPSULE_FOUND
0xF4	PEI_RECOVERY_CAPSULE_LOADED
0xE0	PEI_S3_STARTED
0xE1	PEI_S3_BOOT_SCRIPT
0xE2	PEI_S3_VIDEO_REPOST

0xE3 PEI_S3_OS_WAKE

0x50 PEI_MEMORY_INVALID_TYPE

0x53 PEI_MEMORY_NOT_DETECTED

0x55 PEI_MEMORY_NOT_INSTALLED

0x57 PEI_CPU_MISMATCH

0x58 PEI_CPU_SELF_TEST_FAILED

0x59 PEI_CPU_NO_MICROCODE

0x5A PEI_CPU_ERROR

0x5B PEI_RESET_NOT_AVAILABLE

0xD0 DXE_CPU_ERROR

0xD1 DXE_NB_ERROR

0xD2 DXE_SB_ERROR

0xD3 DXE_ARCH_PROTOCOL_NOT_AVAILABLE

0xD4 DXE_PCI_BUS_OUT_OF_RESOURCES

0xD5 DXE_LEGACY_OPROM_NO_SPACE

0xD6 DXE_NO_CON_OUT

0xD7 DXE_NO_CON_IN

0xD8	DXE_INVALID_PASSWORD
0xD9	DXE_BOOT_OPTION_LOAD_ERROR
0xDA	DXE_BOOT_OPTION_FAILED
0xDB	DXE_FLASH_UPDATE_FAILED
0xDC	DXE_RESET_NOT_AVAILABLE
0xE8	PEI_MEMORY_S3_RESUME_FAILED
0xE9	PEI_S3_RESUME_PPI_NOT_FOUND
0xEA	PEI_S3_BOOT_SCRIPT_ERROR
0xEB	PEI_S3_OS_WAKE_ERROR

2.10 Unit Identification purpose LED/Switch

With the UID button, user can be able to locate the server working on from behind a rack of servers.

Unit Identification
purpose LED/Switch
(UID1)



When the UID button on the front or rear panel is pressed, the front/rear UID blue LED indicator will be turned on. Press the UID button again to turn off the indicator.



1. Press and hold the UID button for 4 seconds, the BMC will trigger an external reset.
2. Press and hold the UID button for 10 seconds, the BMC will reset and load default values.

2.11 Dual LAN and Teaming Operation Guide

Dual LAN with Teaming enabled on this motherboard allows two single connections to act as one single connection for twice the transmission bandwidth, making data transmission more effective and improving the quality of transmission of distant images. Fault tolerance on the dual LAN network prevents network downtime by transferring the workload from a failed port to a working port.



The speed of transmission is subject to the actual network environment or status even with Teaming enabled.

Before setting up Teaming, please make sure whether the Switch (or Router) supports Teaming (IEEE 802.3ad Link Aggregation). specify a preferred adapter in Intel PROSet. Under normal conditions, the Primary adapter handles all non-TCP/IP traffic. The Secondary adapter will receive fallback traffic if the primary fails. If the Preferred Primary adapter fails, but is later restored to an active status, control is automatically switched back to the Preferred Primary adapter.

Step 1

From **Device Manager**, open the properties of a team.

Step 2

Click the **Settings** tab.

Step 3

Click the **Modify Team** button.

Step 4

Select the adapter that wants to be the primary adapter and click the **Set Primary** button.

 
The software will choose an adapter of the highest capability (model and speed) to act as the default primary upon not specify a preferred primary adapter. If a failover occurs, another adapter becomes the primary. The adapter will, however, rejoin the team as a non-primary.

2.12 M.2 SSD Module Installation Guide

There are two Ultra M.2 Sockets on this motherboard.


- M2_1 (Key M) supports type 2230/2242/2260/2280 M.2 PCI Express module up to Gen4 x4 (16GT/s x4).
- M2_2 (Key M) supports type 2280 M.2 PCI Express module up to Gen4 x4 (16GT/s x4).
(BOM option with E810)

Installing the M.2 SSD Module



Step 1

Prepare a M.2 SSD module and the screw.

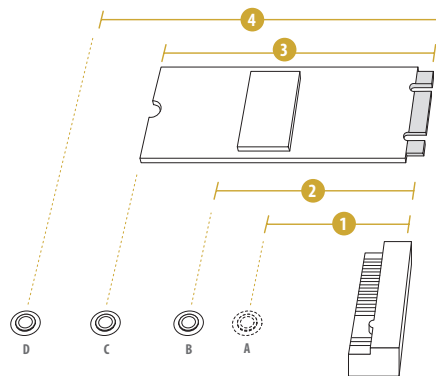


Step 2

Depending on the PCB type and length of the M.2 SSD module, find the corresponding nut location to be used.

No.	1	2	3	4
Nut Location	A (NUT30_1)	B (NUT42_1)	C (NUT60_1)	D (NUT80_1)
PCB Length	3cm	4.2cm	6cm	8cm
Module Type	Type2230	Type 2242	Type2260	Type 2280

 *M2_2 supports type 2280 only.




Step 3

Move the standoff based on the module type and length.


The standoff is placed at the nut location D by default. Skip Step 3 and 4 and go straight to Step 5 if using the default nut.

 Otherwise, release the standoff by hand.





Step 4

Peel off the yellow protective film on the nut to be used. Hand tighten the standoff into the desired nut location on the motherboard.

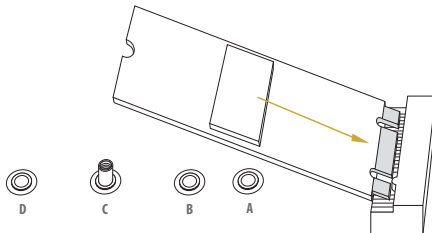

Step 5

Align and gently insert the M.2 SSD module into the M.2 slot. Please be aware that the M.2 SSD module only fits in one orientation.

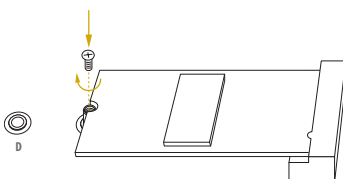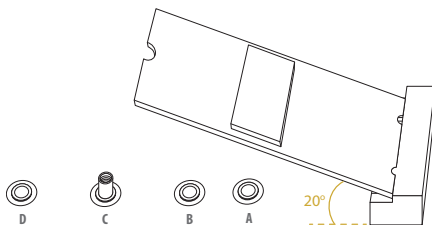

Step 6

Tighten the screw with a screwdriver to secure the module into place. Please do not overtighten the screw as this might damage the module.

Chapter 3 UEFI Setup Utility

3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure the system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. Run the UEFI SETUP UTILITY when starting up the computer. Please press <F2> or during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY; otherwise, POST will continue with its test routines.

Restart the system by pressing <Ctrl> + <Alt> + <Delete> to enter the UEFI SETUP UTILITY after POST, or by pressing the reset button on the system chassis. This allows user to restart by turning the system off and then back on.



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what seeing on the screen.

3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Item	Description
Main	To set up the system time/date information
Advanced	To set up the advanced UEFI features
Server Mgmt	To manage the server
Event Logs	For event log configuration
Security	To set up the security features
Boot	To set up the default system device to locate and load the Operating System
Exit	To exit the current screen or the UEFI SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.


3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Tab>	Switch to next function
<Enter>	To bring up the selected screen
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the UEFI SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the UEFI SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen


3.2 Main Screen

Once entering the UEFI SETUP UTILITY, the Main screen will appear and display the system overview. The Main screen provides system overview information and allows user- to set the system time and date.

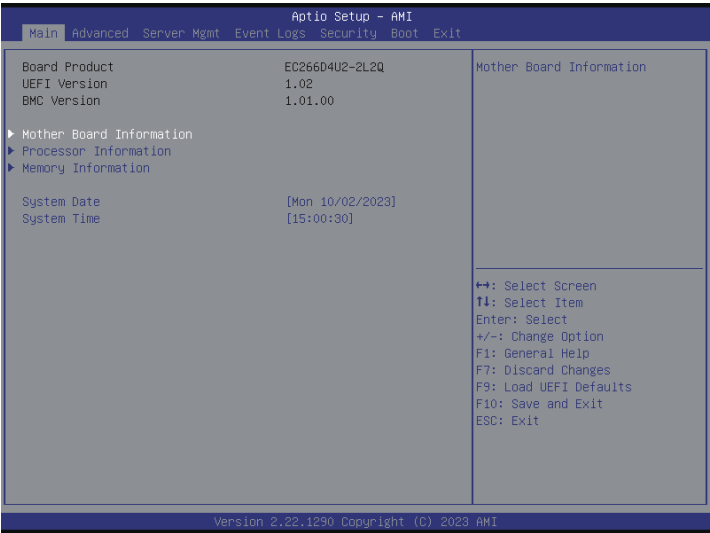


3.2.1 Motherboard Information

Press [Enter] to view the information of the motherboard.

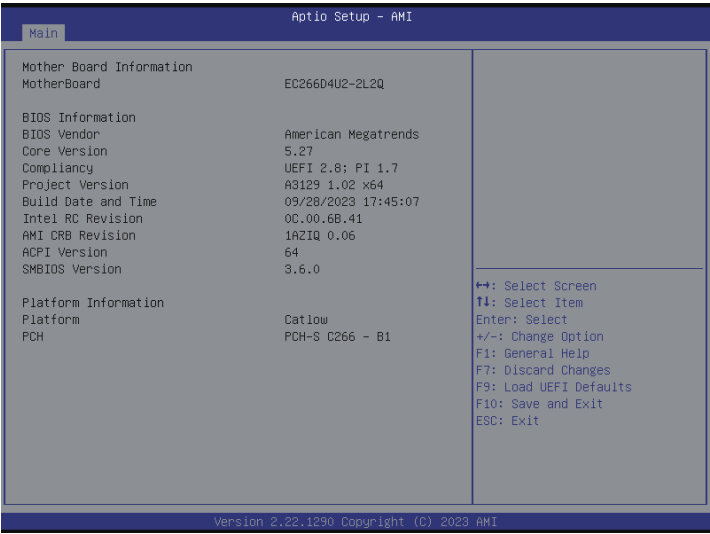


3.2.2 Processor Information

Press [Enter] to view the information of the processor.

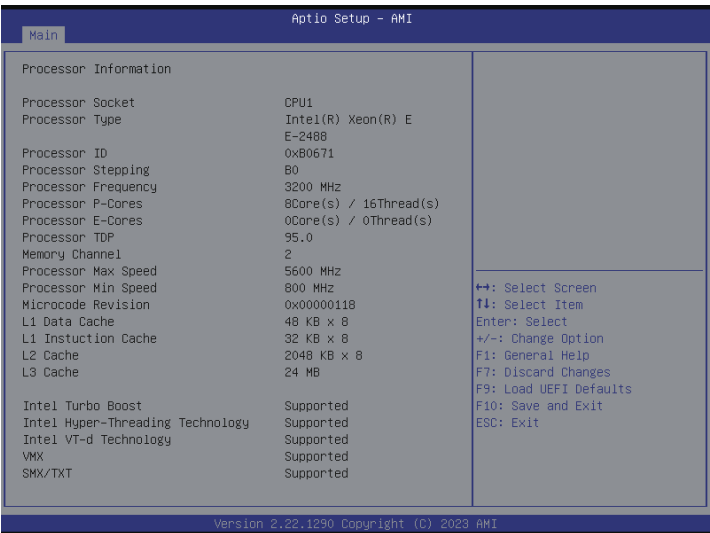


3.2.3 Memory Information

Press [Enter] to view the information of the memory.

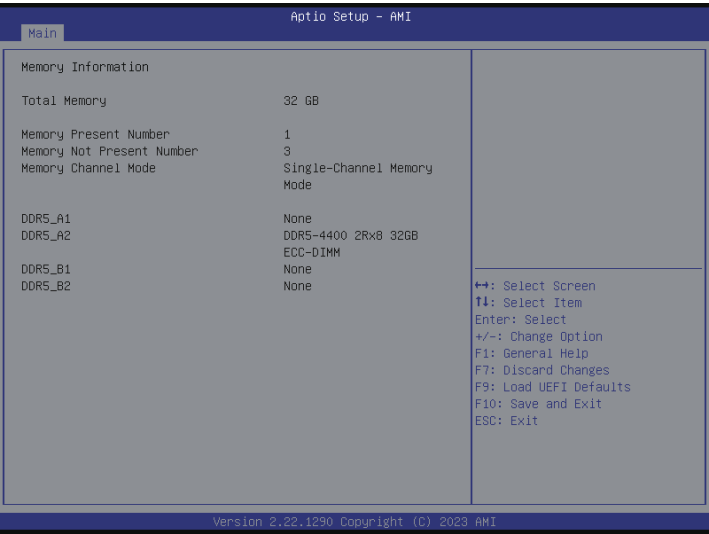


3.3 Advanced Screen

In this section, set the configurations for the following items: CPU Configuration, DRAM Configuration, Chipset Configuration, Storage Configuration, NVMe Configuration, ACPI Configuration, USB Configuration, Super IO Configuration, Serial Port Console Redirection, H/W Monitor, Network Stack Configuration, Intel SPS Configuration, Drive Health, Tls Auth Configuration and Instant Flash.

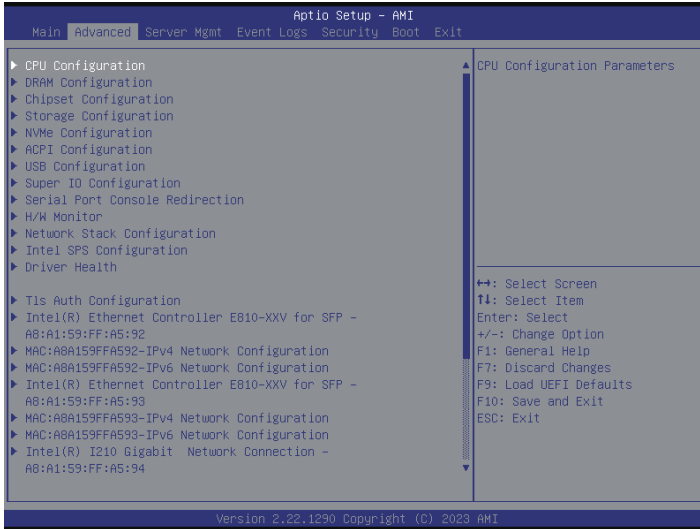

Setting wrong values in this section may cause the system to malfunction.

3.3.1 CPU Configuration

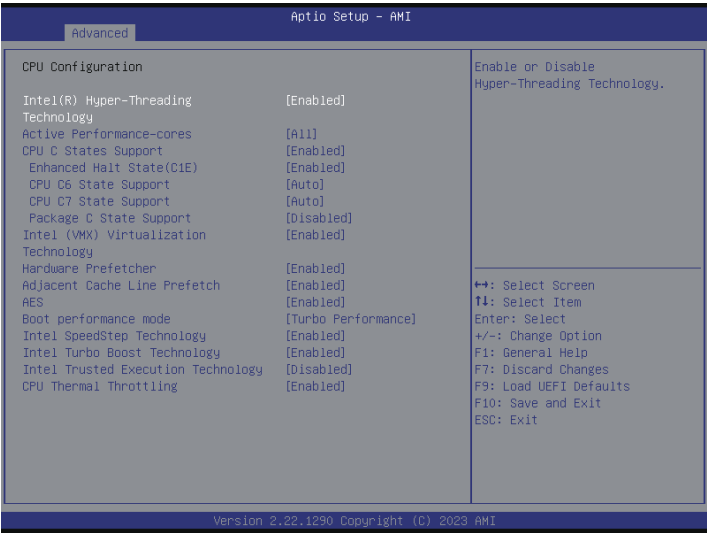

Intel(R) Hyper Threading Technology

Intel Hyper Threading Technology allows multiple threads to run on each core, so that the overall performance on threaded software is improved.

Active Performance-Cores

Select the number of cores to enable in each processor package.



Please note that the Number of Cores and E-cores are looked at together. When both of them are {0,0}, Pcode will enable all cores.

CPU C States Support

Enable CPU C States Support for power saving. It is recommended to keep C6 and C7 enabled for better power saving.

Enhanced Halt State (C1E)

Enable Enhanced Halt State (C1E) for lower power consumption.

CPU C6 State Support

Use this item to enable C6 deep sleep state for lower power consumption.

CPU C7 State Support

Use this item to enable C7 deep sleep state for lower power consumption.

Package C State Support

Use this item to enable CPU, PCIe, Memory, Graphics C State Support for power saving.

Intel (VMX) Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Hardware Prefetcher

Automatically prefetch data and code for the processor. Enable for better performance.

Adjacent Cache Line Prefetch

Automatically prefetch the subsequent cache line while retrieving the currently requested cache line. Enable for better performance.

AES

Use this item to enable or disable AES (Advanced Encryption Standard).

Boot Performance Mode

Select the performance state that the BIOS will set starting from reset vector.

Intel SpeedStep Technology

Intel SpeedStep technology allows processors to switch between multiple frequencies and voltage points for better power saving and heat dissipation. CPU turbo ratio can be fixed when Intel SpeedStep Technology set Disabled and Intel Turbo Boost Technology set Enabled.

Intel Turbo Boost Technology

Intel Turbo Boost Technology enables the processor to run above its base operating frequency when the operating system requests the highest performance state.

Intel Trusted Execution Technology

Enable the utilization of additional hardware capabilities provided by Intel(R) Trusted Execution Technology. It requires a full power cycle to change this for taking effect.

CPU Thermal Throttling

Enable CPU internal thermal control mechanisms to keep the CPU from overheating.

3.3.2 DRAM Configuration



DRAM Frequency

If [Auto] is selected, the motherboard will detect the memory module(s) inserted and assign the appropriate frequency automatically.

3.3.3 Chipset Configuration



Re-Size BAR Support

If system has Resizable BAR capable PCIe Devices, select this item to enable or disable Resizable BAR Support.

Onboard LAN1/LAN2/SFP28_1/SFP28_2 (EC262D4U2-2Q does not support LAN1/LAN2)

Use this item to enable or disable the Onboard LAN function.

VT-d

Intel Virtualization Technology for Directed I/O helps the virtual machine monitor better utilize hardware by improving application compatibility and reliability, and providing additional levels of manageability, security, isolation, and I/O performance.

M.2 Mode Selection

Select this item to configure M.2 Mode Selection.

M2_1 Mode Selection

Switch device function to PCIE/SATA.

Slimline Mode Selection (EC266 only)

Select this item to configure Slimline Mode Selection.

SLIM2 Mode Selection (*EC266 only*)

Switch device function to PCIE/SATA.

PCIE Link Width

Select this item to configure PCIE Link Width.

PCIE6 Link Width

Select the Link Width for PCIE6.

PCIE Link Speed

Select PCIE Link Speed.

PCIE4/6 Link Speed

Configure the PCIE Speed for PCIE4/6.

M2_1 Link Speed

Configure the PCIE Speed for M2_1.

SLIM1/2/3/4 Link Speed (*SLIM1/2/3 for EC266 only*)

Configure the PCIE Speed for SLIM1/2/3/4.

PCIE Hot Plug

Select this item to configure PCIE Hot Plug globally.

PCIE4, SLIM1/2/3/4 Hot Plug (*SLIM1/2/3 for EC266 only*)

Enable or disable PCIE Hot Plug.

PCIE ASPM

Select this item to configure the PCIE Active State Power Management settings.

PCI-E ASPM Support (Global)

Select this item to enable or disable the ASPM Support for all PCIE downstream devices.

PCIE4/6 ASPM Support

Select this item to enable or disables the ASPM support for the PCIE downstream devices.

Select [Auto] for the default value.


SLIM1/2/3/4 ASPM Support (*SLIM1/2/3 for EC266 only*)

Select this item to enable or disables the ASPM support for the PCIE downstream devices.

Onboard Debug Port LED

Select this item to enable or disable the onboard Dr. Debug LED.

3.3.4 Storage Configuration

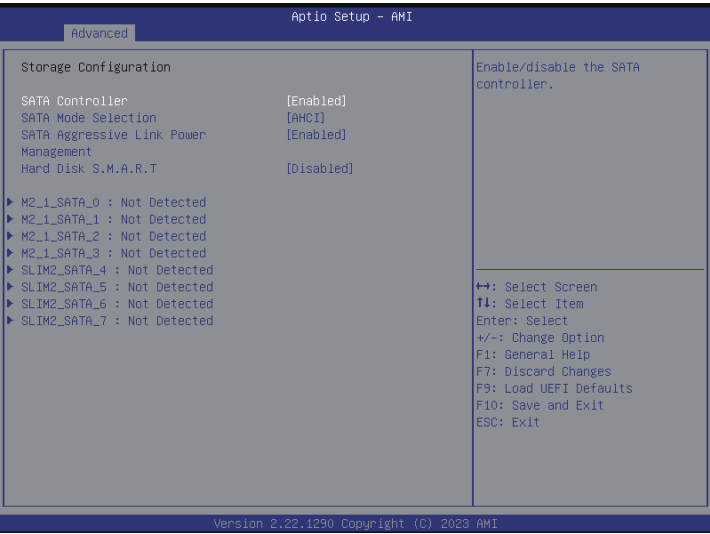

SATA Controller

Select this item to enable or disable the SATA controllers.

SATA Mode Selection

AHCI: Supports new features that improve performance.

RAID: Combine multiple disk drives into a logical unit.

Please press <CTRL-I> to enter RAID ROM during UEFI POST process.

SATA Aggressive Link Power Management

SATA Aggressive Link Power Management allows SATA devices to enter a low power state during periods of inactivity to save power. Select this item to enable or disable the function.


Hard Disk S.M.A.R.T.

S.M.A.R.T stands for Self-Monitoring, Analysis, and Reporting Technology. It is a monitoring system for computer hard disk drives to detect and report on various indicators of reliability.

M2_1_SATA_0/1/2/3, SLIM2_SATA_4/5/6/7

Select this item to configure the External SATA, Hot Plug, Spin Up Device and SATA Device Type.

3.3.5 NVME Configuration

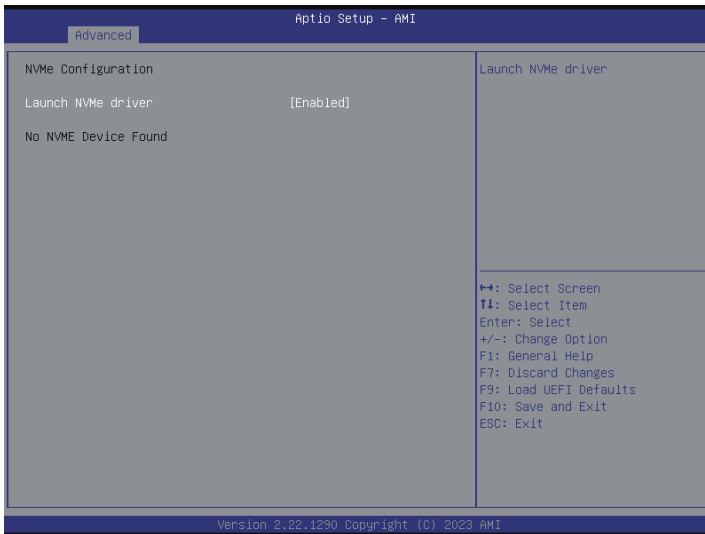

Launch NVMe driver

Select this item to enable or disable launch NVMe driver.

3.3.6 ACPI Configuration



PCIE Devices Power On

Allow the system to be waked up by a PCIE device and enable wake on LAN.

Ring-In Power On

Allow the system to be waked up by onboard COM port modem Ring-In signals.

RTC Alarm Power On

Allow the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by the operating system.

RTC Alarm Date

Use this item to set Date of RTC power on feature.

RTC Alarm Hour

Use this item to set Hour of RTC power on feature.


RTC Alarm Minute

Use this item to set Minute of RTC power on feature.

RTC Alarm Second


Use this item to set Second of RTC power on feature.

3.3.7 USB Configuration

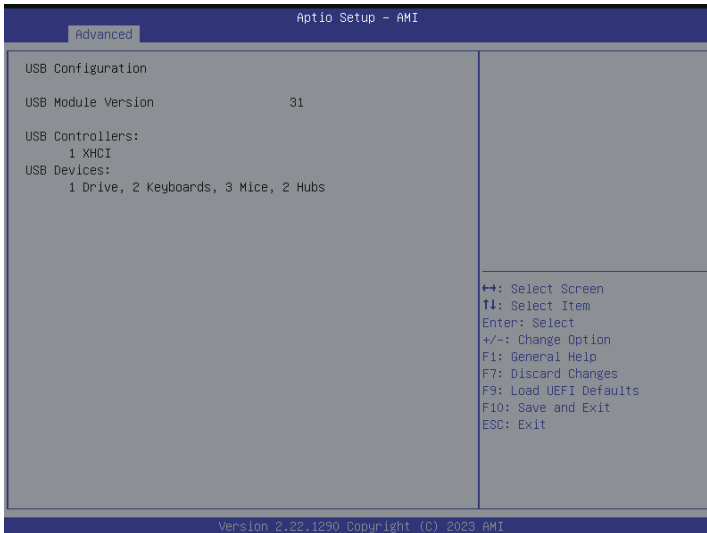

This page displays the information of the USB Module Version, USB Controllers and USB Devices.

3.3.8 Super IO Configuration

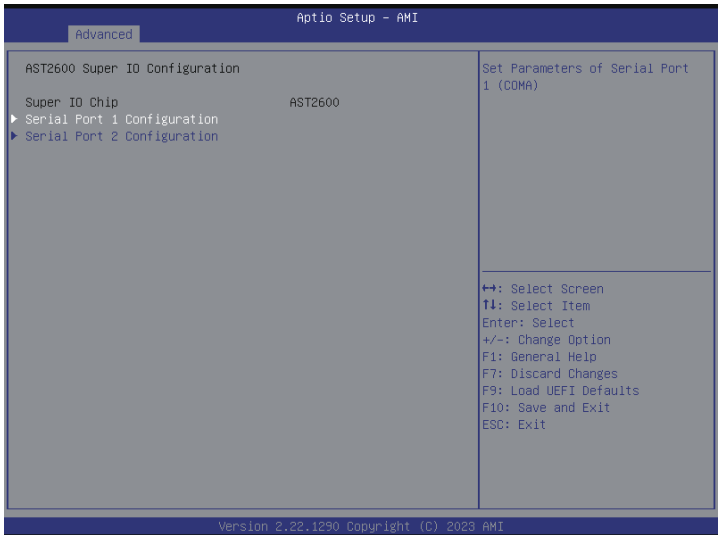

Serial Port 1 Configuration

Use this item to set parameters of Serial Port1 (COMA).

Serial Port

Use this item to enable or disable the serial port (COM).

Change Settings

Use this item to select an optimal setting for Super IO device.

Serial Port 2 Configuration

Use this item to set parameters of Serial Port2 (COMB).


Serial Port

Use this item to enable or disable the serial port (COM).

Change Settings

Use this item to select an optimal setting for Super IO device.

3.3.9 Serial Port Console Redirection

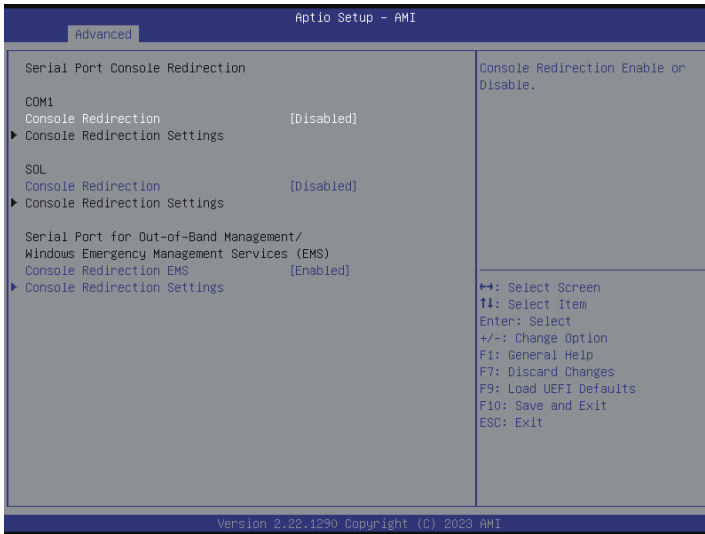

COM1 / SOL

Console Redirection

Use this item to enable or disable Console Redirection. If this item is set to Enabled, user can configure the Console Redirection Settings.

Console Redirection Settings

Use this item to configure Console Redirection Settings, and specify how the computer and host computer to which user are connected exchange information. Both computers should have the same or compatible settings.

Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100Plus	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [38400], [57600] and [115200].

Data Bits

Use this item to set the data transmission size. The options include [7] and [8] (Bits).

Parity

Use this item to select the parity bit. The options include [None], [Even], [Odd], [Mark] and [Space]. A parity bit can be sent with the data bits to detect some transmission errors. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.

Even: parity bit is 0 if the num of 1's in the data bits is even.

Odd: parity bit is 0 if num of 1's in the data bits is odd.

Mark: parity bit is always 1.

Space: Parity bit is always 0.

Stop Bits

The item indicates the end of a serial data packet. The standard setting is [1] Stop Bit. Select [2] Stop Bits for slower devices.

Flow Control

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None] and [Hardware RTS/CTS].

VT-UTF8 Combo Key Support

Use this item to enable or disable the VT-UTF8 Combo Key Support for ANSI/VT100 terminals.

Recorder Mode

Use this item to enable or disable Recorder Mode to capture terminal data and send it as text messages.

Resolution 100x31

Use this item to enable or disable extended terminal resolution support.

Putty KeyPad

Use this item to select Function Key and Keypad on Putty.

Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)

Console Redirection

Use this item to enable or disable Console Redirection. If this item is set to Enabled, user can configure the Console Redirection Settings.

Console Redirection Settings

Use this item to configure Console Redirection Settings, and specify how the computer and the host computer to which user are connected exchange information.

Out-of-Band Mgmt Port

Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.

Terminal Type EMS

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100+	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second EMS

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

Flow Control EMS

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None], [Hardware RTS/CTS], and [Software Xon/Xoff].


Data Bits EMS

Parity EMS

Stop Bits EMS

3.3.10 H/W Monitor

In this section, it allows user to monitor the status of the hardware on the system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

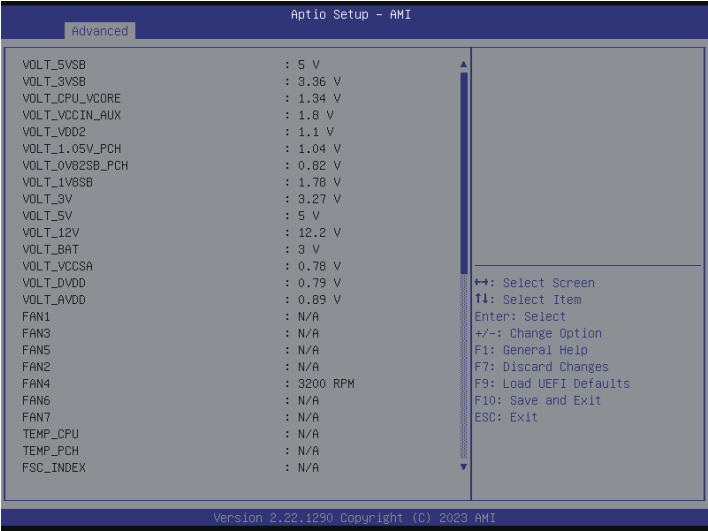

3.3.11 Network Stack Configuration



Network Stack

Use this item to enable or disable UEFI Network Stack.

IPv4 PXE Support

Use this item to enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.

IPv4 HTTP Support

Use this item to enable or disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.

IPv6 PXE Support

Use this item to enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.

IPv6 HTTP Support

Use this item to enable or disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.


PXE Boot Wait Time

Specifies the wait time and press the ESC key to abort the PXE boot.

Media Detect Count


Specifies the number of times the presence of physical storage device are verified on a system reset or power cycle.

3.3.12 Intel SPS Configuration

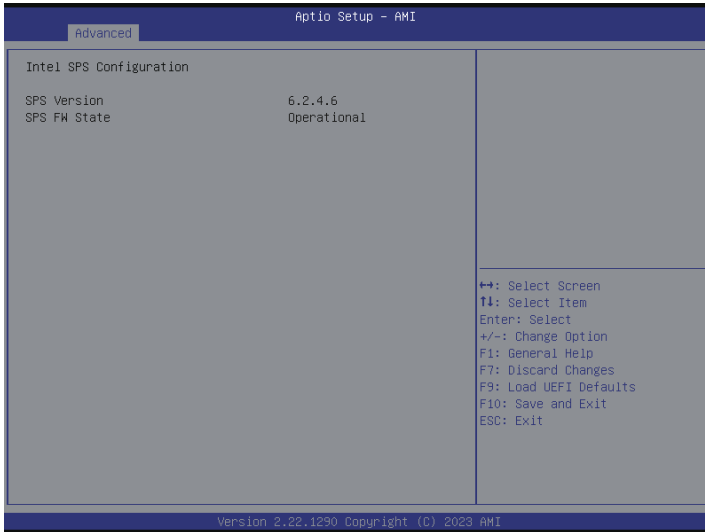

SPS screen displays the Intel SPS Configuration information, such as Operational Firmware Version and Firmware State.

3.3.13 Driver Health

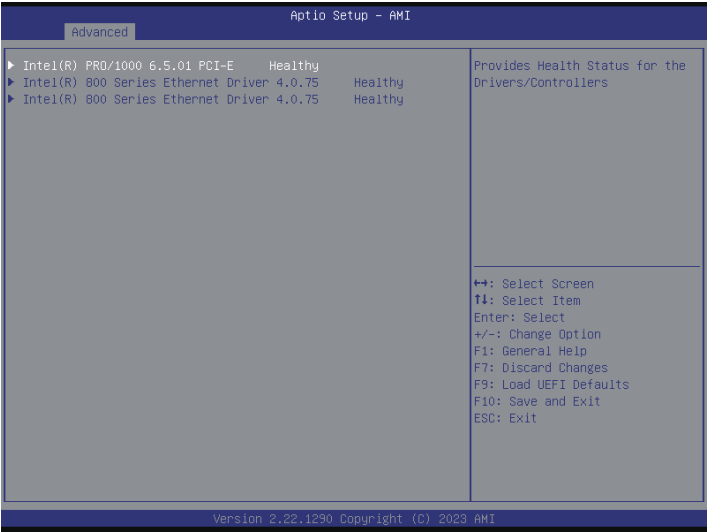


Inter (R) PRO/1000 6.5.01 PCI-E Healthy

Provides Health Status for the Drivers/Controllers

Inter (R) 800 Series Ethernet Driver 4.0.75 Healthy

Provides Health Status for the Drivers/Controllers

3.3.14 Tls Auth Configuration

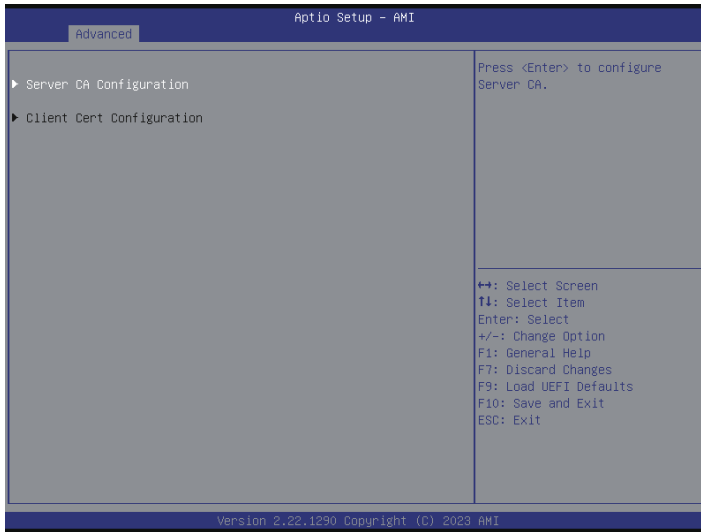

Server CA Configuration

Press <Enter> to configure Server CA.

Client Cert Configuration

Press <Enter> to configure Client Cert.

Enroll Cert

Press <Enter> to enroll cert.

Delete Cert

Press <Enter> to delete cert.

3.3.15 Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows user to update system UEFI without entering operating systems first like MS-DOS or Windows. Just save the new UEFI file to the USB flash drive, floppy disk or hard drive and launch this tool, then update the UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. Execute the Instant Flash utility, the utility will show the UEFI files and the respective information. Select the proper UEFI file to update UEFI, and reboot the system after the UEFI update process is completed.

3.4 Server Mgmt



Wait For BMC

Wait For BMC response for specified time out. BMC starts at the same time when BIOS starts during AC power ON. It takes around 255 seconds to initialize Host to BMC interfaces.

FRB-2 Timer

Use this item to enable or disable FRB-2 timer (POST timer).

FRB-2 Timer Timeout

Enter value between 1 to 30 min for FRB-2 Timer Expiration.

FRB-2 Timer Policy

Use this item to configure how the system should respond if the FRB-2 Timer expires. Not available if FRB-2 Timer is disabled.

OS Watchdog Timer

If enabled, starts a BIOS timer which can only be shut off by Management Software after the OS loads. Helps determine that the OS successfully loaded or follows the OS Boot Watchdog Timer policy.

OS Wtd Timer Timeout

Configure the OS Boot Watchdog Timer Expiration between 1 to 30 min value. If the OS Boot Watchdog Timer is disabled, this item is not available.

OS Wtd Timer Policy

Configure how the system should respond if the OS Boot Watchdog Timer expires. If the OS Boot Watchdog Timer is disabled, this item is not available.

BMC Network Configuration

Select this item to configure BMC network parameters.

DNS Configuration

Select this item to configure DNS.


System Event Log

Press <Enter> to change the SEL event log configuration.

BMC Tools

Select this item to configure about KCS control, restore AC power loss and load BMC default settings.

3.4.1 BMC Network Configuration

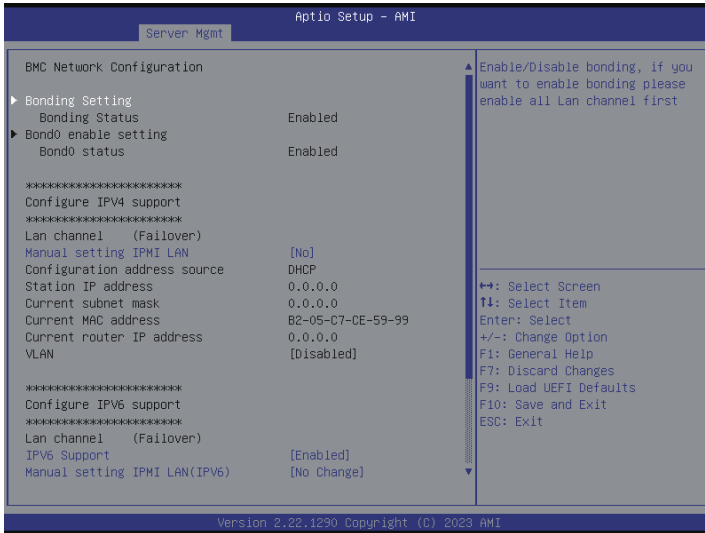

Bonding Setting

Select this item to enabled or disabled bonding. Please enable all lan channel first when want to enable bonding.

Lan Channel (Failover)

Manual Setting IPMI LAN

If [No] is selected, the IP address is assigned by DHCP. If using a static IP address, toggle to [Yes], and the changes take effect after the system reboots. The default value is [No].

Configuration Address Source

Select to configure BMC network parameters statically or dynamically(by BIOS or BMC). Configuration options: [Static] and [DHCP].

Static: Manually enter the IP Address, Subnet Mask and Gateway Address in the BIOS for BMC LAN channel configuration.

DHCP: IP address, Subnet Mask and Gateway Address are automatically assigned by the network's DHCP server.



When [DHCP] or [Static] is selected, do NOT modify the BMC network settings on the IPMI web page.



The default login information for the IPMI web interface is:

Username: admin

Password: admin

For more instructions on how to set up remote control environment and use the IPMI management platform, please refer to the IPMI Configuration User Guide or go to the Support website at: <http://www.asrockrack.com/support/faq.asp>

VLAN

Select this item to enabled or disabled Virtual Local Area Network.

If [Enabled] is selected, allows user to configure the VLAN ID and VLAN Priority.

VLAN ID: Select this item to configure the VLAN ID setting, the Maximum value is 4094 and the Minimum value is 1.

VLAN Priority: Select this item to configure the VLAN Priority setting. the Maximum value is 7 and the Minimum value is 0.

IPv6 Support


Select this item to enabled or disable IPv6 Support.

Manual Setting IPMI LAN (IPv6)

Select to configure LAN channel parameters statically or dynamically (by BIOS or BMC).

Unspecified option will not modify any BMC network parameters during BIOS phase.

3.4.2 DNS Configuration

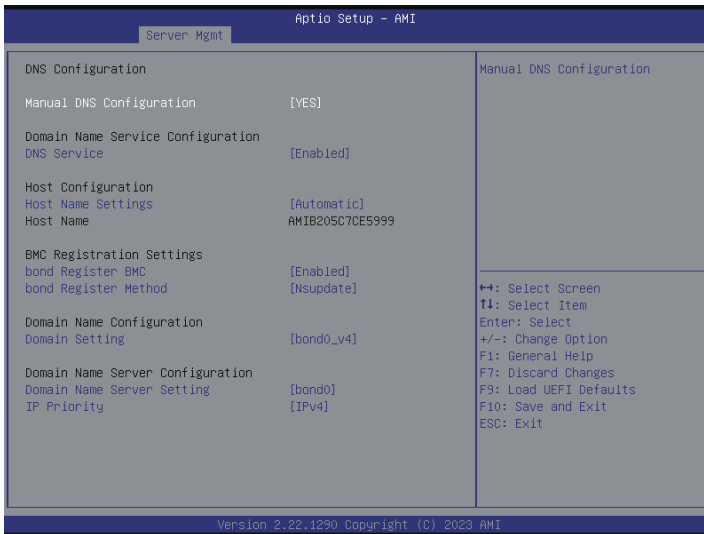

Manual DNS Configuration

Select this item to manual configure DNS.

If [YES] is selected, configure the items below.

DNS Service

Select this item to enable or disable DNS Service Configuration.

Host Name Settings

Select this item to automatic or manual Host Name Settings.

Bond Register BMC

Select this item to enable or disable Bond Register BMC.

Bond Register Method

Select this item to configure Bond Register Method with Nsupdate or DHCP client FQDN/Hostname..

Domain Setting

This item supports Manual, Bond0_v4 and Bond0_v6 Domain Settings.

Domain Name Server Setting

Select this item to configure DNS Server Settings.

IP Priority

Select this item to configure IP Priority.

3.4.3 System Event Log



SEL Components

Change this to enable or disable event logging for error/progress codes during boot.

Erase SEL

Use this to choose options for erasing SEL.

When SEL is Full

Use this to choose options for reactions to a full SEL.


Log EFI Status Codes

Use this item to disable the logging of EFI Status Codes or log only error code or only progress or both.

PCIe Device Degrade ELog Support

Use this item to enable or disable PCIe Device Degrade Error Logging Support.

3.4.4 BMC Tools

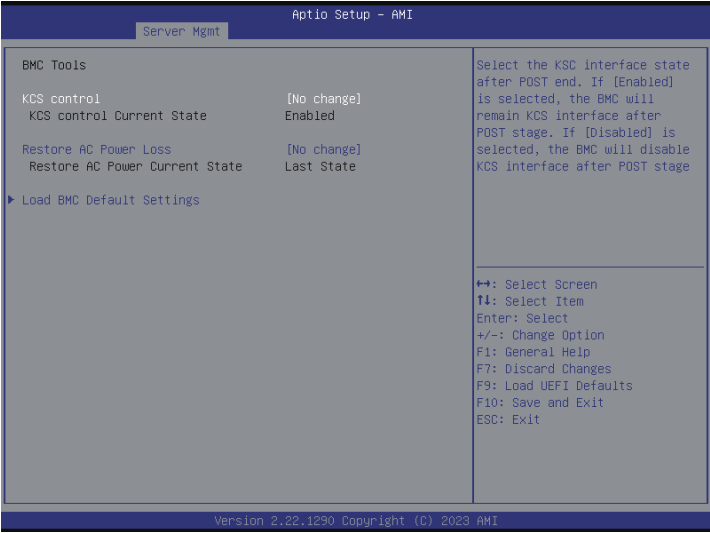

KCS Control

Select this KCS interface state after POST end. If [Enabled] us selected, the BMC will remain KCS interface after POST stage. If [Disabled] is selected, the BMC will disable KCS interface after POST stage


Restore AC Power Loss

This allows user to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers. If [Last State] is selected, it will recover to the state before AC/power loss.

Load BMC Default Settings

Use this item to Load BMC Default Settings

3.5 Event Logs

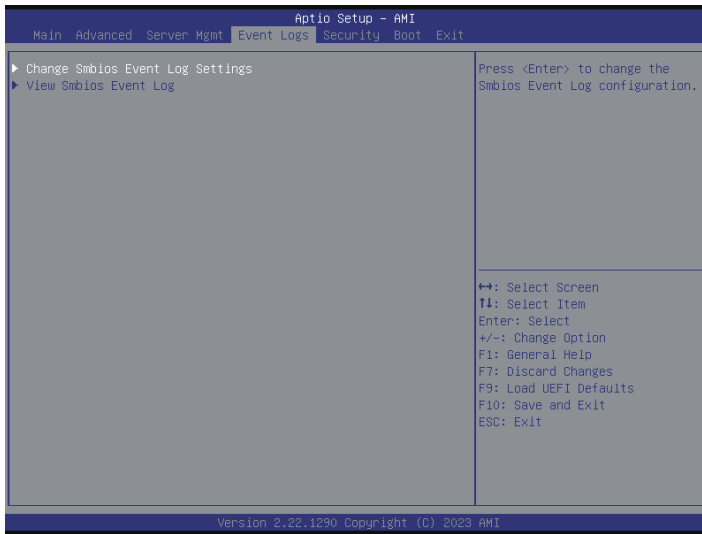

Change Smbios Event Log Settings

Select this item to configure the Smbios Event Log Settings.

When entering the item, the screen displays following sub-items:

Smbios Event Log

Select this item to enable or disable all features of the SMBIOS Event Logging during system boot.

Erase Event Log

This item is for erasing Smbios Event Log. Erasing is done prior to any logging activation during reset.

When Log is Full

Select this item to choose options for reactions to a full Smbios Event Log. The options include [Do Nothing] and [Erase Immediately].

Log System Boot Event

Select this item to enable or disable logging of System boot event.

View Smbios Event Log


Press <Enter> to view the Smbios Event Log records.



All values changed here do not take effect until computer is restarted.

3.6 Security Screen

This section allows user to set or change the supervisor/user password for the system. For the user password item is allowed user to clear it.

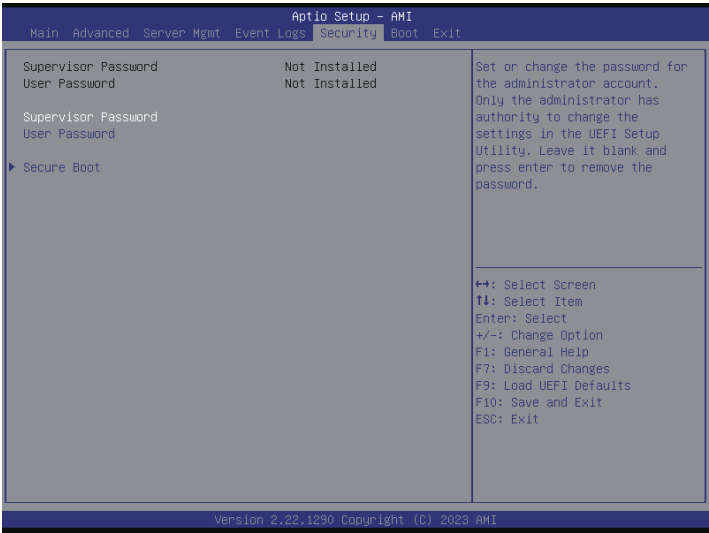

Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot


Use this item to enable or disable support for Secure Boot. If Secure Boot is Enabled, Platform Key (PK) is enrolled and the System is in User mode. The mode change requires platform reset.

Secure Boot Mode

Support Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.

3.6.1 Expert Key Management

In this section, expert users can modify Secure Boot Policy variables without variable authentication.

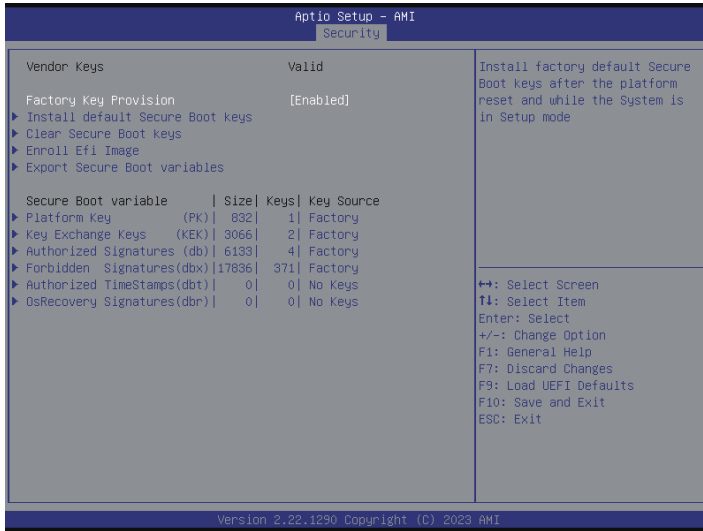

Factory Key Provision

Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

Install Default Secure Boot Keys

Please install default secure boot keys if it's the first time using secure boot.

Clear Secure Boot Keys

Use this to clear the secure boot keys.

Enroll Efi Image

Allow the Efi image to run in Secure Boot mode. Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (db).

Export Secure Boot Variables

Save NVRAM content of Secure Boot variables to files.

Platform Key(PK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

Key Exchange Keys(KEK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

Authorized Signatures(db)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

Forbidden Signatures(dbx)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

Authorized TimeStamps(dbt)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

OsRecovery Signatures(dbr)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST

b) EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX


2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, Modified, Mixed

3.7 Boot Screen

In this section, it will display the available devices on the system for user to configure the boot settings and the boot priority.

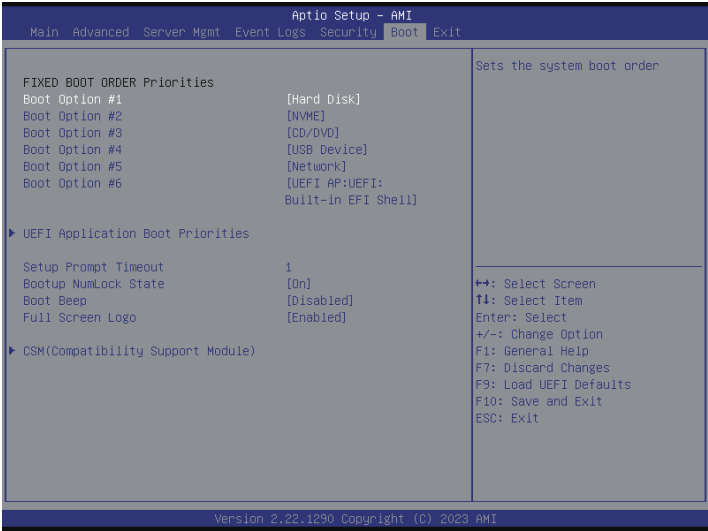

Boot Option #1~#6

Use this item to set the system boot order.

UEFI Application Boot Priorities

Specifies the Boot Device Priority sequence from available UEFI Application.

Setup Prompt Timeout

Configure the number of seconds to wait for setup activation key.

Bootup NumLock State

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

Boot Beep

Select whether the Boot Beep should be turned on or off when the system boots up. Please note that a buzzer is needed.

Full Screen Logo

Enable to display boot logo or disable to show normal POST messages. The default value is [Enabled].

CSM (Compatibility Support Module)

CSM

Select this item to enable or disable the Compatibility Support Module support.

When enabling this item, the sub-items as below are displayed:

Launch PXE OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.


Launch Storage OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

Launch Video OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

3.8 Exit Screen

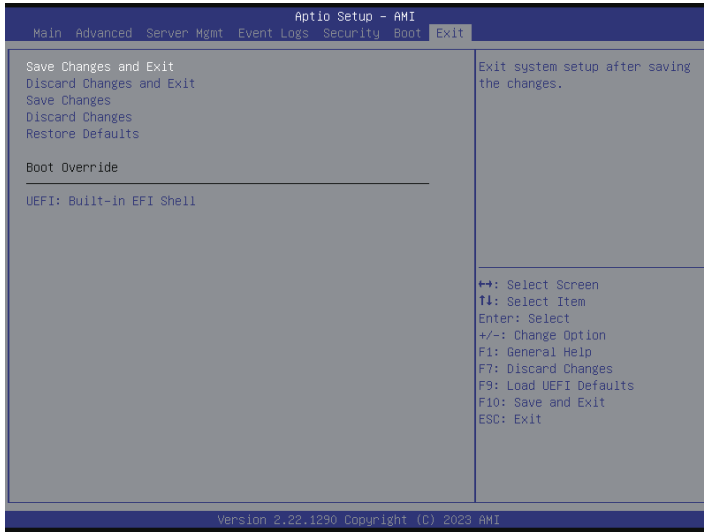

Save Changes and Exit

Exit system setup after saving the changes.

Discard Changes and Exit

Exit system setup without saving any changes.

Save Changes

Save changes done so far to any of the setup options.

Discard Changes

Discard changes done so far to any of the setup options.

Restore Defaults

Restore or load default values for all the setup questions. F9 key can be used for this operation.

Chapter 4 Software Support

After all the hardware has been installed, it suggests to go to the official website at <http://www.ASRockRack.com> and make sure if there are any new updates of the BIOS / BMC firmware for the motherboard.

4.1 Download and Install Operating System

This motherboard supports various Microsoft® Windows® Server / Linux compliant operating systems. Please download the operating system from the OS manufacturer. Please refer to the OS documentation for more instructions.

** Please download the Intel® SATA Floppy Image driver from the ASRock Rack's website (www.asrockrack.com) to the USB drive while installing OS in SATA RAID mode.*

4.2 Download and Install Software Drivers

This motherboard supports various Microsoft® Windows® compliant drivers. Please download the required drivers from the website at <http://www.ASRockRack.com>.

To download necessary drivers, go to the product page, click on the "Download" tab, choose the operating system that is used, and then download the using driver.

4.3 Contact Information

Contact ASRock Rack or want to know more about ASRock Rack, welcome to visit ASRock Rack's website at <http://www.ASRockRack.com>; or contact the dealer for further information.

Chapter 5 Troubleshooting

5.1 Troubleshooting Procedures

Follow the procedures below to troubleshoot the system.



Always unplug the power cord before adding, removing or changing any hardware components. Failure to do so may cause physical injuries and damages to motherboard components.

1. Disconnect the power cable and check whether the PWR LED is off.
2. Unplug all cables, connectors and remove all add-on cards from the motherboard.
Make sure that the jumpers are set to default settings.
3. Confirm that there are no short circuits between the motherboard and the chassis.
4. Install a CPU and fan on the motherboard, then connect the chassis speaker and power LED.

If there is no power...

1. Confirm that there are no short circuits between the motherboard and the chassis.
2. Make sure that the jumpers are set to default settings.
3. Check the settings of the 115V/230V switch on the power supply.
4. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.

If there is no video...

1. Try replugging the monitor cables and power cord.
2. Check for memory errors.

If there are memory errors...

1. Verify that the DIMM modules are properly seated in the slots.
2. Use recommended DDR5 288-pin ECC UDIMM
3. Install more than one DIMM modules that should be identical with the same brand, speed, size and chip-type.
4. Try inserting different DIMM modules into different slots to identify faulty ones.
5. Check the settings of the 115V/230V switch on the power supply.

Unable to save system setup configurations...

1. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.
2. Confirm whether the power supply provides adequate and stable power.

Other problems...

1. Try searching keywords related to the related problem on ASRock Rack's FAQ page:
<http://www.asrockrack.com/support>

5.2 Technical Support Procedures

If the problems are still unsolved, please contact ASRock Rack's technical support with the following information:

1. Contact information
2. Model name, BIOS version and problem type.
3. System configuration.
4. Problem description.

Contact ASRock Rack's technical support at:
<http://www.asrockrack.com/support/tsd.asp>

5.3 Returning Merchandise for Service

For warranty service, the receipt or a copy of the invoice marked with the date of purchase is required. By calling the vendor or going to RMA website (<http://event.asrockrack.com/tsd.asp>) to obtain a Returned Merchandise Authorization (RMA) number.

The RMA number should be displayed on the outside of the shipping carton which is mailed prepaid or hand-carried when returning the motherboard to the manufacturer. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty does not cover damages incurred in shipping or from failure due to alteration, misuse, abuse or improper maintenance of products.

Contact the distributor first for any product related problems during the warranty period.

Contact Information

If it needs to contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at <http://www.asrockrack.com>; or contact the dealer for further information. For technical questions, please submit a support request form at <https://event.asrockrack.com/tsd.asp>

ASRock Rack Incorporation

e-mail: ASRockRack_sales@asrockrack.com

ASRock Rack EUROPE B.V.

Bijsterhuizen 11-11

6546 AR Nijmegen

The Netherlands

Phone: +31-24-345-44-33

ASRock Rack America, Inc.

13848 Magnolia Ave, Chino, CA91710 U.S.A.

Phone: +1-909-590-8308

Fax: +1-909-590-1026