



SERVER ACCESSORY RSV-Cage User Manual

Thank you for purchase the RSV-Cage. This is the HDD cage for RSV-R4000 and RSV-L4000 only. It can help increase the Hard

Drive capacity of both RSV-R4000 and RSV-L4000 from 8 to 12 hard drives.

Installation Guide

Top Cover Disassembly




1. Remove the screws from each side of the Chassis. (two on each side)



2. Once the screws removed, push the top cover to remove from the chassis.




3.5" Device Installation

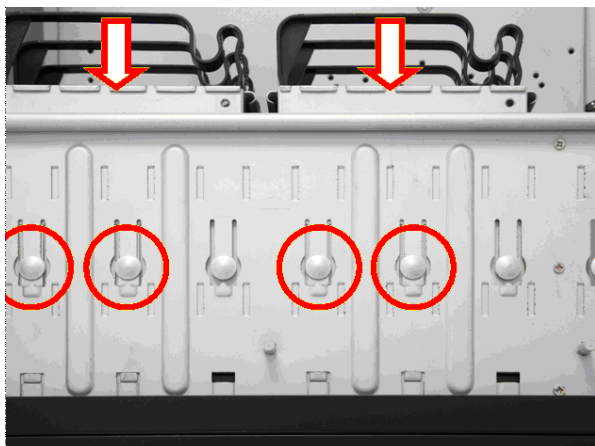

1. First press the two round shape button using your thumbs, then use your index finger to push the 3.5" module to remove it.



2. Pull the module out from the front.

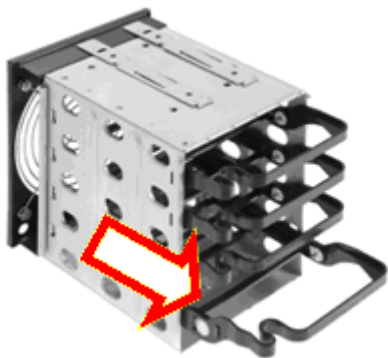

3. Pull the HDD tray out from the module to begin installation.



4. The HDD tray can be easily clipped onto 3.5" HDD.





5. To complete the 3.5"HDD installation, push the HDD tray back into the module, then push the module back to the chassis.

Adding the RSV-Cage

	<p>1. First press the two round shape button using your thumbs, then use your index finger to push the middle 3.5" module to remove it.</p>
	<p>2. Pull the middle module out from the front panel</p>

	
	<p>3. Using a flathead screw driver to press the Yellow circle to move the front panel out.</p>
	<p>4. In order to insert the cage into the ODD tray, you will need to rotate the cage so the cage rail will match with the side.</p>

	<p>5. When the rail matches, please push the cage slowly into the ODD tray.</p>
	<p>6. You will see that the Cage Rails fit right into the ODD tray's hole in the yellow circles.</p> <p>This completes the installation of the HDD cage.</p> <p>7. To remove the HDD Cage, you will need to push the two buttons (red circles) and push from behind to slide out the HDD cage.</p>

Thank you for purchasing a quality Rosewill Product.

Please register your product at: www.rosewill.com for complete warranty information and future support for your product.