



 
 




## **Server Rack-mount Sliding Rail Kit**

RSV-RL20H / RSV-RL26H


A horizontal decorative bar consisting of a grey segment on the left and a black segment on the right.

User Manual

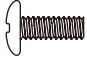
## Kit Contents

 Item	Photo	
L-bracket *4 pcs		
Slide Rail *2 pcs		
M4 Screw Pack	M4 Screw x 20 pcs 	M4 Nut x 12 pcs 
M5 Screw Pack	M5 Screw x 12 pcs 	M5 Washer x 4 pcs 

## Overview


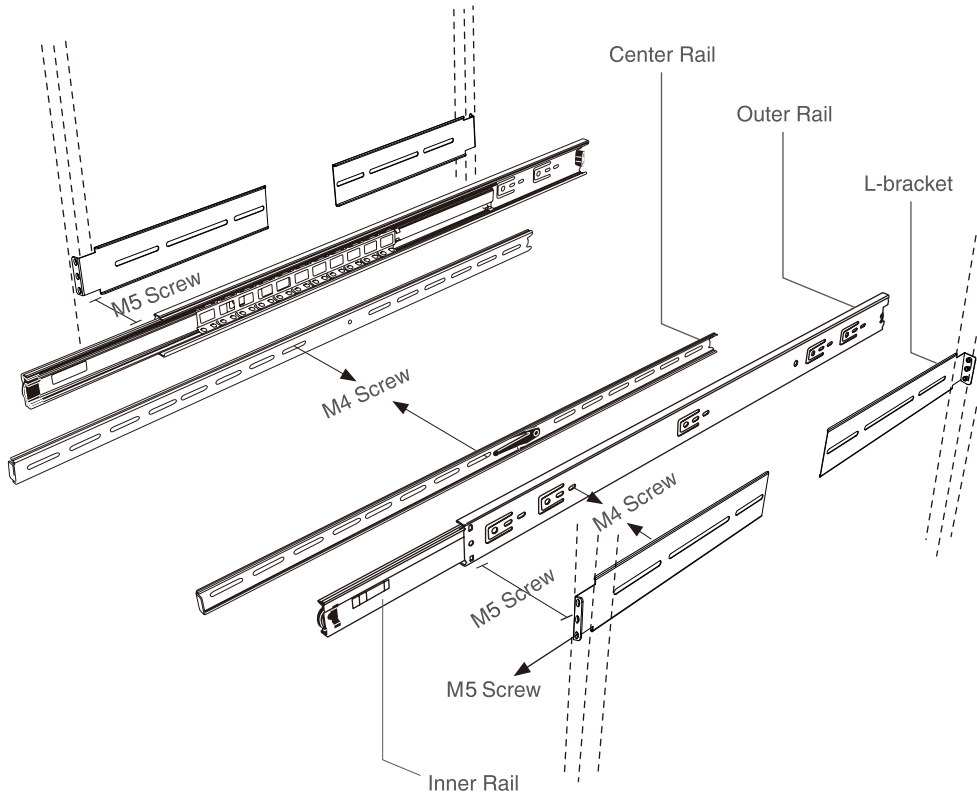


## 1 Slide Rail Structure

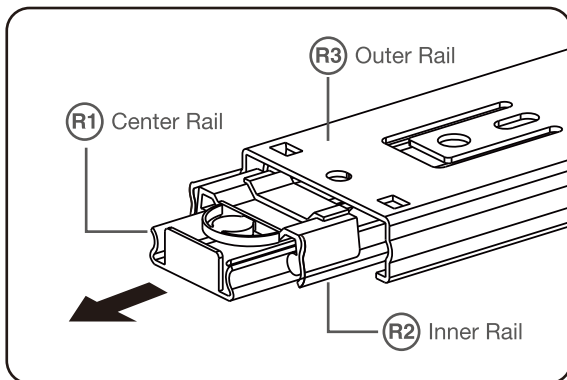


The slide rail is consist of three rails: (R1) Center Rail, (R2) Inner Rail, (R3) Outer Rail

## 2 Separating the Center Rail

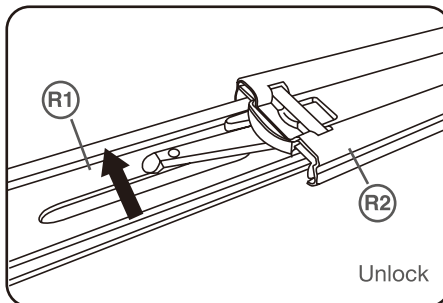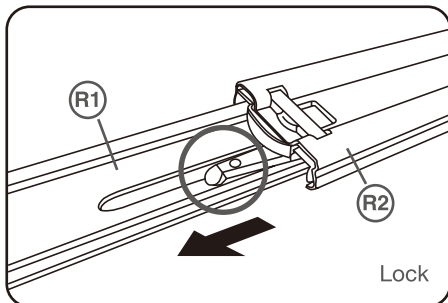

Pull (R1) all the way out to its maximum slide position. Locate and release the locking lever by sliding it upward. This will release (R1) from (R2).


### 3 Installing the Center Rail

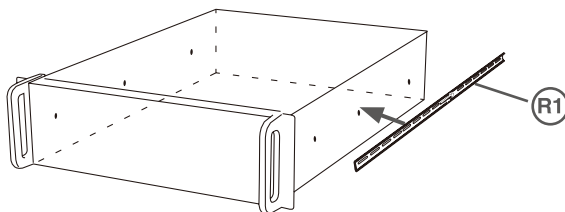


Place and align (R1) with mounting points on the server chassis and install it using M4 Screw pack .

**Note: 1. Do not screw on the handles.**

**2. If installing the center rail onto a 2U server chassis, keep the rail 1 to 2 inches away from the handles for better fits.**

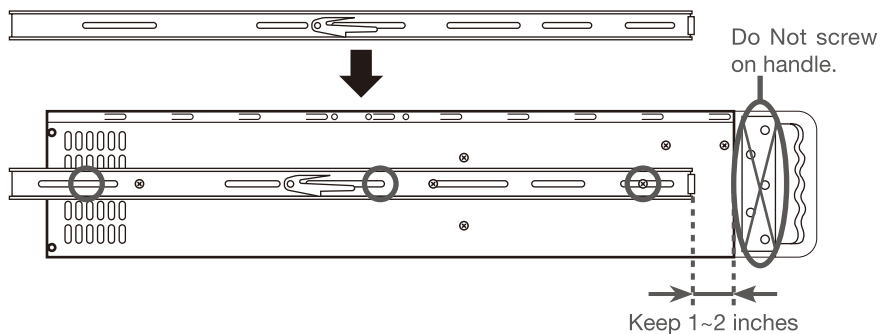


### 4 Installing the L-Bracket

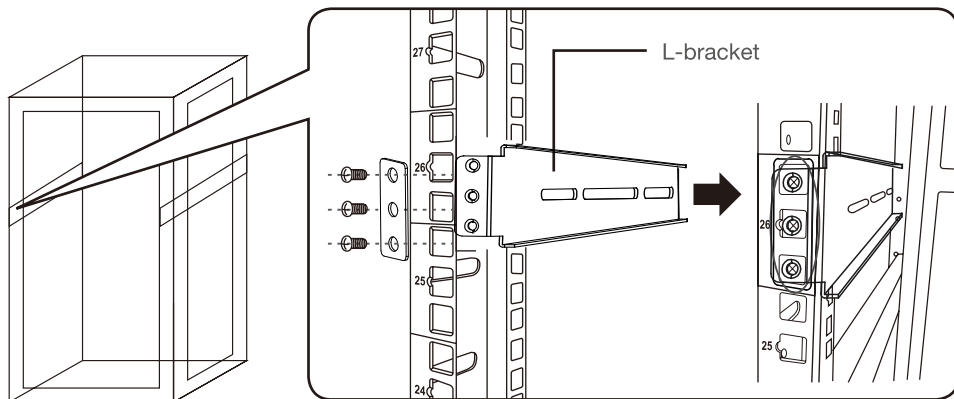


Install the L-bracket on the cabinet frame using M5 Screw Pack & M5 Washer.

**Note: Please make sure to tighten all the screws until they are snug. Do not over tighten.**

## 5 Installing the Slide Rail

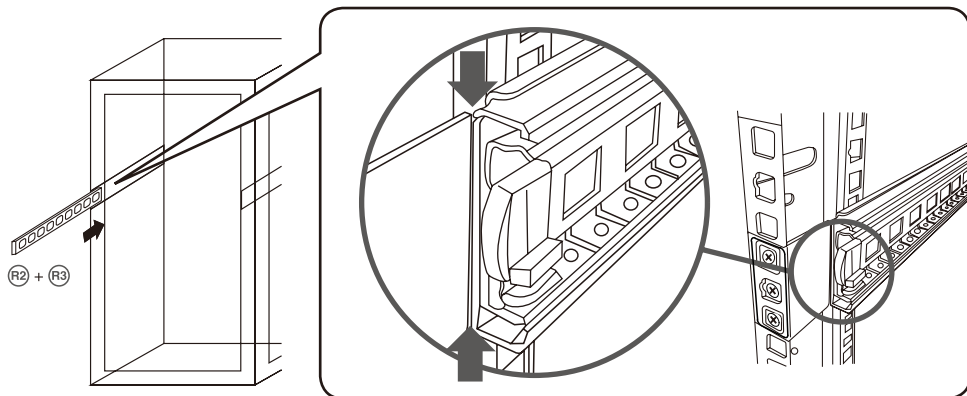


Align and slide the tip of the slide rail ( (R2) + (R3) ) into the L-bracket between the two arrows.

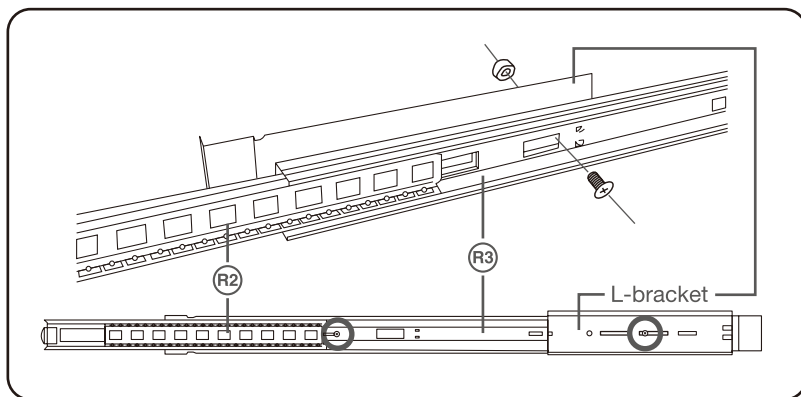


Install the outer rail (R3) on to the L-bracket using M4 Screw pack .

Now the L-bracket, (R2) and (R3) should be well installed on the rack.

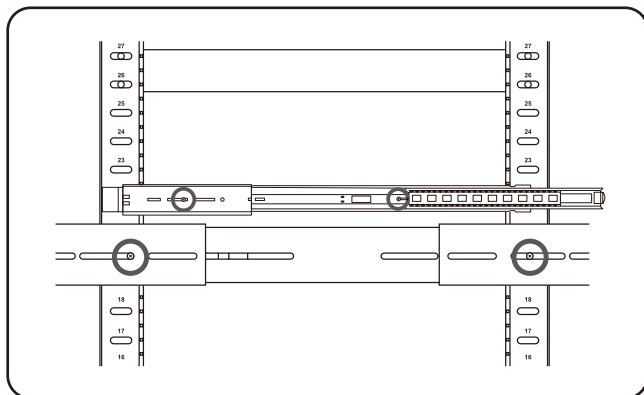

Repeat the step 2 through 5 to install another outer rail.

## 6 Installing the Chassis

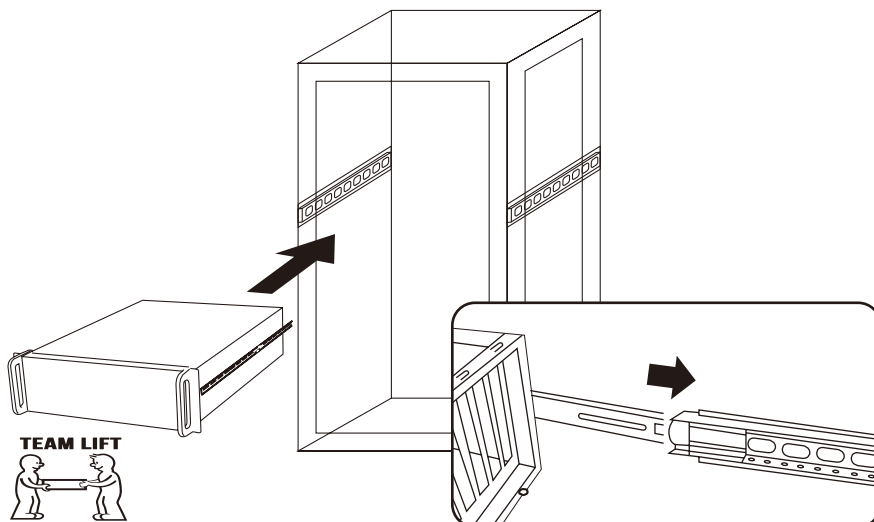

Slide the server chassis into position by aligning and sliding (R1) onto the slide rail (R2 and R3) on the rack.

**Note:** Installation is suggested to be accomplished by two persons each lifting one side of the chassis for easier aligning the chassis with the slide rail when sliding the chassis onto the rack.



*Rosewill*® **Technical Support Information**  
techsupport@rosewill.com 1-800-575-9885

---

*Thank you for purchasing a quality Rosewill product.  
Please register your product at: [www.rosewill.com](http://www.rosewill.com)  
for complete warranty information and support for your product.*