



### **4-Post Open Frame Racks Series**

RSR-4P12U001/4P25U001/4P42U001

**User Manual** 

## Reserve 4-Post Open Frame Racks RSR-4P12U001/4P25U001/4P42U001 User Manual

#### **Section 1: Parts Identification**

S/N	Name		Qty.(pcs)			
0/14			12/25U	42U		
1.1 Rack Components						
1	"Le	ft" Vertical Rail	2	2		
2	"Rig	ght" Vertical Rail	2	2		
3		e Bracket	2	2		
(4)	Bottom Beams	Bottom Corner Section	4	4		
(5)	Bott Bea	Bottom Center Section	2	2		
6	ß	Top Left Corner Section	2	2		
$\bigcirc$	Top	Top Right Corner Section	2	2		
8		Top Center Section	2	2		
9	Top Bracket		2	2		
1.2 Rack Assembly Hardwares						
10	M8 Bolt		28	28		
11	M8 Washer		28	28		
12	M8 Wrench		1	1		
1.3 Equipment Mounting Hardwares						
13	M6 Cage Nut		50	50		
14	PVC Cup Washer		50	50		
(15)	M6 Phillips-Head Screw 50 50			50		
1.4 Cable Management Hardwares						
16	Cable Management Hook 8 16			16		
	Hook Mounting Screw 8			16		
1.5 Tool Kit						
18	Phillips screwdriver 1			1		



#### 1.2 Rack Assembly Hardwares and Tool Kit



1.3 Equipment Mounting Hardwares



1.4 Cable Management Hardwares



Rosewill 4-Post Open Frame Racks RSR-4P12U001/ 4P25U001/4P42U001 User Manual

#### Section 2: Rack Assembly

#### 2.1 Install the Top Beams and Bottom Beams

#### Needs:

4 x	Bottom Corner Section	(4)
2 x	Bottom Center Section	5
2 x	Top Left Corner Section	6
2 x	Top Right Corner Section	(7)
2 x	Top Center Section	®.

12x M8 Bolt, Washer

Assemble the top beam( 6 (7) (8)) and bottom beams( 4 (5)) as shown below. Refer to the table below to identify the desired mounting depth (22" to 40" available) and assemble corner and center sections at the corresponding index numbers on each side.

For example, for a 33 inch depth, bolt one corner section ((4), (6)) to index #5 and the other corner section ((4), (7)) to index #6 onto the center section ((5), (8)) with M8 bolt (10) and washer (11).



Note: Depth from 22 to 40 inches (1-inch increments) is available by adjusting the beams at corresponding silkscreen numbers on the beams.

Rack Adjustable Depth Index Numbers				
Mounting Depth	Index Numbers			
22 in.	0 and 0			
23 in.	1 and 0			
24 in.	1 and 1			
25 in.	1 and 2			
26 in.	2 and 2			
27 in.	2 and 3			
28 in.	3 and 3			
29 in.	3 and 4			
30 in.	4 and 4			
31 in.	4 and 5			
32 in.	5 and 5			
33 in.	5 and 6			
34 in.	6 and 6			
35 in.	6 and 7			
36 in.	7 and 7			
37 in.	7 and 8			
38 in.	8 and 8			
39 in.	8 and 9			
40 in.	9 and 9			

We suggest install it from the left part of the server rack. Please image the server rack is laid down.

#### 2.2 Install the Left Part

# Needs:Use of<br/>assem1x Top Beam (consist of ©?®)assem<br/>vertica1x Bottom Beam (consist of ④③④)vertica<br/>using1x Left Vertical Rail①using1x Right Vertical Rail②2x<br/>2x Base Bracket③2x Top Bracket④6x M8 Bolt, Washer⑩①

Use one top beam((O, O)) and one bottom beam((O, O)) assembled in step 1, line up one left (1) and one right (2) vertical rails, followed by a base (3) and top (9) bracket by using M8 bolts (10) with washers (11) as shown below.



NOTE: To facilitate final assembly, it is recommended to hand-tighten the bolts first. After all parts have been bolted together then tighten them firmly.

## Reserve 4-Post Open Frame Racks RSR-4P12UO01/ 4P25U001/4P42U001 User Manual

#### 2.3 Install the Right Part



Congratulations! You have finished the installation of server rack.

#### Section 3: Optional Accessories Installation

#### 3.1 Install the Cable Management Hooks

Screw the included cable management rings onto the assembled rack as shown below.



Rosewill®

Reservill<sup>®</sup> Technical Support Information techsupport@rosewill.com 1-800-575-9885

Thank you for purchasing a quality Rosewill product. Please register your product at: www.rosewill.com for complete warranty information and support for your product.