


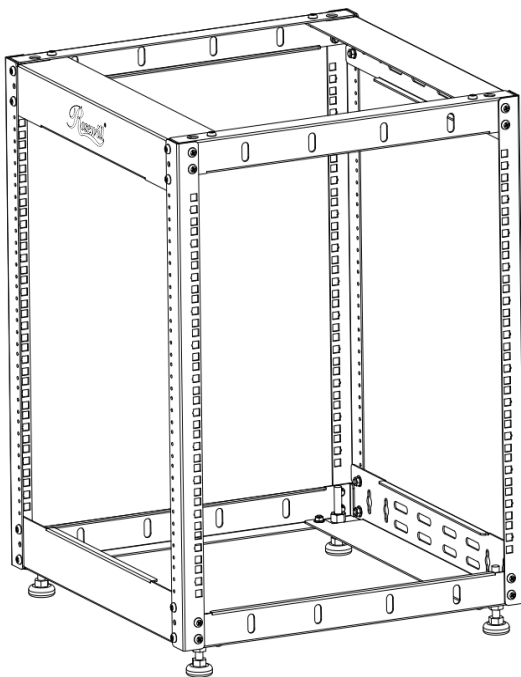

Wall Mount Open Frame Rack Series


RSWR-12U001/ 15U001/ 20U001

User Manual

We'll continue to improve the user manual and update it on Rosewill.com,
any feedback from you will be appreciated.

Section 1: Parts Identification

S/N	Name	QTY.(pcs)	
		12U	15U 20U
1.1 Rack Components			
①	Front Bracket	2	2
②	Vertical Rail	4	4
③	Horizontal Beam	4	4
④	Leveling Feet	4	4
⑤	Rear Mount Bracket	2	2
1.2 Rack Assembly Hardwares			
⑥	M6*60 Expansion Anchor Bolt	4	4
⑦	M6 Flange Nut	24	24
⑧	M6*12 Phillips Head Screw	40	40
1.3 Equipment Mounting Hardwares			
⑨	M6*12 Screw	12	24
⑩	M6 Cage Nut	12	24
⑪	M5*12 Self-tapping Screw	12	24

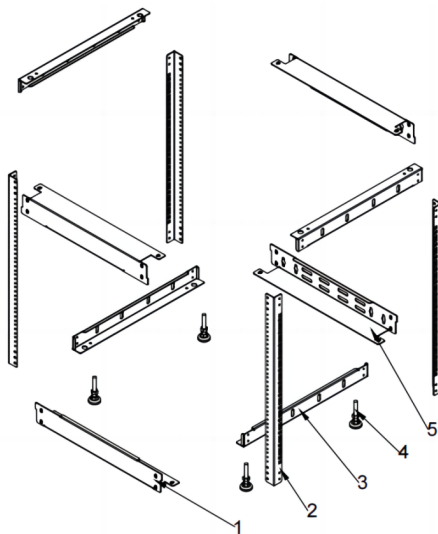


S/N	Pic
⑥	
⑦	
⑧	
⑨	
⑩	
⑪	
④	

Tips: Check the quantities of the items before assembly

Section 2: Rack Assembly


2.1 Install the left and right frames

Use M6 phillips head screw to connect top & bottom horizontal beams to the vertical rails.(There are two frames, left and right)

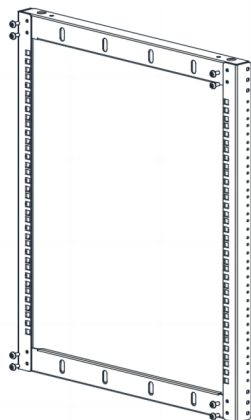



2.2 Install front bracket to the frame

Use M6 phillips head screw and M6 flange nut

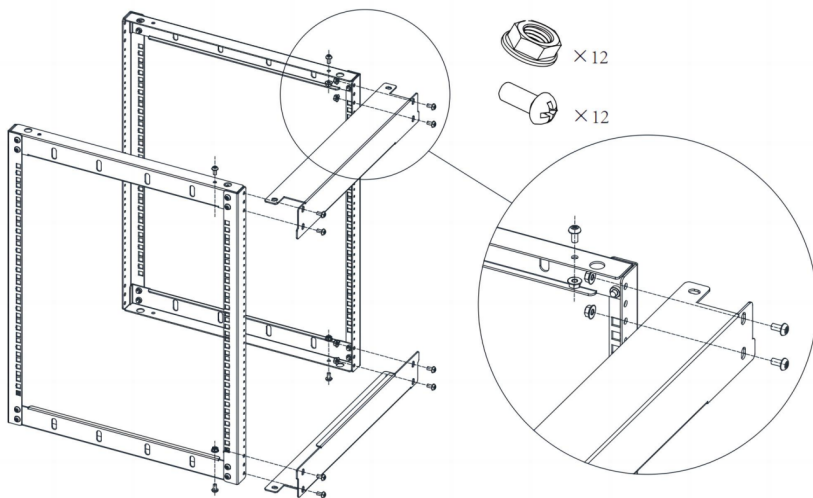


2.3 Install rear mounting bracket

Use M6 phillips head screw and M6 flange nut

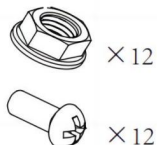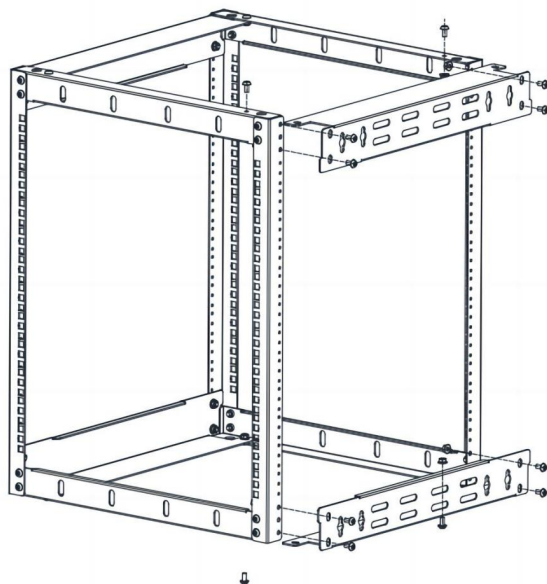


2.4 Install the leveling feet

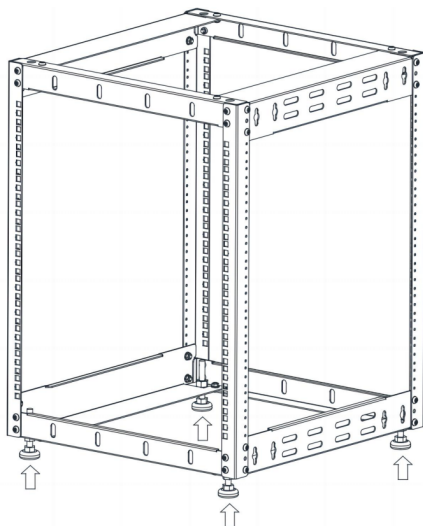

2.5 Install to the wall

use 4pcs M6*60 Expansion anchor bolt to the wall

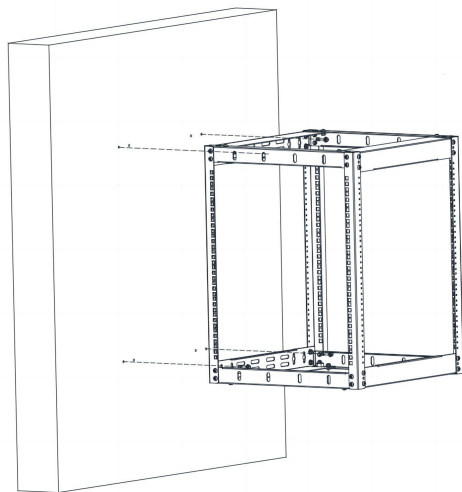

Rosewill[®] **Technical Support Information**
techsupport@rosewill.com 1-800-575-9885

Thank you for purchasing a quality Rosewill product.
Please register your product at: www.rosewill.com
for complete warranty information and support for your product.