

## Wall Mount Open Frame Rack Series


RSWR-12U001/ 15U001/ 20U001




 



**User Manual**

We'll continue to improve the user manual and update it on [Rosewill.com](http://Rosewill.com), any feedback from you will be appreciated.

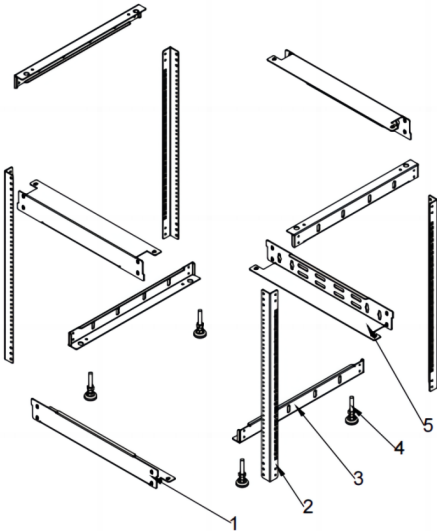Section 1: Parts Identification

S/N	Name	QTY.(pcs)	
		12U	15U 20U
1.1 Rack Components			
①	Front Bracket	2	2
②	Vertical Rail	4	4
③	Horizontal Beam	4	4
④	Leveling Feet	4	4
⑤	Rear Mount Bracket	2	2
1.2 Rack Assembly Hardwares			
⑥	M6*60 Expansion Anchor Bolt	4	4
⑦	M6 Flange Nut	24	24
⑧	M6*12 Phillips Head Screw	40	40
1.3 Equipment Mounting Hardwares			
⑨	M6*12 Screw	12	24
⑩	M6 Cage Nut	12	24
⑪	M5*12 Self-tapping Screw	12	24




S/N	Pic
⑥	
⑦	
⑧	
⑨	
⑩	
⑪	
④	

Tips: Check the quantities of the items before assembly

## Section 2: Rack Assembly


### 2.1 Install the left and right frames

Use M6 phillips head screw to connect top & bottom horizontal beams to the vertical rails. (There are two frames, left and right)

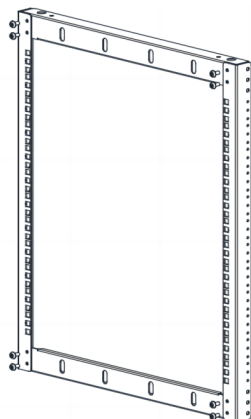



### 2.2 Install front bracket to the frame

Use M6 phillips head screw and M6 flange nut

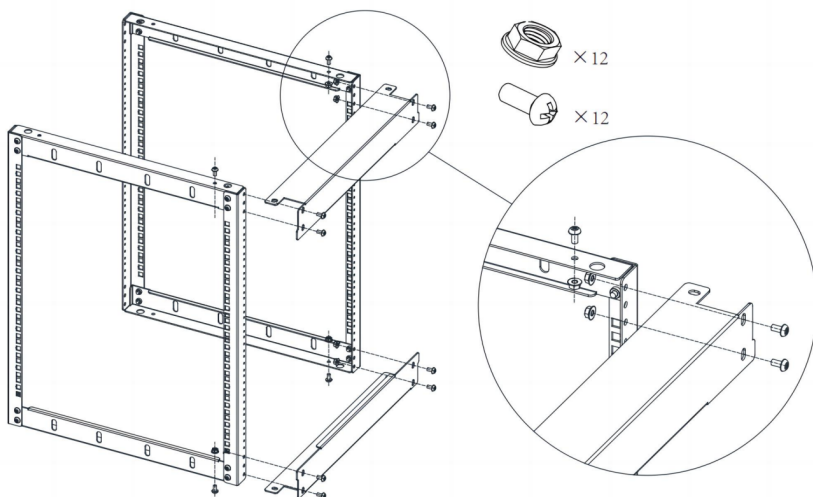


## 2.3 Install rear mounting bracket

Use M6 phillips head screw and M6 flange nut

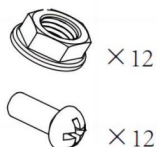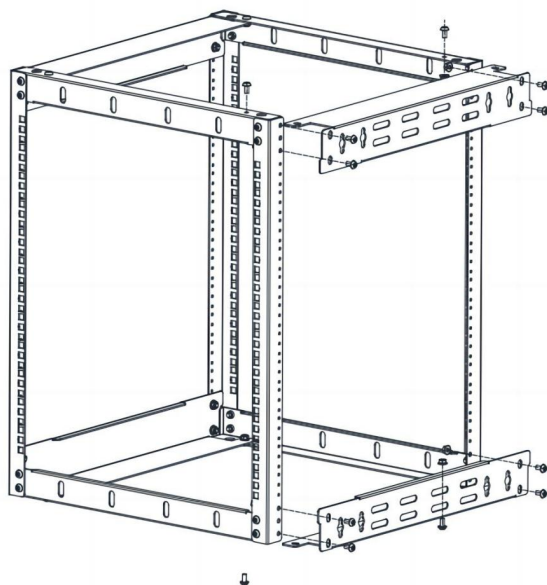


## 2.4 Install the leveling feet

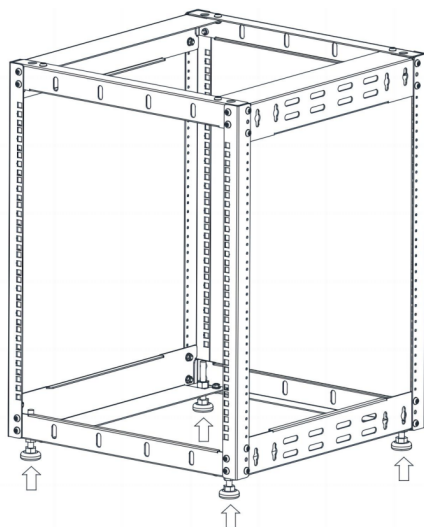

## 2.5 Install to the wall

use 4pcs M6\*60 Expansion anchor bolt to the wall

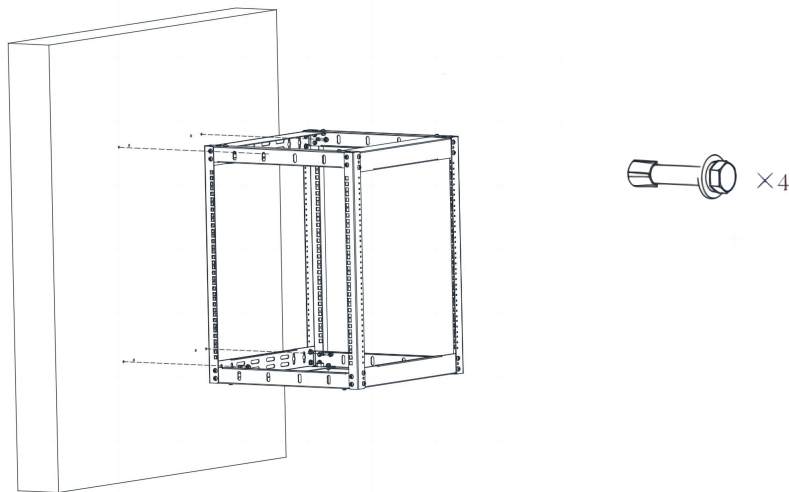

*Rosewill*<sup>®</sup> **Technical Support Information**  
techsupport@rosewill.com 1-800-575-9885

---

Thank you for purchasing a quality Rosewill product.  
Please register your product at: [www.rosewill.com](http://www.rosewill.com)  
for complete warranty information and support for your product.