



Explore more at *Rosewill*.

Technical Ssupport Information

techsupport@rosewill.com 1-800-575-9885  
www.rosewill.com

Thank you for purchasing a quality Rosewill product.  
Please register your product at www.rosewill.com for complete warranty information and support for your product.

avoid danger.

2.USAGE AND STORAGE

- 1.Do not block or insert foreign objects into the suction and ports during operation, as this may damage the product.
2. Do not immerse this product in water.
3. Do not use this product in damp environments. Keep it dry at all times.
4. Do not operate the product with wet hands.
5. Do not use near flammable gases or materials (such as volatile agents, paint thinners, sprays, etc.), as this may cause an explosion or fire due to a short circuit.
6. Do not leave the product powered on unattended, as it may result in a fire hazard caused by a short circuit.
7. Do not store the product in areas with high humidity.
8. Keep the product out of reach of children and infants.
9. Do not use this product near bathtubs, showers, washbasins, or other containers filled with water.
10. Do not place the air inlet too close to your hair to prevent it from being sucked into the fan.

WARRANTY

Register One (1)Year Limited WarrantyThis One (1)

Year Limited Warranty applies to purchases made from authorized retailers of Rosewill Inc.("Rosewill") by the original appliance owner and is not transferable. Please visit www.rosewill.com to register your new Rosewill appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your

appliance) along with your name and email address.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to techsupport@rosewil.com or call to 1-800-575-9885.We will try to contact you as soon as possible. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for q uality inspection.Rosewill is not responsible for shipping costs related to warranty service.When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the prob-lem you are encountering with the appliance.

 


Appliances need to be disposed of separately for scrapThrowing them directly into the garbage is prohibited.

Rosewill®



Explore more at *Rosewill*.

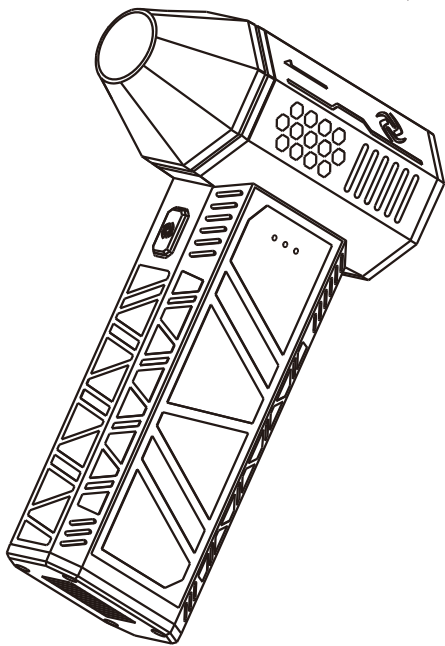


ELECTRIC AIR DUSTER  
RHAD-25001

PRODUCT DESCRIPTION

Thank you for choosing Rosewill electric air duster product. This document contains important information regarding your safety, legal rights, and responsibilities. Please read it carefully and follow the instructions to properly set up and use the product. Failure to comply with the guidelines and precautions outlined here may result in injury to yourself or others, and may cause damage to this product or other surrounding equipment.

Any illegal use of this product is strictly prohibited. Users are solely responsible for all actions related to the purchase and use of the product. Our company assumes no liability for any risks or consequences (including direct or indirect third-party losses) arising from the setup or use of this product by end users. We do not provide support or services for products obtained through unauthorized channels or used for unknown or unintended purposes.

 
PRODUCT OVERVIEW

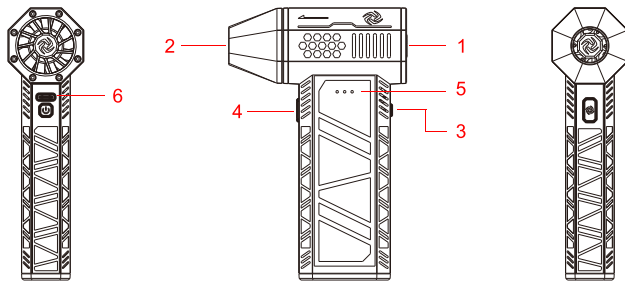

1.Air inlet 2.Air outlet 3.power button(On/Off/speed switch)

4. Start 5. Speed indicator/Battery indicator 6. Charging port

 PRODUCT LIST

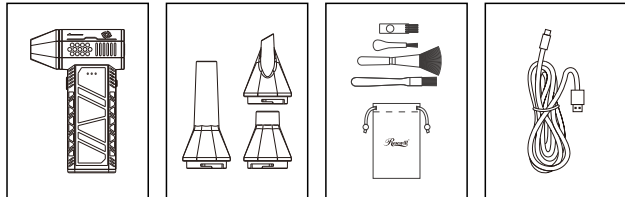

Device Nozzles Brush set Cable

INSTRUCTION

1. POWER ON/OFF

Long press the power button to turn the machine on or off. After powering on, the device enters standby mode.

2. START BLOWING

Manual Mode: Press and hold the start button to activate the blower at third gear. Release the button to stop.  
Automatic Mode: Click the start button to start the motor; click again to stop. Only the first and second gears can be used in this mode. The third gear cannot be activated.

3. GEAR SHIFT

After powering on, click the power button to cycle through the gears in sequence (defaults to third gear when powered on).  
First gear: Gentle breeze  
Second gear: Strong breeze  
Third gear: Super breeze

4. CHARGING

The product supports fast charging. However, it cannot be used while charging.

5. BATTERY INDICATOR LIGHT

While Charging: Indicator lights flash in sequence according to the battery level.

Fully Charged: All three indicator lights stay on.

Low Battery: All three lights flash.

Battery Levels:3 lights on – 100% 2 lights on – 50% 1 light on – 25%

6. INTELLIGENT PROTECTION FUNCTION

The device will automatically shut down if there is no operation within 3 minutes in standby mode.

PRODUCT PARAMETERS

Product Name	Electric Air Duster
Product Model	RHAD-25001
Battery Capacity	2500mAh*2
Max Power	120W
Max Running Time	4h (first gear) 36min (second gear) 19min (third gear)
Type-C Charging	≤ 3.5h
Product Size	131 * 86 * 37mm
Product Weight	205g

MAINTENANCE

Please keep this product out of reach of children and pets.  
Store in a dry environment. Do not place the product in high-temperature areas or leave it in a car exposed to direct sunlight.  
Do not overcharge or over-discharge the battery, as this may damage the battery cells.  
Regularly remove any attachments from the air duster and suction port.  
Do not use nails or sharp objects to press or scratch the suction or blowing ports, as this may damage the product.  
Do not use alcohol, nail polish remover, or harsh detergents to clean this product, as it may cause malfunction, breakage, or discoloration.

ATTENTION

To reduce the risk of malfunction, electric shock, injury, fire, death, and equipment or property damage, please be sure to follow the following safety precautions.

1.CHARGING CABLE

- 1.Do not use when the charging cable is damaged or the product overheats, as it may cause burns, electric shock, or fire due to short circuits.
- 2.Do not unplug or insert charging wires when your hands are wet, as this may cause electric shock and injury.
- 3.Do not damage, modify, forcefully bend, pull, twist the charging line, or place heavy objects or squeeze the charging line during charging, otherwise it may cause electric shock or fire due to short circuits.
- 4.If the charging cable is damaged, it is necessary to replace it to