



## PRODUCT OVERVIEW


### Product Diagram

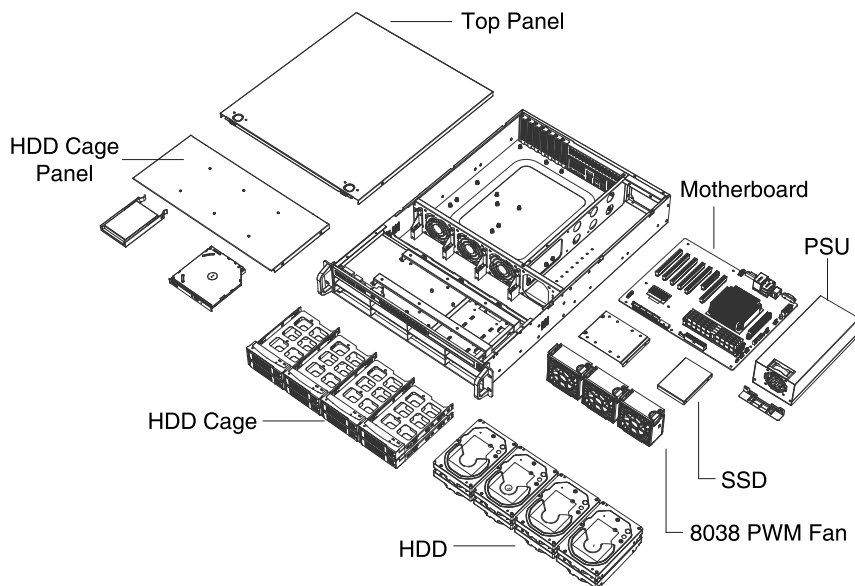

**Dimensions (W x H x D): 650 x 431 x 88 mm (25.59" x 16.97" x 3.46")**

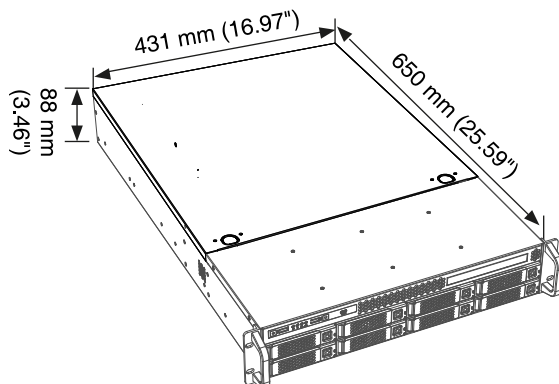

# Accessory Kit

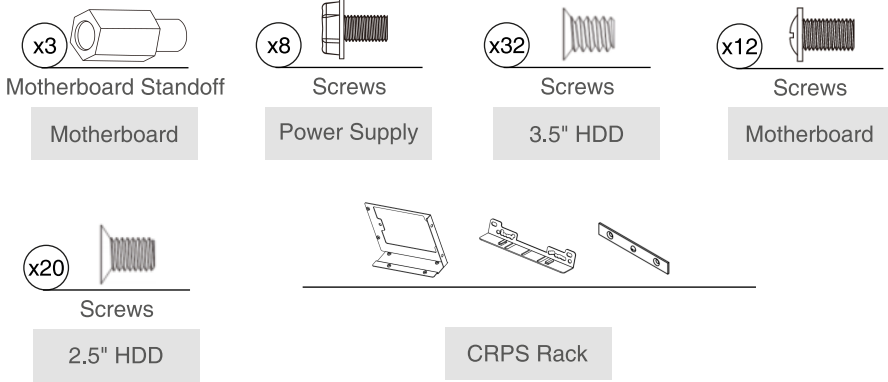


## INSTALLATION GUIDE

Please remove all packaging materials before proceeding to disassembly/assembly.

### 1. Remove the Top Panel



Loosen the two screws on the side panel, then press and hold both one-click locks while gently removing the top panel.

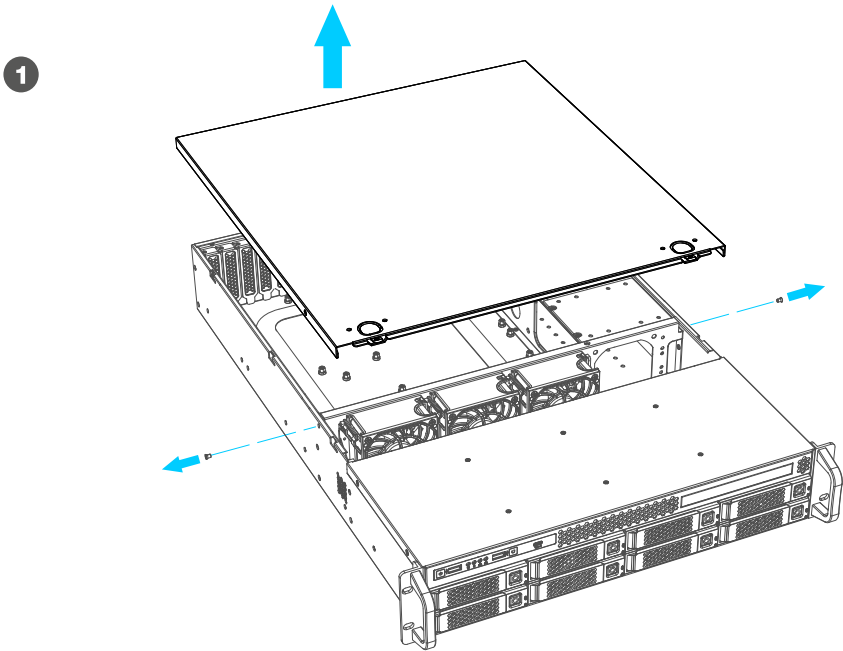

## 2. Install the HDD & SSD


For SSD: Secure the SSD to the mounting plate and reinstall it; for HDD: Mount the HDD onto the hot-swap tray and reinsert the HDD cage.

2

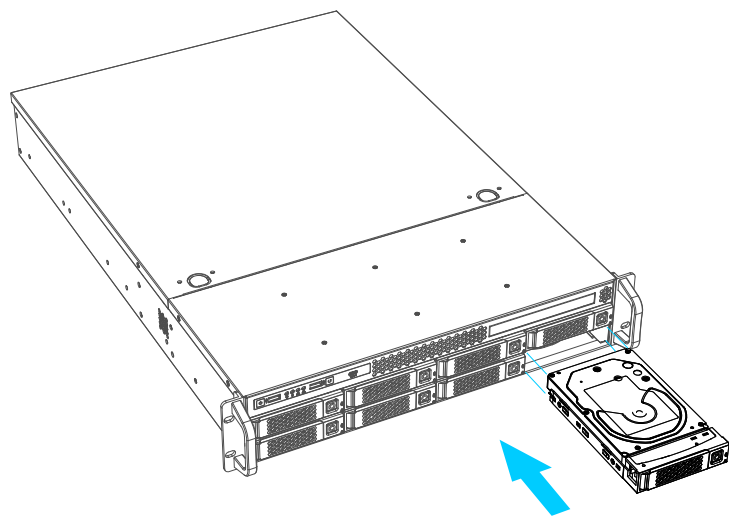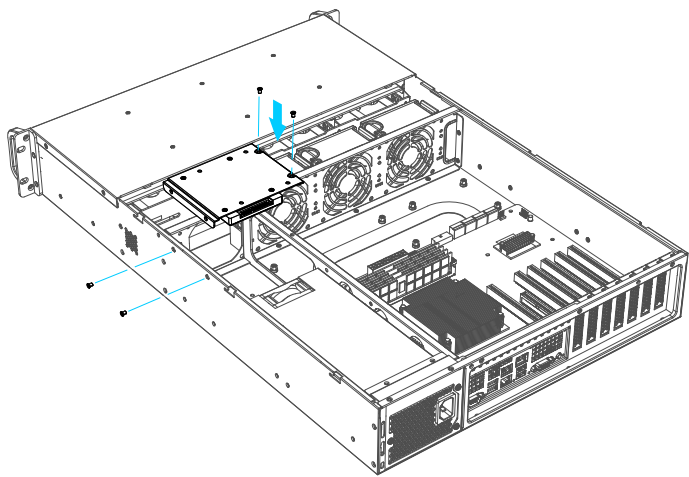


**3. Install the Motherboard**

3

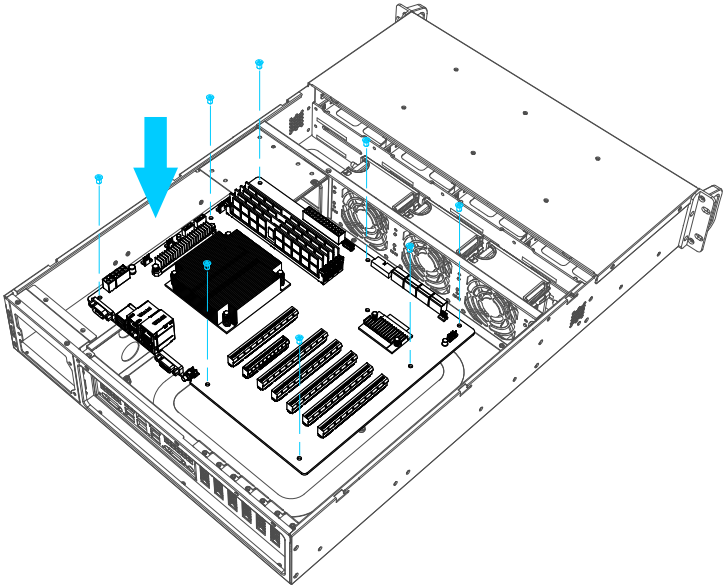

**4. Install the PSU**

4

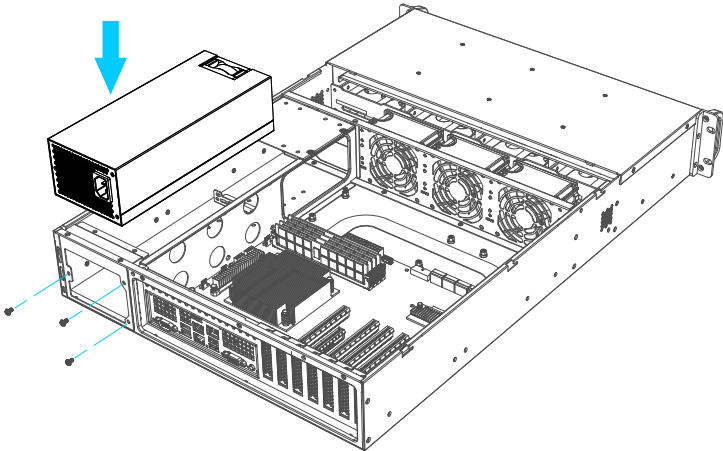

## SPECIFICATIONS

| Model                     |                                                                  |
|---------------------------|------------------------------------------------------------------|
| Model Name                | RSV-H208                                                         |
| Specifications            |                                                                  |
| Chassis Type              | Rackmount                                                        |
| Form Factor               | 2U                                                               |
| Color                     | Silver & Black                                                   |
| Case Material             | SGCC                                                             |
| Motherboard Compatibility | 12" x 13" E-ATX, 12" x 9.6" ATX, 11.2" x 8.2" Mini-ATX and below |
| Power Supply              | 2U /CRPS                                                         |
| Hot-Swap Drive Bays       | 8 (SFF8643 with SGPIO and Temperature Control)                   |
| External 3.5 Drive Bays   | -                                                                |
| Internal 3.5" Drive Bays  | -                                                                |
| Internal 2.5" Drive Bays  | -                                                                |
| Expansion Slots           | 7                                                                |
| Front USB                 | 2 x USB 3.0 / 1 x USB 3.2 Type C                                 |
| 80mm Fans                 | Middle: 3 x 80mm fans (3 x 8038 PWM fan included)                |
| 120mm Fans                | -                                                                |
| Physical Specification    | 650 x 431 x 88 mm / 25.59" x 16.97" x 3.46"                      |



Technical Support Information techsupport @ rosewill.com 1-800-575-9885  
Please register your product at [www.rosewill.com](http://www.rosewill.com) for complete warranty information and support for your product.



RSV-H208