



PRODUCT OVERVIEW


Product Diagram

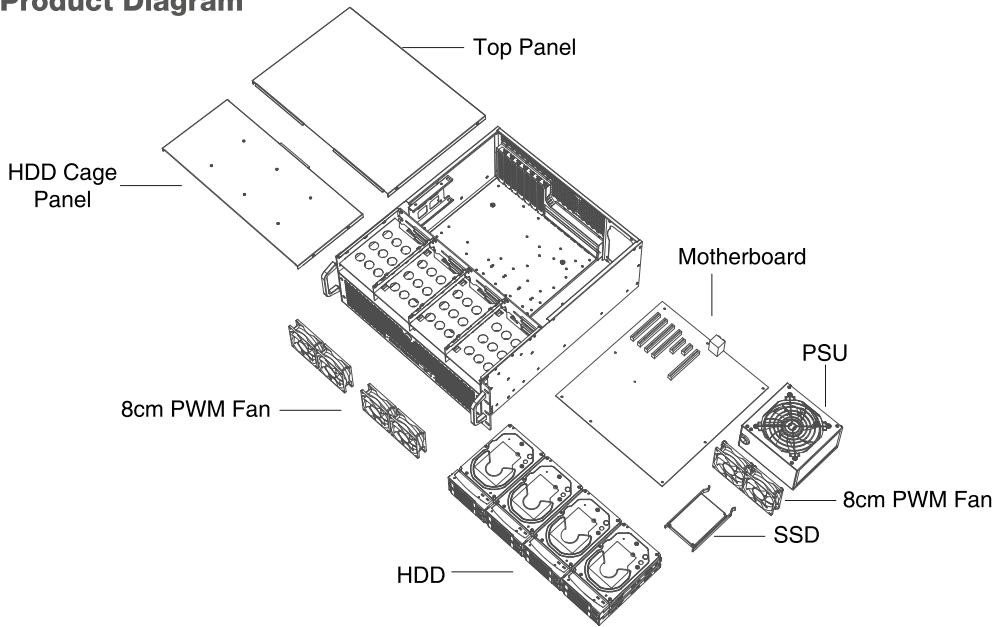

Dimensions (W x H x D): 480 x 431 x 175 mm (18.90" x 16.97" x 6.89")

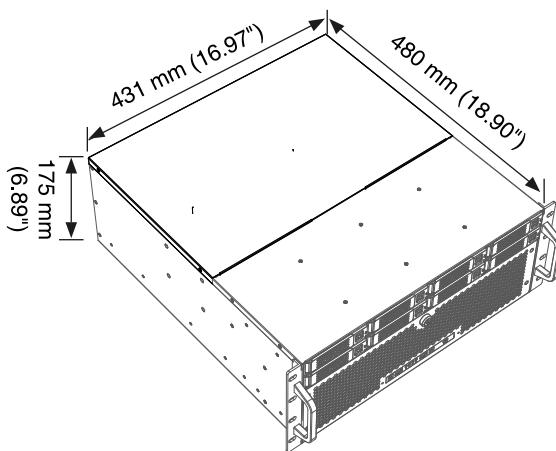

Accessory Kit

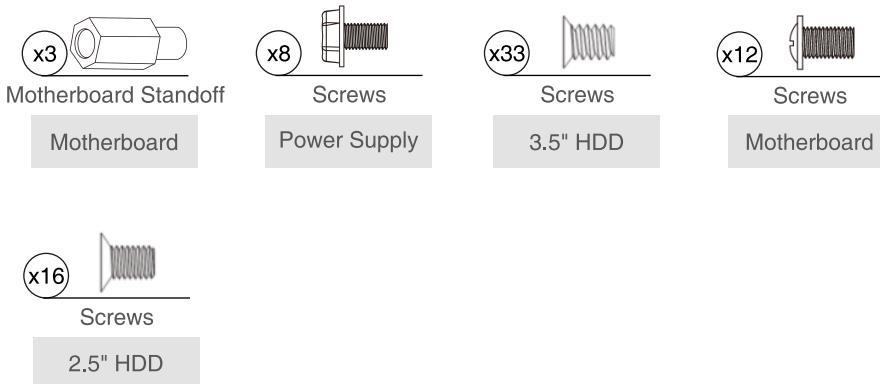


INSTALLATION GUIDE

Please remove all packaging materials before proceeding to disassembly/assembly.

1. Remove the Top Panel


Loosen the four screws on the side panel, then gently push it backward and remove the top panel.

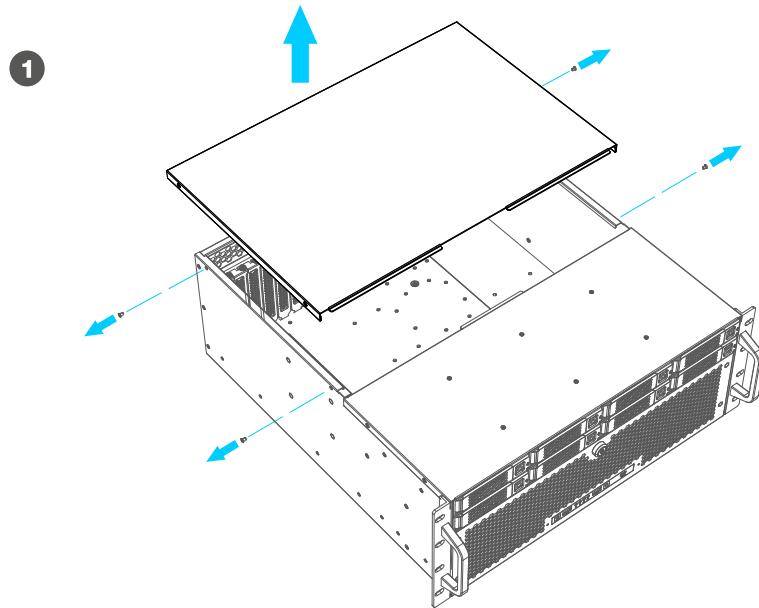

2. Install the HDD & SSD


For SSD: Attach the SSD to the SSD Tray and reinstall it; for HDD: Mount the HDD onto the hot-swap tray and reinsert the HDD cage.

2

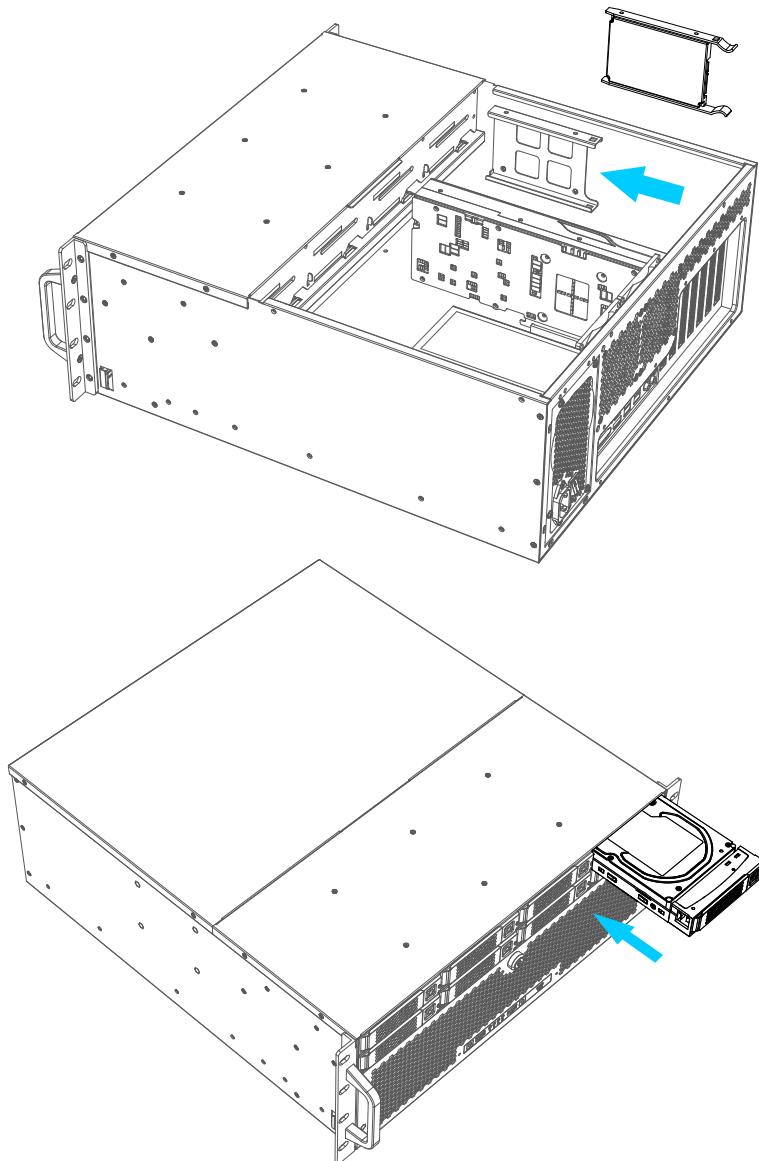


3. Install the Motherboard

3

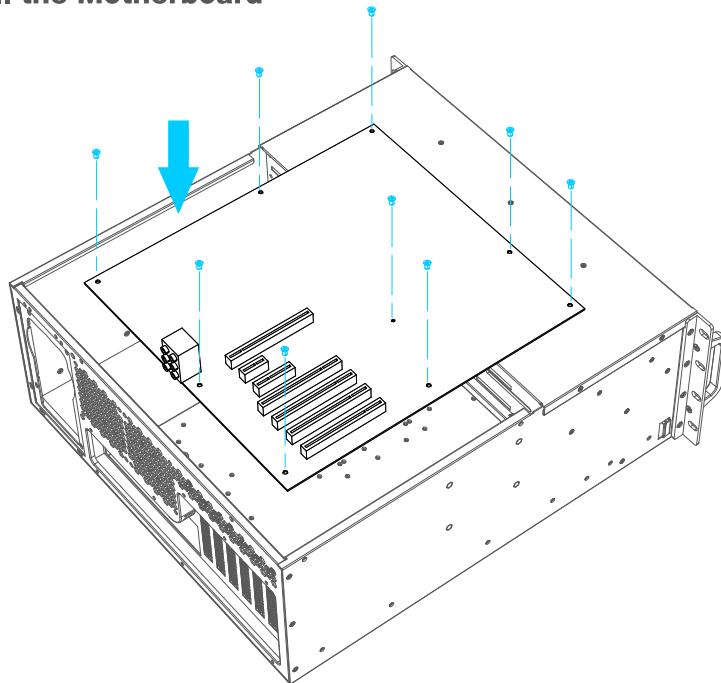


4. Install the PSU

4

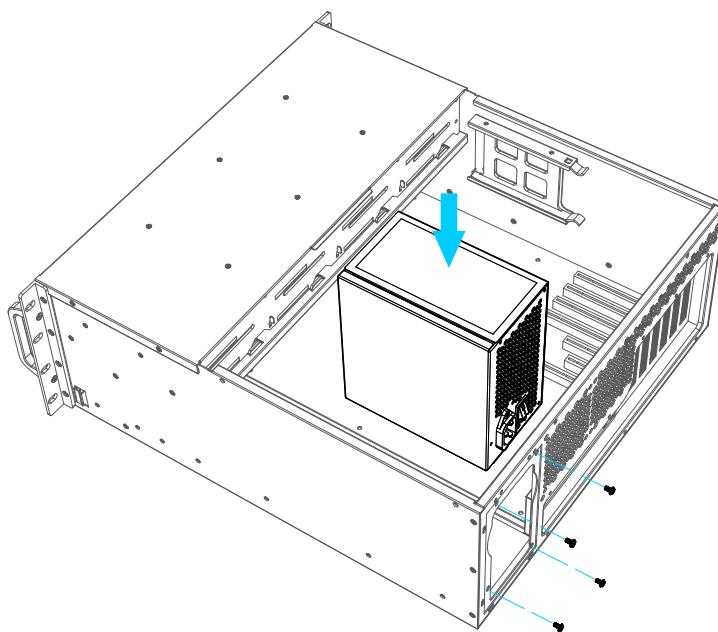

5. Install the GPU

5

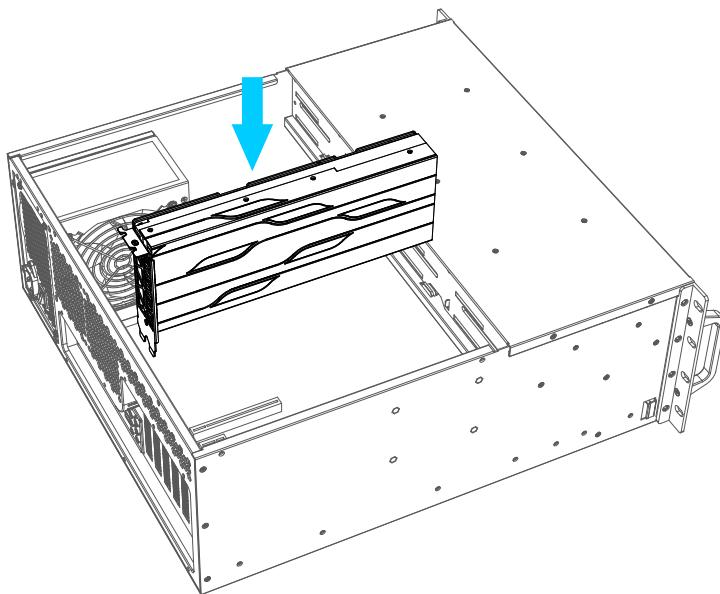

SPECIFICATIONS

Model	
Model Name	RSV-H408
Specifications	
Chassis Type	Rackmount
Form Factor	4U
Color	Silver & Black
Case Material	SGCC
Motherboard Compatibility	12" x 9.6" ATX, 11.2" x 8.2" Mini-ATX and below
Power Supply	Supports ATX power supply
Hot-Swap Drive Bays	8 (SFF8643 with SGPIO and Temperature Control)
External 3.5 Drive Bays	-
Internal 3.5" Drive Bays	-
Internal 2.5" Drive Bays	-
Expansion Slots	7
Front USB	2 x USB 3.0 / 1 x USB 3.2 Type C
80mm Fans	Front: 4 x 80mm fans (4 x 80mm PWM fan included)
120mm Fans	-
Physical Specification	480 x 431 x 175 mm / 18.90" x 16.97" x 6.89"

Rosewill®

Technical Support Information [techsupport @ rosewill.com](mailto:techsupport@rosewill.com) 1-800-575-9885

Please register your product at www.rosewill.com for complete warranty information and support for your product.



RSV-H408