


GLASS AIR FRYER User Manual

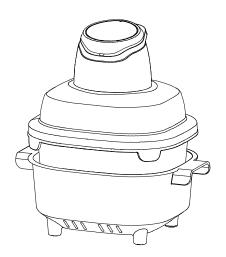



CONTENTS

IMPORTANT SAFEGUARDS	1
PRODUCT DESCRIPTION	7
HOW TO USE	10
CLEANING AND MAINTANCE	12
COMMON PROBLEM ANALYSIS	13
WARRANTY	14

⚠ IMPORTANT SAFEGUARDS

!mportant

Before using this product, please read and understand this instruction manual carefully, and keep it in a safe place; this product is only for use in homes or similar places. To ensure safe operation and prevent injury or property damage to yourself and others, please adhere to the following safety precautions. Failure to comply with these warnings may result in accidents.

Danger

Do not immerse the main unit in water or any other liquid, and do not rinse under the tap.

⚠ Warnings

- Before connecting the product to the power supply, please check whether the voltage marked on the product is consistent with the local power supply voltage, and all components are installed correctly.
- Do not allow children or persons with intellectual disabilities to use this product unattended.
- This product should be used on a flat surface, do not using on an inclined surface.
- When going out or not in use for a long time, please be sure to unplug the power plug from the socket.
- After the first power-on, there is a smell, please continue to use it if it is not abnormal.
- Do not operate or plug in or out the power plug with wet hands to prevent electric shock.

- Do not use this product if the power cord, plug or other accessories are damaged.
- If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.
- Please do not use accessories or components made by other manufacturers or other manufacturers that are not recommended.
- It is forbidden to modify or lengthen the power cord of this product in any way.
- It is forbidden to use this product outdoors, or to use this product for other purposes.
- All accessories are only suitable for the use of this product, it is forbidden to be used for other purposes or on other similar products to avoid danger.
- It is forbidden to yank the power cord of the product or tie the power cord to an object at a favorable angle.
- Non-professionals are not allowed to disassemble any internal components to avoid danger.
- It is forbidden to move this product when it is plugged in. You can turn it off when necessary, unplug the power plug, and move it to a suitable location.
- If you have any questions, please contact the relevant service center or dealer for help.
- Before cleaning the product, you must first unplug the power plug and let it cool down.
- This appliance can be used by children aged from 8
 years and above if they have been given supervision or
 instruction concerning use of the appliance in a safe
 way and if they understand the hazards involved.
- Cleaning and user maintenance shall not be made by

▲ Warnings

children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

- Incorrect use of the appliance may cause serious burns. Therefore, caution must be exercised.
- This appliance may be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, provided they have been given supervision or instruction concerning the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Do not place the product near flammable materials.
 Maintain a safe distance from curtains, drapes, fabric partitions, or similar items during operation to prevent fire.
- Do not place hands or face near the ventilation openings while the product is operating to avoid burns.
- Do not cover the ventilation openings with cloth or any other materials during use, as this may lead to malfunction or damage. Modification of the product is prohibited.
- Do not disassemble or attempt to repair the product unless you are a qualified technician. Failure to comply may result in fire, electric shock, or injury.
- Do not insert pins, wires, or any foreign objects into the exhaust vents to prevent electric shock.
- Do not direct the air outlet toward the power cord during operation.
- Do not use the product on an unstable or non-heat-resistant surface. Place it only on a firm, heat-resistant base to avoid damage or accidents.
- Do not touch any part of the product except the designated controls during use to prevent burns.

- Do not open the product before it is properly loaded into the fryer unit.
- Do not place the air fryer without adequate heat insulation. Maintain at least 8 inch of clearance on all sides during and after use.
- Do not clean the glass barrel before it has cooled down completely to avoid burn injuries.
- Do not allow oil or liquid inside the air fryer during operation.
- Do not neglect regular cleaning of the air fryer. Accumulated oil residue may cause fire or produce unpleasant odors. Do not wipe the heating tube directly with a cloth.
- Do not ignore that high-temperature steam is released from the outlet during operation. Keep hands and face away from the steam and outlet. Use caution when removing the frying basket, as surfaces may be extremely hot.
- Do not immerse the hot glass pot in cold water. If the glass pot is taken from the freezer, allow it to reach room temperature before using it in the air fryer.
- Handle the glass pot with care. Avoid impacts as the glass may break. NOTE: For best results, Do not use the Air Fry function for frozen foods.

SPECIAL INSTRUCTIONS

 A short powersupply cord (or detachable power-supply cord) is to be provided to reduce thrisk resulting from becoming entangled in or tripping over a longer cord. onger detachable power-supply cords or extension cords are available and may be usedcare is exercised in their use.

- If a longer detachable power-supply cord or extension cord is used:
 - 1. The marked electrical rating of the cord set or extension cord should be at least as greaas the electrical rating of the appliance;
 - 2. The cord should be arranged so that it will not drape over the countertop or tabletopwhere it can be pulled on by children or tripped over unintentionally.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the riskelectric shock, this plug is intended to fit into a polarized outlet only one way. If the plug doe not fit fully into the outlet, reverse the plug. If it still does not ft, contact a qualified electriciaDo not attempt to modify the plug in any way.

POLARIZED PLUG



- Nhen using electrical appliances, basic safety precautions should always be followencluding the following:

 1. Read all instructions.

 - Do not touch hot surfaces. Use handles or knobs.
 - 3. To protect against electric shock do not immerse cord, plugs, orportable appliance inwater or other liquid.
 - 4. Close supervision is necessary when any appliance is used by or near children.

- 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on ctaking off parts, and before cleaning the appliance.
- 6. Do not operate any appliance with a damaged cord or plug or after the appliancemalfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair oradjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8. Do not use outdoors.
- 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10.Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11. Extreme caution must be used when moving an appliance containing hot oil or other holiquids.
- 12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnectturn any control to "off,, then remove plug from wall outlet.
- 13.Do not use appliance for other than intended use.
- 14. Extreme caution must be used when moving fryer containing hot oil or other hot liquids.
- 15.Be sure handles are properly assembled to basket and locked in place. See detailedassembly instructions.
- 16.Do not immerse in water or any other liquid.
- 17. This appliance is intended for household use only.
- 18.CAUTION: Toreduce the risk of electric shock, cook only in removable container.
- 19. Preheating of the appliance is not necessary.

- This appliance is intended to be used in household and similar applications such as:staff kitchen areas in shops, offices and other working environments,famm houses; by clients in hotels, motels and other residential type environments;bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory ormental capabilities, or lack of experience and knowledge, unless they have been given supervision orinstruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent orsimilarty qualified persons in order to avoid a hazard.


PRODUCT DESCRIPTION

Direction of use: The Rosewill Glass Air Fryer is a compact kitchen appliance that cooks using hot air circulation, delivering crispy results with minimal oil. It offers a healthier way to fry, bake, grill, and roast a variety of foods quickly and evenly. Easy to use and clean, it's ideal for everyday meals and fits perfectly into any modern health-conscious home.

Specification

Model	RHAF-25001DG, RHAF-25001NB
Voltage	120V ~60Hz
Rated Power	1500W
Volume	4.7 QT
Dimensions	L x W x H:10.5 x 11.8 x 12.9 inch
Weight	9 lb

Product Overview

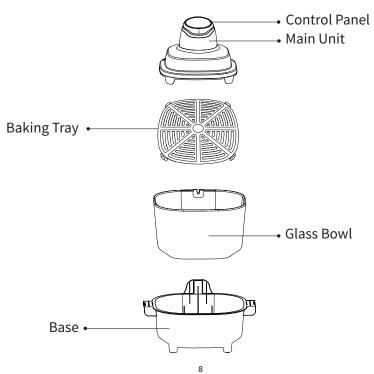

Control Panel Operation





• Press the + or - button to increase or decrease the cooking time for the selected mode.



 Press the MODE button to cycle through the available cooking functions: Air Fry, Roast, Recrisp, and Keep Warm.



- In standby mode:
- Briefly press the START button to activate the selected function and begin cooking.
 - During operation:
- Briefly press the START button to pause cooking. The heating element will stop, but the fan will continue to run for 20 seconds before turning off.
- Press and hold the START button to end the current operation. The product will then return to standby mode.

HOW TO USE

Reminder

Please read the instruction manual carefully before use.

Remove all accessories and fittings from the air fryer and its packaging.


Wash the accessories with warm water and gently wipe the interior of the air fryer with a soft, damp cloth. Allow all parts to dry completely before use.

Ensure at least 8 inch of space around the air fryer. Do not place any objects on top of the appliance.

Before first use, preheat the air fryer at the maximum temperature for 10–15 minutes to remove any protective coating from the heating element. Note: A small amount of smoke during initial preheating is normal.

STEP 1: Add Ingredients and Power On

- Remove the main unit from the appliance and ensure the baking tray is properly placed in the glass bowl.
 - Then, position the main unit on top of the glass bowl, making sure it is correctly aligned so that the micro switch is activated after adding the ingredients to the baking tray.
 - Once the main unit is placed on the glass bowl, insert the plug into the power socket.

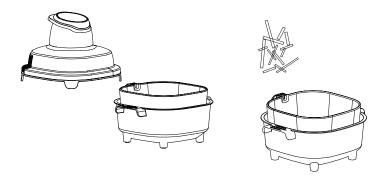


STEP 2: Select the Desired Function


- The display will light up after powering on. Press the MODE button to select the desired function.
 - Once a function is selected, you can adjust the working time using the "+" and "-" buttons.
 - Then, press the "Start" (power symbol) button to begin.



STEP 3: Complete Cooking and Enjoy Your Meal

- When the cooking time ends, the appliance will stop heating and beep three times.
 - Carefully lift off the main unit and set it aside. Remove the food from the glass bowl.

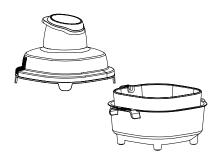

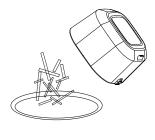

CLEANING AND MAINTANCE

Before cleaning, unplug the power cord and allow the air fryer to cool down completely.

Cleaning the exterior of the air fryer. Gently wipe the surface with a soft cotton cloth or sponge dampened with a neutral detergent. Then, dry thoroughly with a clean, dry cloth.

Do not use hard brushes, wire brushes, alkaline cleaners, abrasive powders, solvents, volatile oils, acidic substances, or hot water, as these may damage the product surface.

Never fully submerge the main unit in water.

Clean the baking tray with a soft cloth or sponge and neutral detergent. Rinse with clean water and wipe dry with a dry cloth.

Repeated use without proper cleaning may cause oil residues to carbonize and discolor the baking tray.

Always clean thoroughly after each use and allow the main unit and tray to dry in a cool, shaded place before reassembling.

Before cleaning, wait at least one hour after use to ensure the unit is completely cool.

When reassembling, make sure the main unit and glass bowl is correctly inserted into its original position; otherwise, the unit will not power on.

COMMON PROBLEM ANALYSIS

Problem	Possible Causes	Solution
	Power supply failure	
Control panel	Verify that the power outlet is working and the plug is firmly connected.	Check and ensure the power supply equipment is functioning properly.
does not light up	Confirm the power voltage meets the product's requirements.	
	Circuit board malfunction	Send to the designated maintenance department for repair.
Food is undercooked or burnt	Incorrect function or time selected	Set function and time according to recommended recipes or personal experience.
	Excessive ingredients in the glass bowl. Cooking time too short.	Divide ingredients into smaller batches for more even heating. Increase cooking time as needed.
Smoke appears during initial use	Rust-preventive oil residue on the heating element	Preheat for 10–15 minutes to burn off the oil.
Unusual odor detected	Foreign matter on the baking tray or heating element	Clean thoroughly to remove any debris.

NOTE: If the fault persists after following the solution steps above, please contact our customer service department. Do not attempt to disassemble the unit yourself, as this may void the warranty and cause safety hazards.

WARRANTY

Register One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made from authorized retailers of Rosewill Inc. ("Rosewill") by the original appliance owner and is not transferable. Please visit www.rosewill.com to register your new Rosewill appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to techsupport@rosewill.com or call to 1-800-575-9885. We will try to contact you as soon as possible. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for q uality inspection. Rosewill is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.



Appliances need to be disposed of separately for scrap. Throwing them directly into the garbage is prohibited.



PREP TIME

15 min

COOK TIME

25~35 min

YIELD

2~4 servings

Ingredients:

- 2 teaspoons garlic powder
- · 1 teaspoon garlic salt
- 1 teaspoon each ground mustard, ginger and nutmeg
- 1/2 teaspoon pepper
- 1/2 teaspoon ground allspice
- 1/2 teaspoon baking soda
- 1/2 teaspoon cayenne pepper
- 6-8 whole chicken wings (2-1/2 pounds)
- Optional: Ranch salad dressing, Buffalo sauce or barbecue sauce

Directions

Steps1:Prepare the ingredients

Preheat air fryer for 1 min. In a large bowl, combine garlic powder, garlic salt, mustard, ginger, nutmeg, pepper, allspice, baking soda and cayenne.

Steps2: Fry and serve the dish

Cut chicken wings into 3 sections; discard wing tips. Add to bowl with spices and stir to coat. In batches, arrange wings in a single layer on the air-fryer baking tray. Cook 15 minutes; cook until chicken juices run clear and wings are golden brown, 20-25 minutes, turning once. Repeat with remaining wings. Serve hot, with dressing or sauce if desired.



PREP TIME

10 min

COOK TIME

15~20 min

YIELD

2 servings

Ingredients:

- 1 beef flat iron steak or boneless top sirloin steak (3/4 pound)
- 1/8 teaspoon salt
- 1/8 teaspoon pepper
- 1 tablespoon butter, softened
- 1 teaspoon minced fresh parsley
- 1/2 teaspoon minced garlic
- 1/4 teaspoon reduced-sodium soy sauce

Directions

Steps1:Prepare the air fryer and steak

Preheat air fryer for 2 min. Sprinkle steak with salt and pepper. Place steak on the air-fryer baking tray. Cook until meat reaches desired doneness (for medium-rare, a thermometer should read 135°; medium, 140°; medium-well, 145°), 8-10 minutes, turning halfway through cooking.

Steps2:Serve with steak

Meanwhile, combine butter, parsley, garlic and soy sauce. Serve with steak.



PREP TIME

10 min

COOK TIME

10~15 min

YIELD

2 servings

Ingredients:

- 1/4 cup mayonnaise
- · 4 teaspoons olive oil
- 1-1/2 teaspoons grated lemon zest
- · 1 garlic clove, minced
- 1/2 teaspoon pepper
- 1/4 teaspoon seasoned salt
- 1 pound fresh asparagus, trimmed
- 2 tablespoons shredded
 Parmesan cheese
- Lemon wedges, optional

Directions

Steps1:Prepare the air fryer and ingredients

Preheat air fryer for 1 min. In large bowl, combine the first 6 ingredients. Add asparagus; toss to coat. Working in batches, place in a single layer on the air-fryer baking tray.

Steps2:Fry and serve the dish

Cook until tender and lightly browned, 4-6 minutes. Transfer to a serving platter; sprinkle with Parmesan cheese. If desired, serve with lemon wedges.



PREP TIME

15 min

COOK TIME

15~20 min

YIELD

2~4 servings

Ingredients:

- 1 pound chicken tenderloins
- 3/4 teaspoon salt
- · 1/4 teaspoon pepper
- 1/2 cup panko bread crumbs
- 1/2 cup seasoned bread crumbs
- 1/2 teaspoon garlic powder
- 1/2 teaspoon paprika
- 2 large eggs, room temperature


Directions

Steps1:Prepare the air fryer and kitchen

Preheat air fryer for 2 min. Sprinkle chicken with salt and pepper. In a shallow bowl, combine bread crumbs, garlic powder and paprika. In another shallow bowl, whisk eggs. Dip chicken in eggs, then in crumb mixture, patting to help coating adhere.

Steps2:Fry the chicken

In batches, arrange chicken in a single layer on the air-fryer baking tray; spritz with cooking spray. Cook until coating is golden brown and chicken is no longer pink, 7-8 minutes on each side.

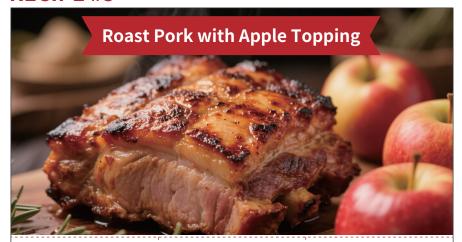

PREP TIME

50 min

COOK TIME

40 min

YIELD

2~4 servings

Ingredients:

- 2 tablespoon all-purpose flour
- 1-3/4 teaspoons salt, divided
- 1 teaspoon ground mustard
- 1 teaspoon caraway seeds
- 1/2 teaspoon sugar
- 1/4 teaspoon pepper
- 1/4 teaspoon rubbed sage
- 1 boneless pork loin roast (1-2 pounds)
- 1-1/2 cups applesauce
- 1/2 cup packed brown sugar
- 1/4 teaspoon ground mace

Directions

Steps1:Prepare the ingredients

In a small bowl, combine flour, 1-1/2 teaspoons salt, ground mustard, caraway, sugar, pepper and sage; rub over roast.

Steps2: Roast and serve the dish

Preheat air fryer for 2 min. Place roast on the air-fryer baking tray, fat side up. Roast, uncovered, 40 minutes. In a small bowl, mix applesauce, brown sugar, mace and remaining salt; spread over roast. Roast 35-40 minutes longer or until a thermometer reads 145°. Let stand 10 minutes before slicing.



PREP TIME

10 min

COOK TIME

10~15 min

YIELD

2~4 servings

Ingredients:

- 1 medium head cauliflower, cut into florets (about 6 cups)
- 4 tablespoons olive oil, divided
- 1/4 cup minced fresh parsley
- 1 tablespoon minced fresh rosemary
- 1 tablespoon minced fresh thyme
- 1 teaspoon grated lemon zest
- 2 tablespoons lemon juice
- 1/2 teaspoon salt
- 1/4 teaspoon crushed red pepper flakes

Directions

Steps1:Prepare the ingredients

Preheat air fryer for 1 min. In a large bowl, combine cauliflower and 2 tablespoons olive oil; toss to coat. In batches, arrange cauliflower in a single layer on the air-fryer baking tray.

Steps2: Fry and serve the dish

Cook until florets are tender and edges are browned, 8-10 minutes, stirring halfway through cooking. In a small bowl, combine remaining ingredients; stir in remaining 2 tablespoons oil. Transfer cauliflower to a large bowl; drizzle with herb mixture and toss to combine.



PREP TIME

15 min

COOK TIME

12~15 min

YIELD

2~4 servings

Ingredients:

- 1/2 pound uncooked shrimp (26-30 per pound)
- 1/2 cup sweetened shredded coconut
- 3 tablespoons panko bread crumbs
- 2 large egg whites
- 1/8 teaspoon salt
- · Dash pepper
- Dash Louisiana-style hot sauce
- 3 tablespoons all-purpose flour
- sauce:
- 1/3 cup apricot preserves
- 1/2 teaspoon cider vinegar
- Dash crushed red pepper flakes

Directions

Steps1:Prepare the ingredients

Preheat air fryer for 1 min. Peel and devein shrimp, leaving tails on. In a shallow bowl, toss coconut with bread crumbs. In another shallow bowl, whisk egg whites, salt, pepper and hot sauce. Place flour in a third shallow bowl. Dip shrimp in flour to coat lightly; shake off excess. Dip in egg white mixture, then in coconut mixture, patting to help coating adhere.

Steps2: Fry and serve the dish

Place shrimp in a single layer on the air-fryer baking tray.

Cook 4 minutes; turn shrimp and continue cooking until

coconut is lightly browned and shrimp turn pink, about 4

minutes longer. Meanwhile, combine sauce ingredients in a

small saucepan; cook and stir over medium-low heat until

preserves are melted. Serve shrimp immediately with sauce.



PREP TIME

10 min

COOK TIME

35~45 min

YIELD

2~4 servings

Ingredients:

- 4 medium russet potatoes
- 2 tablespoons butter, softened
- · 2 garlic cloves, minced
- · 1/4 teaspoon salt
- 1/4 teaspoon pepper
- Optional: Sour cream, butter, crumbled bacon, minced chives, guacamole, shredded cheddar cheese and minced fresh cilantro

Directions

Steps1:Prepare the ingredients

Preheat air fryer for 2 min. Scrub potatoes; pierce each several times with a fork. In a small bowl, mix butter, garlic, salt and pepper. Rub potatoes with butter mixture. Wrap each tightly in a piece of foil.

Steps2: Fry and serve the dish

Place potatoes in a single layer on the air-fryer baking tray. Cook until fork tender, 35-45 minutes, rotating halfway through.

NOTE: Ir cooking smaller amounts of food, use the recommended function, but reduce the time. For best results, check food periodically and shake or toss it often until it reaches the desired doneness.

NOTE: Install baking tray before cooking.

NOTE: When cooking multiple foods back to back, reduce cook time by 3-5 minutes to prevent overcooking.

				4		_
INGREDIENT	AMOUNT	PREPARATION	OIL	FUNCTION	COOK TIME	INTERACTION
VEGETABLES						
Asparagus	2 bunches	Stemstrimmed	Tosswith 2 Tsp oil	AIRFRY	15-20 mins	None
Bell peppers	8 peppers	Seeded, cut in quarters	None	AIRFRY	25-35 mins	Flip halfway through cooking
Broccoli	2 heads (1 ½ lbs)	Cut in 1-inch florets	Toss with 1 Tbsp oil	AIR FRY	15-20 mins	Toss halfway through cooking
Brussels sprouts	1 ¹ / ₂ lbs	Cut in half, stems removed	Toss with 1 Tbsp oil	AIR FRY	15-20 mins	Toss halfway through cooking
Butternut squash	1½/3lbs	Peeled, cut in 1–2-inch pieces	Toss with 1 Tbsp oil	AIRFRY	25-30 mins	Toss halfway through cooking
Carrots	14/3 lbs	Peeled, cut in ∜2-inch pieces	Toss with 1 Tbsp oil	AIR FRY	25-30 mins	None
Cauliflower	1 large head (1 ½ lbs)	Cut in 1-inch florets	Toss with 2 Tbsp oil	AIR FRY	15-20 mins	Toss halfway through cooking
Green beans	1½ lbs	Trimmed	Toss with 1 Tbsp oil	AIR FRY	20-25 mins	Toss halfway through cooking
Kale (for chips)	3 cups, packed	Torn in pieces, stems removed	None	AIRFRY	10-15 mins	Toss halfway through cooking
Mushrooms	1 lbs	Rinsed, cut in quarters	Tosswith 1 Tbsp oil	AIRFRY	20-25 mins	None
Sweet potatoes	1 ½ lbs	Cut in 1/2-in ch pieces	Toss with 1 Tbsp oil	AIR FRY	30-35 mins	Toss halfway through cooking
Zucchini	2 lbs	Cut in 1/2-in ch rounds	Toss with 1 Tbsp oil	AIR FRY	20-25 mins	Toss halfway through cooking
POULTRY						
Chicken breasts, boneless	3-4 breasts (6-8 oz. each)	None	None	AIRFRY	20-25 mins	None
Chicken drumsticks	6-8 each (2 oz. each)	None	None	AIRFRY	18-22 mins	None
Chicken wings	6-8 each (2 oz. each)	Drumettes & flats	1 Tbsp	AIRFRY	18-22 mins	Toss twice during cooking
SEAFOOD						
Crab cakes	5-6 cakes (1 1/2 oz. each)	None	Brush with oil	AIRFRY	15-20 mins	None
Salmon fillets	4 fillets (4 oz. each)	None	Brush with oil	AIRFRY	10-15 mins	None
Shrimp	1 lbs	Whole, peeled, tails on	Tosswith 1 Tbsp oil	AIRFRY	15-20 mins	None

NOTE: If cooking smaller amounts of food, use the recommended function, but reduce the time. For best results, check food periodically and shake or toss it often until it reaches the desired doneness.

NOTE: Install baking tray before cooking.

NOTE: When cooking multiple foods back to back, reduce cook time by 3-5 minutes to prevent overcooking.

INGREDIENT	AMOUNT	PREPARATION	OIL	FUNCTION	COOK TIME	INTERACTION
BEEF						
Burgers	4 patties, 80% lean (1/4 lb each), 1-inch thick	None	None	AIR FRY	10-15 mins	Flip halfway through cooking
Hot dogs	12 each	None	None	AIRFRY	10-15 mins	Flip halfway through cooking
Meatballs, fresh	12 meatballs (2 oz. each)	None	None	AIRFRY	15-20 mins	None
Steaks	2 steaks (7–9 oz. each)	None	None	AIRFRY	10-15 mins	None
Strip steaks	2 steaks (10-12 oz. each)	None	None	AIRFRY	15-20 mins	None
PORK						
Bacon	8 strips, cut in half	None	None	AIRFRY	10-15 mins	None
Pork chops	5 boneless chops (8 oz. each)	None	Brush with oil	AIRFRY	15-20 mins	None
Pork tenderloin	2 tenderloins (1–1 ½ lbs), cut in half	Whole	Brush with oil	AIRFRY	30-35 mins	Flip halfway through cooking
Sausages	8 sausages	Whole	None	AIRFRY	15-20 mins	None
FROZEN FOODS						
Burgers	4 patties, 80% lean (¾4 lb each)	None	None	ROAST	15-20 mins	None
Chicken nu ggets	1½ boxes (1 ½ lbs)	None	None	ROAST	15-20 mins	Toss halfway through cooking
Egg bites	9 bites (2 oz. each)	None	None	ROAST	10-15 mins	None
Fish fillets	1 box (6 fillets)	None	None	ROAST	10-15 mins	None
Fish sticks	18 fish sticks (11 oz.)	None	None	ROAST	10-15 mins	Flip halfway through cooking
Frenchfries	1 lbs	None	None	ROAST	20-25 mins	Toss halfway through cooking
Hash brown patties	5 patties (10 oz.)	None	None	ROAST	10-15 mins	Flip halfway through cooking
Mozzarella sticks	2 boxes (11 oz. each)	None	None	ROAST	10-15 mins	Flip halfway through cooking
Pizza rolls	2 bags (20 oz. each)	None	None	ROAST	10-15 mins	Toss halfway through cooking
Popcorn shrimp	2 boxes (14–16 oz. each)	None	None	ROAST	15-20 mins	Toss halfway through cooking
Potstickers	2 bags (12 oz. each)	None	None	ROAST	20-25 mins	Flip halfway through cooking
Sweet potato fries	1 bag (20 oz.)	None	None	ROAST	10-15 mins	Flip halfway through cooking
Tater tots	1 bag (22 oz.)	None	None	ROAST	20-25 mins	Toss halfway through cooking

NOTE: If cooking smaller amounts of food, use the recommended function, but reduce the time. For best results, check food periodically and shake or toss it often until it reaches the desired doneness.

NOTE: Install baking tray before cooking.

NOTE: When cooking multiple foods back to back, reduce cook time by 3-5 minutes to prevent overcooking.

(COLD/REFRIGERATED & PRE-COOKED)	AMOUNT	PREPARATION	FUNCTION	COOK TIME	INTERACTION
VEGETABLES					
Baked potato	1 large baked potato (8-10 oz.)	Cut in half	Recrisp	8-10 mins	Flip halfway through cooking
Broccoli	6 oz. (approx. 2 cups)	Cut in 1-inch florets	Recrisp	5-10 mins	Toss halfway through cooking
Brussels sprouts	8 oz. (approx. 2 cups)	Trimends, cut in half	Recrisp	5-10 mins	Toss halfway through cooking
Roasted baby potatoes	8 oz.	Cut in half	Recrisp	5-10 mins	None
Zucchini	10 oz. (approx. 2 cups)	Cut in 1/4-inch slices	Recrisp	5-10 mins	Toss halfway through cooking
PROTEINS					
Chicken breast/thigh	8 oz.	Cut in 1-inch slices	Recrisp	8-10 mins	None
Chicken nuggets	8-10 pieces (6 oz.)	None	Recrisp	5-10 mins	None
Chopped pork or brisket	8 oz. (approx. 2 cups)	Chopped or pulled	Recrisp	5-10 mins	None
Hamburger patty	1 patty (4 oz.)	None	Recrisp	8-10 mins	None
Meatballs	10–12 oz. (approx. 2 cups)	None	Recrisp	8-10 mins	Stir halfway through cooking
Pork tenderloin	8 oz.	Cut in ½-inch slices	Recrisp	8-10 mins	None
Salmon	2 fillets (12 oz.)	None	Recrisp	8-10 mins	None
Steak	8 oz.	Cut in 1-inch slices	Recrisp	8-10 mins	None
Shrimp	10-12 large shrimp (6 oz.)	None	Recrisp	5-10 mins	Flip halfway through cooking
Turkey breast	8 oz.	Cut in ½2-inch slices	Recrisp	8-10 mins	None

(COLD/REFRIGERATED & PRE-COOKED) NOTE: If cooking smaller amounts of food, use the recommended function, but reduce the time. For best results, check food periodically and shake or toss it often until it reaches the desired doneness.

AMOUNT

PREPARATION

FUNCTION

COOK TIME

INTERACTION

NOTE: Install baking tray before cooking.

NOTE: when cooking multiple foods back to back, reduce cook time by 3-5 minutes to prevent overcooking.

LEFOVER FAVORITES					
Breakfast sandwich	1 sandwich (6-8 oz.)	Cut in half	Recrisp	5-10 mins	Flip halfway through cooking
Burrito		None	Recrisp	5-10 mins	Flip halfway through cooking
Chinese takeout (Lo Mein)		None	Recrisp	5-10 mins	Mix halfway through cooking
Dumplings	8 oz. (approx. 2 cups)	Add 1 tablespoon water over dumplings	Recrisp	5-10 mins	None
French fries	4 oz. (approx. 2 cups)	None	Recrisp	3-5 mins	None
Grilled cheese	1 sandwich (approx. 4 oz.)	Cut in half	Recrisp	5-10 mins	Flip halfway through cooking
Pancakes	1 pancake (approx. 2 oz.) None	None	Recrisp	5-10 mins	Flip halfway through cooking
Pasta	6 oz. (approx. 2 cups)	Add 1 tablespoon water	Recrisp	3-5 mins	Stir halfway through cooking
Pizza slice	1 slice (2 ½ oz.)	None	Recrisp	5-10 mins	None
Quesadilla	1 small quesadilla (approx. 4 oz.)	Cut in half	Recrisp	5-10 mins	Flip halfway through cooking
Rice	2 cups (8 oz.)	Add 1 tablespoon water	Recrisp	5-10 mins	Stir halfway through cooking



Glass Air Fryer Recipe Book





Explore more at www.rosewill.com

Technical Support Information

- techsupport@rosewill.com
- **1**-800-575-9885
- www. rosewill.com

Thank you for purchasing a quality Rosewill product.

Please register your product at www.rosewill.com for complete warranty information and support for your product.