


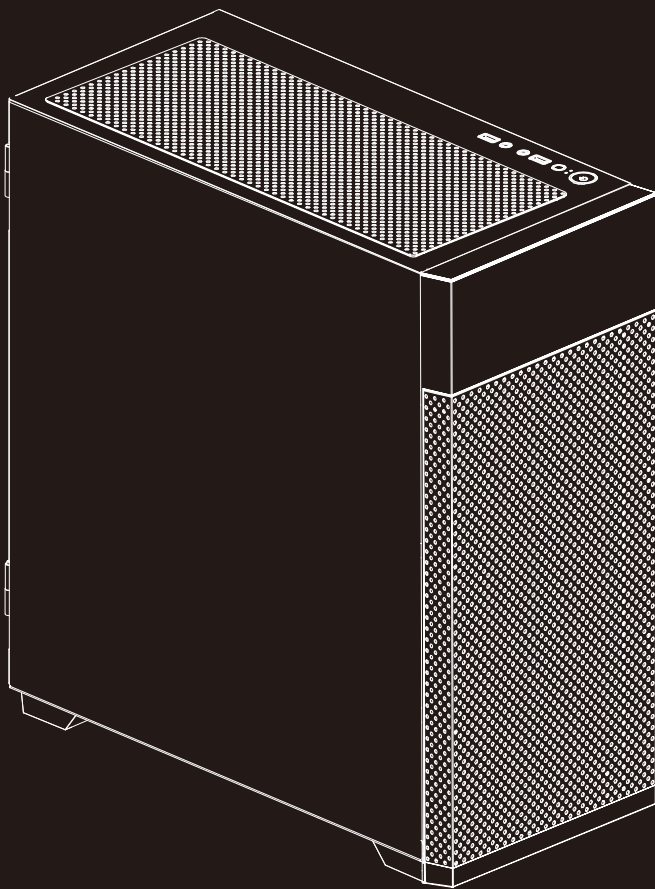

FBM-X7

Quick User Guide




Table of Contents

• Product Overview	
Disassembly Chart	2
Accessory Box	3
• Installation Guide	
1. Open the Unit	4
2. Install Motherboard	5
3. Install Add-on Card	5
4. Install 3.5" /2.5" HDD/SSD	6
5. Care	7
6. Options	8
• Specifications Table	9
Front I/O Cable Pinout	10
Front I/O	10


Thank you for purchasing a **Rosewill** Computer Case.
Please read the instruction manual before use and
retain for future reference.

Product Overview

Disassembly Chart (components vary by country)

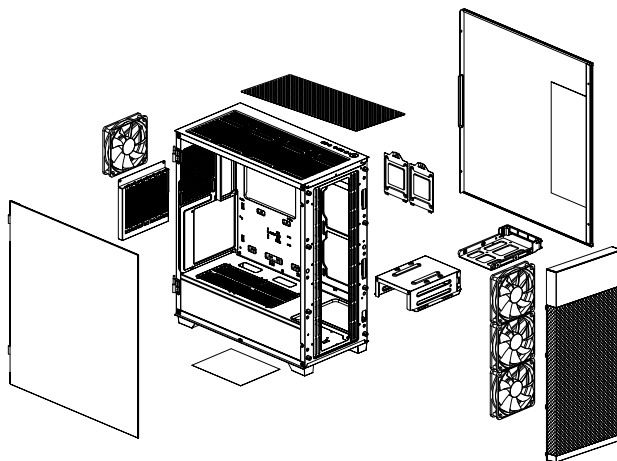

Dimensions: 215*450*470mm (W x D x H)

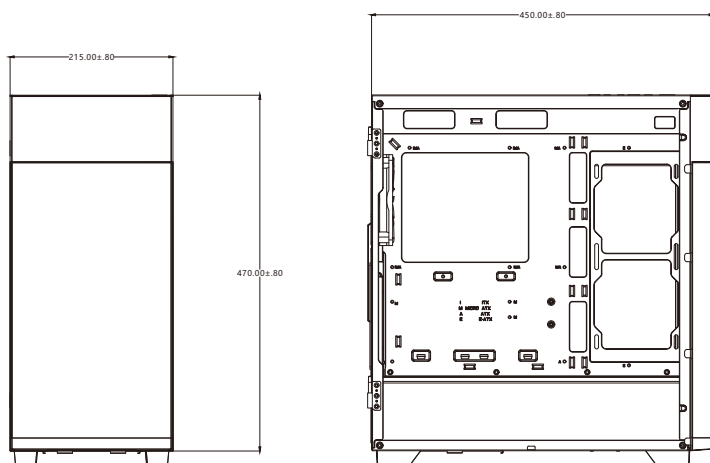

Accessory Box


Image	Part Name	Qty	Function/Component
	Screw-A (6-32 x 8.5 mm)	8	PSU Add-on Card
	Screw-B (M3 x 6.5 mm)	25	Motherboard 2.5" HDD/SSD
	Screw-C (6-32 x 7mm)	8	3.5" HDD
	Standoff	3	Motherboard
	Nut Setter	1	Standoff tool
	Cable Tie	5	Cable Management
	Name Plate	1	Logo

Installation Guide


1. Open the Unit

1-1. Open and take off left TG side panel(Figure 1).

1a

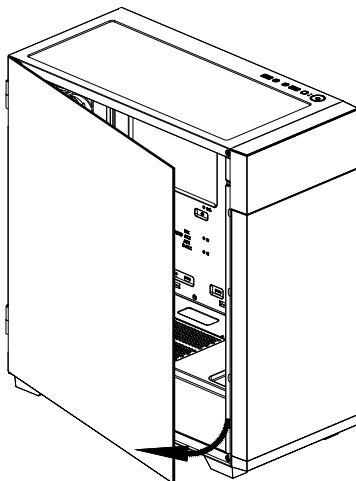



1b

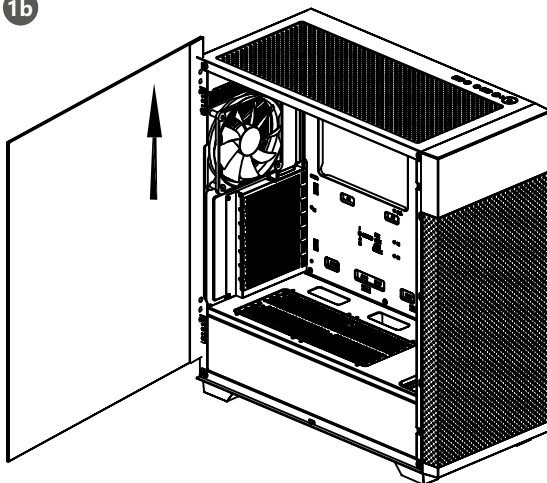

2. Install Motherboard

2-1. Secure the motherboard down with Screw-B(Figure 2a)



2-2. Alternatively, you can turn over the MB bracket 180 degree for EATX motherboard installation.

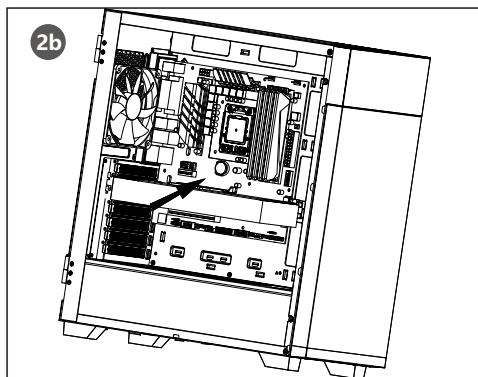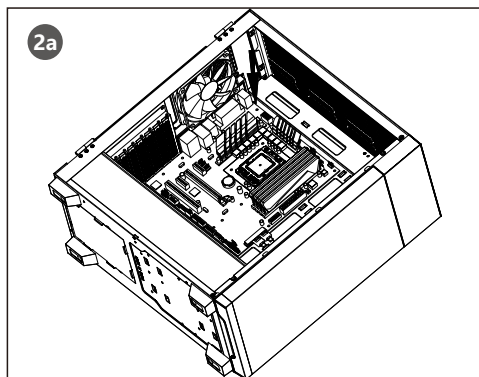

3. Install Add-on Card


3-1. Remove the slot cover, then install the GPU card and secure with Screw-A(Figure 3a)

3-2. Alternatively, you can turn over the GPU bracket 90 degree for vertical GPU card installation.

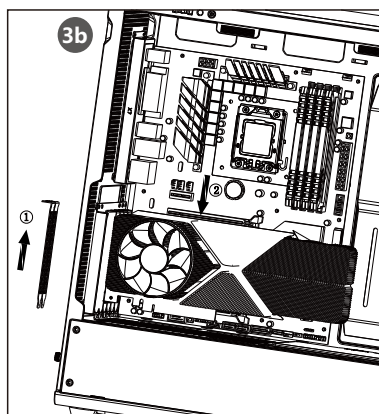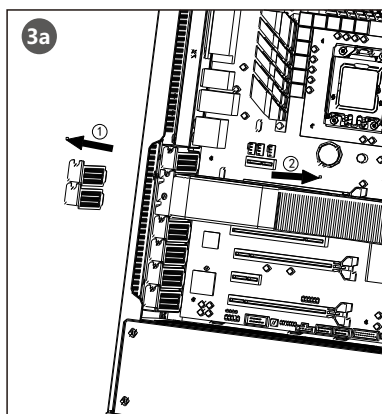


4. Install 3.5" /2.5" HDD/SSD

4-1.Take off the SSD trays, install SSD onto the trays with Screw B.

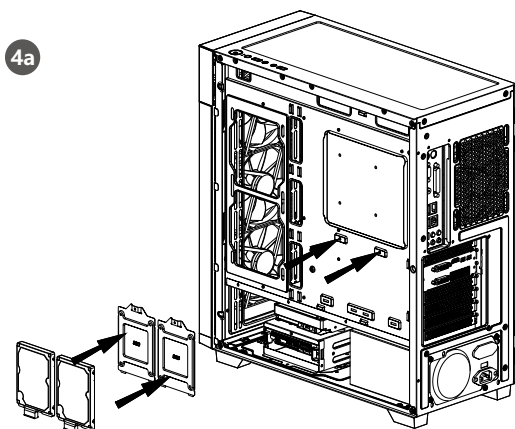

4-2.Take off the HDD tray, install HDD onto the tray with Screw C.


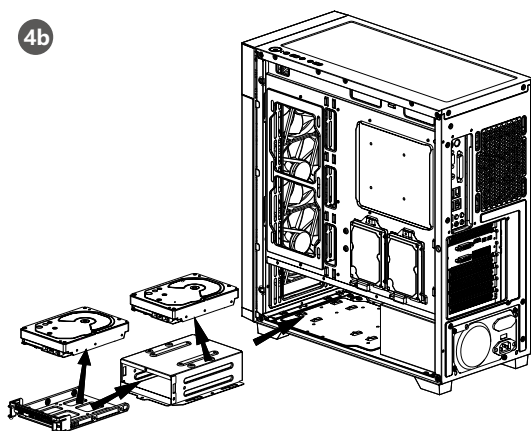


5.Care

To prevent damage, keep all panels closed and secured.

5-1. Put the side panels back in place and secure with thumb screws.


5-2. Clean the dust filters on the top and bottom regularly to ensure adequate airflow(Figure 5)

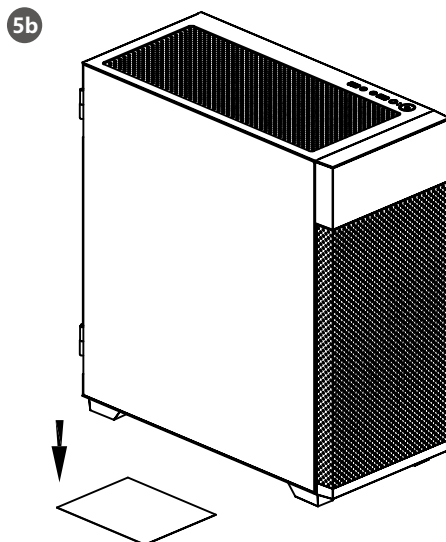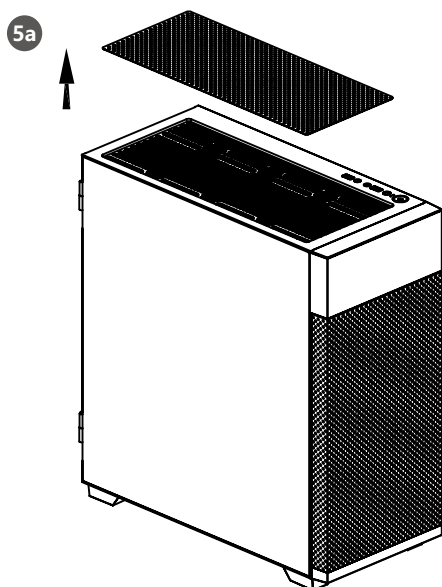

6. Options

6-1. Liquid cooling radiator installation


The FBM-X7 supports 360mm radiator in the front and top for more effectively cool high-performance systems.

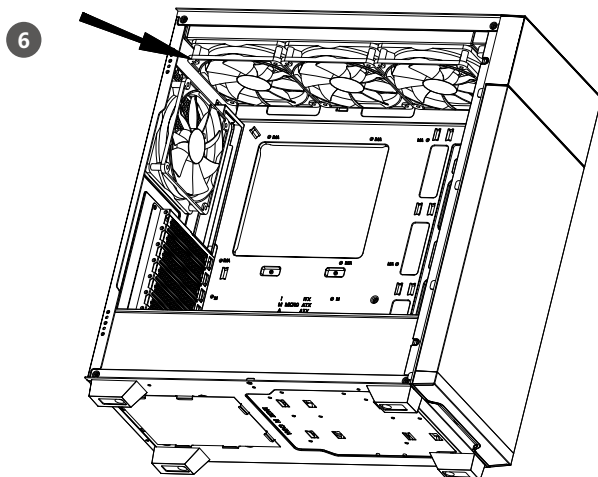


Specifications Table

Model	
Model Name	FBM-X7
Specifications	
Type	Mid Tower
Color	Black
Case Material	Steel / Plastic / Tempered Glass
With Power Supply	No
Motherboard Compatibility	ATX, Micro-ATX Mini-ITX
With Side Panel Window	No
Expansion	
Internal 3.5" Drive Bays	2
Internal 2.5" Drive Bays	2
Expansion Slots	7
I/O Ports	
Top Ports	2 x USB3.0 HD Audio
Cooling System Options	
120 mm Fans	3 x Front (Included) 3 x Top 1 x Rear (Included)
140 mm Fans	3 x Front 2 x Top
Radiator	Front:280mm/360mm Top:280mm/360mm Rear:120mm

Front I/O Cable Pinout

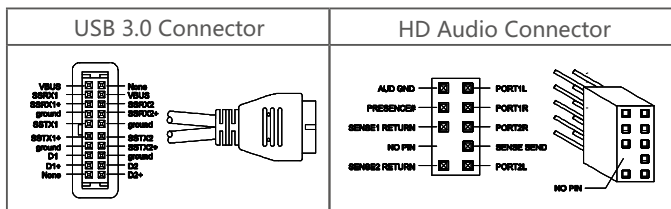

Front I/O

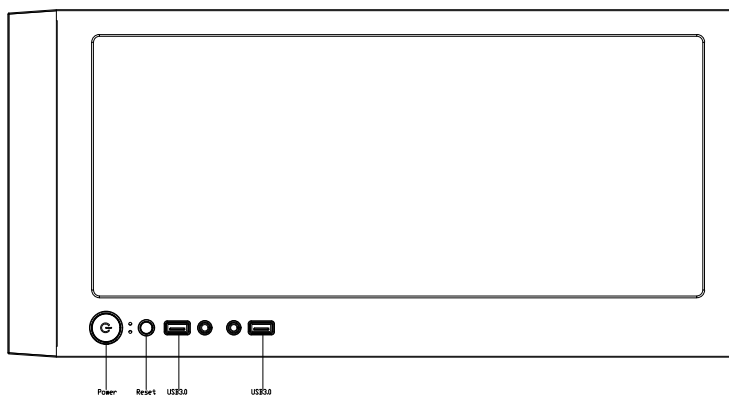



Rosewill® Technical Support Information
techsupport@rosewill.com 1-800-575-9885

*Thank you for purchasing a quality Rosewill product.
Please register your product at www.rosewill.com
for complete warranty information and support for your product.*