


*Rosewill*<sup>®</sup>

# MULTI-PURPOSE PORTABLE CLEANER

## User Manual

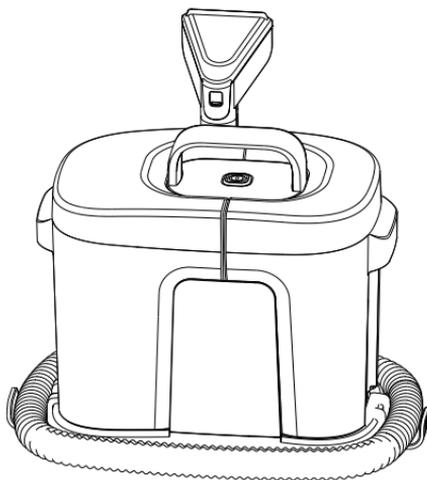

Explore more at [www.rosewill.com](http://www.rosewill.com)

# CONTENTS

IMPORTANT SAFEGUARDS	1
PRODUCT DESCRIPTION	4
HOW TO USE	7
CLEANING AND MAINTENANCE	12
COMMON PROBLEM ANALYSIS	14
WARRANTY	15

# IMPORTANT SAFEGUARDS

## Important

Before using this product, please read and understand this instruction manual carefully, and keep it in a safe place; this product is only for use in homes or similar places.

## Danger

Do not immerse the base in water or any other liquid, and do not rinse under the tap.  
For household use only. Never leave the appliance unattended while in use. Always ensure the appliance is placed on a flat, stable surface before operation.

## Warnings

- Before connecting the product to the power supply, please check whether the voltage marked on the product is consistent with the local power supply voltage, and all components are installed correctly.
- Do not allow children or persons with intellectual disabilities to use this product unattended.
- This product should be used on a flat surface, do not use on an inclined surface.
- When going out or not in use for a long time, please be sure to unplug the power plug from the socket.
- After the first power-on, there is a smell, please continue to use it if it is not abnormal.
- Do not operate or plug in or out the power plug with wet hands to prevent electric shock.
- For safety reasons, never disassemble the machine while it is operating or attempt to repair it if you are not

## Warnings

a qualified professional. Disassembly during use may result in personal injury.

- Do not use this product if the power cord, plug or other accessories are damaged.
- If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.
- It is forbidden to modify or lengthen the power cord of this product in any way.
- It is forbidden to use this product outdoors, or to use this product for other purposes.
- All accessories are only suitable for the use of this product, it is forbidden to be used for other purposes or on other similar products to avoid danger.
- It is forbidden to yank the power cord of the product or tie the power cord to an object at a favorable angle.
- Non-professionals are not allowed to disassemble any internal components to avoid danger.
- It is forbidden to move this product when it is plugged in. You can turn it off when necessary, unplug the power plug, and move it to a suitable location.
- Before cleaning the product, you must first unplug the power plug and let it cool down.
- Do not put any objects into the hot air outlet hole.
- Regularly inspect the power cord, hose, and brush head for any signs of damage. Do not use the appliance if any component is damaged. If the power cord is damaged, it must be replaced by a qualified technician to avoid hazards.
- Always fill the water tank with an adequate amount of clean water before operation. Failure to do so may cause damage to the machine.

## Warnings

- When disassembly is required, ensure that the appliance is unplugged and that the motor and pump have cooled down to room temperature. Never attempt to disassemble the unit while it is still hot or connected to power.
- Avoid allowing liquid from the machine to come into contact with the charging device or electrical components, as this may cause damage.
- This appliance is not a toy. It should not be used by children under the age of 12. Close supervision is necessary when the appliance is used in the presence of children.
- Always unplug the machine from the electrical outlet before cleaning or performing any maintenance. Ensure all controls are turned off before disconnecting the power.
- Use only attachments and accessories recommended by the manufacturer.
- Do not pull, carry, or yank the appliance by the power cord. Avoid pinching the cord in doors, pulling it around sharp edges, running over the cord, or exposing it to heat.
- Do not use the appliance if it has been dropped, shows visible signs of damage, or is leaking.
- Do not use the appliance to pick up hot or burning items such as cigarettes, matches, or hot ashes. Avoid vacuuming dry dust, large amounts of debris, plastic bags, fine powders, sharp metal objects (e.g., needles or pins), or sand and pebbles.
- Stop using the appliance immediately if a foreign object is inhaled.
- If you have any questions, please contact the relevant service center or dealer for help.

# PRODUCT DESCRIPTION



The multi-purpose portable cleaner is perfect for quick clean-ups of accidental spills and stains. Compact and easy to use, they are designed to target specific areas without the need for a full-sized machine. Instantly tackles spills and stains on carpets, upholstery, car interiors and more.

## Specification


Model	RHFC-26001WH
	RHFC-26001BK
	RHFC-26001WHS
	RHFC-26001BKS
Rated Power	550W
Clean Water Tank	49.0 oz
Dirty Water Tank	54.1 oz
Dimension	L x W x H: 14.6 x 9.0 x 14.0 inch
Weight	7.5 lbs.

## Product Overview

1. Dirty water tank
2. Clean water tank
3. Clean water tank handle
4. Dirty water tank handle
5. Hose handle
6. Hose holder
7. Handle
8. Power button
9. Brush
10. Power cord
11. Water spray button
12. Power cord hook
13. Hose

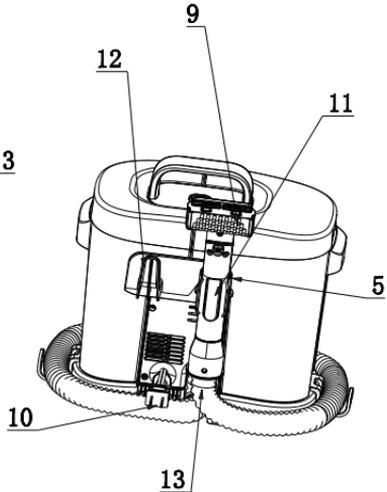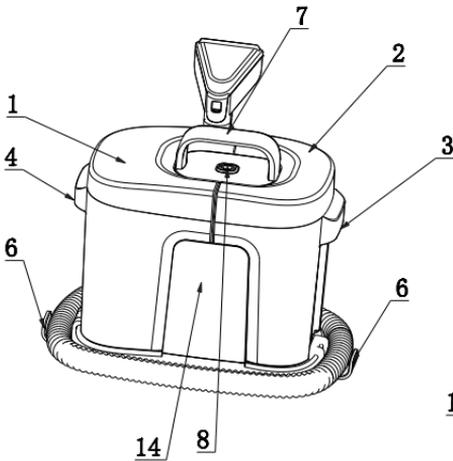


# Packing Details

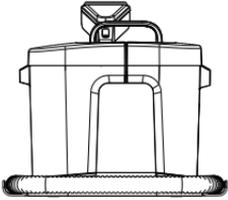


Main product



Power cord hook

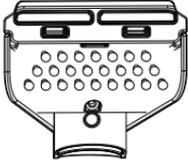

Brush

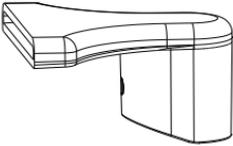

T-shape brush




Self-cleaning brush



Hose holder



Cleaning solution

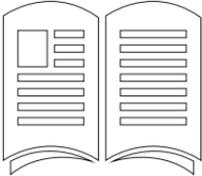


Manual

# HOW TO USE


## Hose Holder Installation

- ① Align the hose bracket with the two mounting holes, then press down firmly in a vertical direction.
- ② Once you hear an audible “click,” the clips and bracket are securely installed and will not detach.

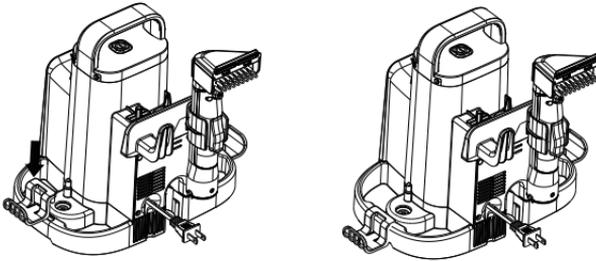


## Power Cord Holder Installation

- ① Align the power cord holder with the corresponding slot on the main unit.
- ② Then, press firmly in the direction of the arrow until you hear a “click,” confirming proper installation.

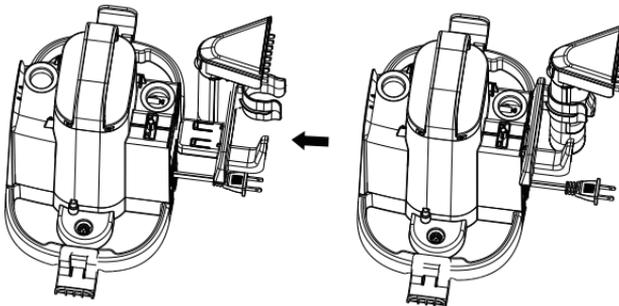

## Power Cord Storage

- ① For convenient storage, the power cord can be wound around the integrated power cord holder after use.

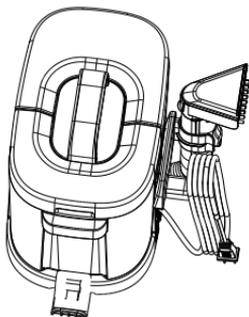

## Standard Brush Installation


- ① Align the standard brush as shown in the left pic.
- ② Press firmly straight down until it clicks into place, as illustrated in the right pic.




## Operation Instruction

Before operation, place the appliance on a flat, stable surface. Ensure the outlet voltage matches the product's required voltage and that all hoses are securely connected.


- ① Detach the clean water tank, rotate the cap to open it, and fill with water to the indicated level. (Water temperature must not exceed 40°C/104°F).

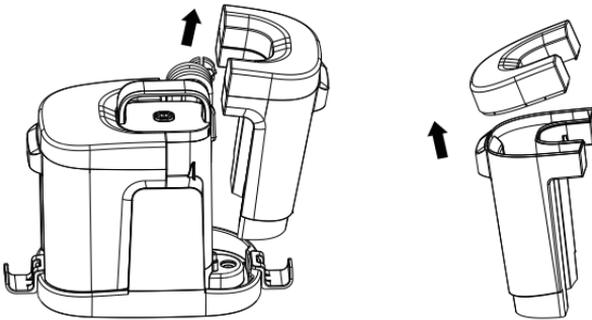


- ② Plug in the power cord.
- ③ To start: Press the power switch button.
- ④ To stop: Press the power switch button again.

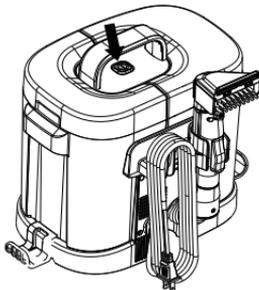

 - ⑤ To use the spray function: Hold the hose handle with the cleaning brush attached. Squeeze the spray button on the handle to release water; release the button to stop.



- ⑥ To clean stains: Spray water directly onto the stain. Scrub the area repeatedly using the brush, then vacuum the residue and wastewater into the dirty water tank. Repeat the brushing and suction steps as needed until the surface is clean.

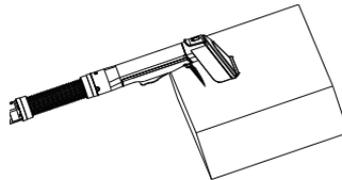

- ⑦ This product is compatible with third-party cleaning solutions. For optimal performance, we recommend using a low-foam solution. Dilute the solution with water according to the manufacturer's specified ratio and pour the mixture into the clean water tank.

Note: Various accessories are available to accommodate different cleaning requirements.

## Special Attention

### Pre-Operation Checklist:

- ① Ensure the hose is securely attached before starting the machine. This is not a vacuum cleaner. Do not attempt to
- ② vacuum dry debris. The correct operating sequence is to spray first, then suction the loosened dirt.
- ③ To prevent clogging, remove large debris (e.g., paper, plastic film) from the area before cleaning.

### Cleaning Surfaces:

- ① Designed primarily for soft surfaces (e.g., fabric, carpet). It can also be used on hard, non-porous surfaces (e.g., glass, tile, sealed marble).

### Post-Cleaning Procedure:

- ① After cleaning, run the machine for an additional 10 seconds in suction mode to remove residual water from the hose and prevent leakage.
- ② Empty the dirty water tank immediately when it reaches the "MAX" level. Note: The spray function may still operate, but continued use is not recommended.

### Safety Warnings:

- ① Do not allow children to play with, sit on, or operate the machine. This is an appliance, not a toy.
- ② Do not operate the machine in ambient temperatures below 5°C (41°F) or above 35°C (95°F).
- ③ Do not modify or alter the machine or any of its accessories.

# CLEANING AND MAINTENANCE

## Dirty Water Tank Cleaning

To maintain optimal performance and suction power, clean the dirty water tank regularly. Suction efficiency will decrease if the tank becomes overly full. Empty and clean the tank as soon as the water level reaches the "MAX" line. It is recommended to clean the tank after each use.

## Clean Water Tank Refilling & Removal

### ① When to Refill:

- Promptly refill the clean water tank when the water level is low to ensure uninterrupted operation.

### ② Refilling Instructions:

- Turn off the machine.
- Remove the clean water tank from the main unit.
- Open the tank cap and add water up to the indicated level.
- Tank Removal: Simply lift the clean water tank upward to detach it from the appliance.

**Note:** It is recommended to periodically clean the inside of the clean water tank after extended use.

## Cleaning Brush Maintenance

If the cleaning brush becomes clogged with hair or debris, please clean it promptly to maintain performance.

- ① For Hair Entanglement: Use the provided tool to carefully remove any hair or fibers wrapped around the bristles.
- ② For Internal Clogs: Detach the transparent cover from the cleaning brush. Use a suitable tool to clear any blockages from the internal air channel.
- ③ General Cleaning: The entire brush assembly can also be rinsed under clean running water.

**Note:** Ensure the brush is completely dry before reinstalling and operating the machine.

## Self-Cleaning Function Instructions

The self-cleaning brush is designed to clear residue from the internal hose of the product.

- ① Steps for Self-Cleaning:
  - Attach the self-cleaning brush to the hose handle.
  - Turn on the machine.
  - Hold the hose handle vertically and press the "Spray Switch" button to flush the internal hose.

**Note:** If the internal hose is heavily soiled, extend the flushing time for a more thorough cleaning.

# COMMON PROBLEM ANALYSIS

Problem	Cause	Solution
<b>Product does not spray</b>	<ol style="list-style-type: none"><li>1. Nozzle clogging</li><li>2. Water shortage in cleaning tank</li><li>3. The internal water pipe is blocked or broken</li></ol>	<ol style="list-style-type: none"><li>1. Use a fine needle to remove the nozzle blockage at the spray nozzle</li><li>2. Clear the water tank and add water in time</li><li>3. Contact the Consumer Care Department</li></ol>
<b>Abnormal noise</b>	<ol style="list-style-type: none"><li>1. Product suction blocked or inhaled large garbage</li><li>2. Motor fault</li></ol>	<ol style="list-style-type: none"><li>1. Clear the blockage</li><li>2. Contact the Consumer Care</li></ol>
<b>Weak suction or no water</b>	<ol style="list-style-type: none"><li>1. There is too much sewage in the sewage tank</li><li>2. Dirt clogs the suction</li></ol>	<ol style="list-style-type: none"><li>1. Clean the sewage tank in time</li><li>2. Clear the blockage in time</li></ol>
<b>Abnormal or inoperative</b>	<ol style="list-style-type: none"><li>1. No electricity</li><li>2. The ambient temperature is too high or too low</li></ol>	<ol style="list-style-type: none"><li>1. Check the power supply</li><li>2. Keep the machine at a cool and dry environment</li><li>3. Contact the Consumer Care Department</li></ol>

Remark:

After analyzing the above phenomena, the fault still cannot be eliminated, please contact the consumer care department. It is strictly forbidden for non-professionals to disassemble the machine by themselves.

# WARRANTY

## Register One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made from authorized retailers of Rosewill Inc. ("Rosewill") by the original appliance owner and is not transferable. Please visit [www.rosewill.com](http://www.rosewill.com) to register your new Rosewill appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address.

## Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to [techsupport@rosewill.com](mailto:techsupport@rosewill.com) or call to 1-800-575-9885. We will try to contact you as soon as possible. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Rosewill is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.



Appliances need to be disposed of separately for scrap. Throwing them directly into the garbage is prohibited.



## Technical Support Information

---

 [techsupport@rosewill.com](mailto:techsupport@rosewill.com)     1-800-575-9885     [www.rosewill.com](http://www.rosewill.com)

Thank you for purchasing a quality Rosewill product.

Please register your product at [www.rosewill.com](http://www.rosewill.com) for complete warranty information and support for your product.