



Explore more at **Rosewill**.

Technical Support Information

techsupport@rosewill.com 1-800-575-9885
www.rosewill.com

Thank you for purchasing a quality Rosewill product. Please register your product at www.rosewill.com for complete warranty information and support for your product.

4.If the charging cable is damaged, it is necessary to replace it to avoid danger.

2.USAGE AND STORAGE

1. Do not block or insert foreign objects into the suction and ports during operation, as this may damage the product.
2. Do not immerse the air duster in water.
3. Do not use this product in damp environments. Keep it dry at all times.
4. Do not operate the product with wet hands.
5. Do not use near flammable gases or materials, including volatile agents, paint thinners, or aerosol sprays. Doing so may cause an explosion or fire.
6. Do not leave the product powered on unattended, as it may result in a fire hazard caused by a short circuit.
7. Do not store the product in areas with high humidity.
8. Keep the product out of reach of children and infants.
9. Do not use this product near bathtubs, showers, washbasins, or other containers filled with water.
10. Do not place the air inlet too close to your hair to prevent it from being sucked into the fan.

WARRANTY

Register Your Product — One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made from authorized retailers of Rosewill Inc. ("Rosewill") by the original appliance owner and is not transferable. Please visit www.rosewill.com to register your new Rosewill appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of

your appliance) and serial number (found on the bottom of your appliance) along with your name and email address.

Warranty Service


To obtain warranty service, please contact our Consumer Care Department by email to techsupport@rosewill.com or call to 1-800-575-9885. We will try to contact you as soon as possible. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Rosewill is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.



Appliances need to be disposed of separately for scrap. Throwing them directly into the garbage is prohibited.




Explore more at **Rosewill**.

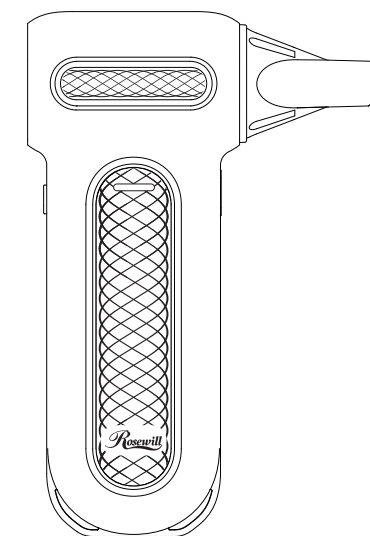

ELECTRIC AIR DUSTER


Thank you for choosing Rosewill electric air duster product. This document contains important information regarding yoursafety, legal rights, and responsibilities. Please read it carefully and follow the instructions to properly set up and use the product. Failure to comply with the guidelines and precautions outlined here may result in injury to yourself or others, and may cause damage to this product or other surrounding equipment. Any illegal use of this product is strictly prohibited. Users are solely responsible for all actions related to the purchase and use of the product. Rosewill assumes no liability for any direct or indirect damages arising from the setup or use of this product. We do not provide support or services for products obtained through unauthorized channels or used for unknown or unintended purposes.

PRODUCT OVERVIEW

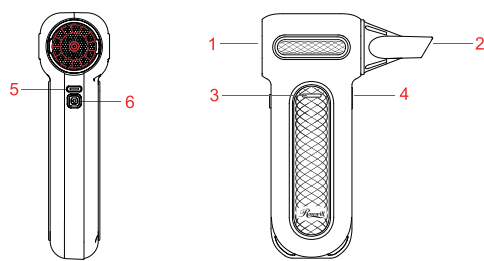

- 1.Air Inlet
- 2.Air Outlet
- 3.Battery Indicator
- 4.Start Button
- 5.Charging Port
- 6.Power & Light Button

PRODUCT LIST

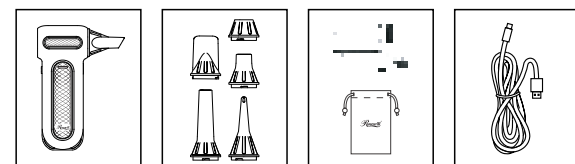

INSTRUCTION

- 1.POWER ON/OFF**
Long press the power button to turn the machine on or off. After powering on, the device enters standby mode.
- 2.LIGHT MODE**
After powering on the device, press the power button to toggle the light on or off.
- 2.START BLOWING or SUCTION**
Turbo Mode: Press and hold the start button to activate the blower to fourth gear(turbo mode). Release the button to stop.
Automatic Mode: Click the start button to activate the 1st gear and press again to jump to 2nd gear and 3rd gear. Only 1st gear, 2nd gear and 3rd gear can be used in this mode.
- 3.GEAR SHIFT**
After powering on, press the start button repeatedly to cycle through the four speed gears in sequence.
1st gear: Gentle breeze
2nd gear: Normal breeze
3rd gear: Strong breeze
4th gear: Super breeze
- 4.CHARGING**
The product supports fast charging (approximately 3.5 hours).

- It cannot be used while charging.
- 5.BATTERY INDICATOR LIGHT**
While Charging: Indicator lights flash in sequence according to the battery level.
Fully Charged: All four indicator lights stay on.
Low Battery: A light is flashing continuously.
Battery Levels: 4 lights on – 100%, 3 lights on – 75%, 2 lights on – 50%, 1 light on – 25%.
 - 6.INTELLIGENT PROTECTION FUNCTION**
The device will automatically shut down if there is no operation within 70 minutes in standby mode.

PRODUCT PARAMETERS

Product Name	Electric Air Duster
Rosewill Model	RHAD-25003 RHAD-25003GD RHAD-25003BK
Product Model	RHAD-25003
Battery Capacity	4000mAh*2
Max Power	200W
Max Running Time	110min (1st gear) 38min (2nd gear) 22min (3rd gear) 15min (4th gear)
Type-C Charging	≤3.5h
Product Size	65 * 45 * 155mm
Product Weight	292g

MAINTENANCE

Please keep this product out of reach of children and pets. Store in a dry environment. Do not place the product in high-temperature areas or leave it in a car exposed to direct sunlight. Do not overcharge or over-discharge the battery, as this may damage the battery cells. Regularly remove any attachments from the air duster and suction port. Do not use nails or sharp objects to press or scratch the suction or blowing ports, as this may damage the product. Do not use alcohol, nail polish remover, or harsh detergents to clean this product, as it may cause malfunction, breakage, or discoloration.

ATTENTION

To reduce the risk of malfunction, electric shock, injury, fire, death, and equipment or property damage, please be sure to follow the following safety precautions.

CHARGING CABLE

1. Do not use when the charging cable is damaged or the product overheats, as it may cause burns, electric shock, or fire due to short circuits.
2. Do not unplug or insert charging wires when your hands are wet, as this may cause electric shock and injury.
3. Do not damage, modify, forcefully bend, pull, twist the charging line, or place heavy objects or squeeze the charging line during charging, otherwise it may cause electric shock or fire due to short circuits.