



Explore more at
www.rosewill.com

Technical Ssupport Information

techsupport@rosewill.com

www.rosewill.com

Thank you for purchasing a quality Rosewill product.
Please register your product at www.rosewill.com for complete warranty information and support for your product.

Regularly remove any attachments from the air duster and suction port. Do not use nails or sharp objects to press or scratch the suction or blowing ports, as this may damage the product.
Do not use alcohol, nail polish remover, or harsh detergents to clean this product, as it may cause malfunction, breakage, or discoloration.

ATTENTION

To reduce the risk of malfunction, electric shock, injury, fire, death, and equipment or property damage, please be sure to follow the following safety precautions.

1. CHARGING CABLE

- Do not use when the charging cable is damaged or the product overheats, as it may cause burns, electric shock, or fire due to short circuits.
- Do not unplug or insert charging wires when your hands are wet, as this may cause electric shock and injury.
- Do not damage, modify, forcefully bend, pull, twist the charging line, or place heavy objects or squeeze the charging line during charging, otherwise it may cause electric shock or fire due to short circuits.
- If the charging cable is damaged, it is necessary to replace it to avoid danger.

2. USAGE AND STORAGE

- Do not block or insert foreign objects into the suction and ports during operation, as this may damage the product.
- Do not immerse this product in water.
- Do not use this product in damp environments. Keep it dry at all times.
- Do not operate the product with wet hands.
- Do not use near flammable gases or materials (such as volatile agents, paint thinners, sprays, etc.), as this may cause an explosion or fire due to a short circuit.
- Do not leave the product powered on unattended, as it may result in a fire hazard caused by a short circuit.

- Do not store the product in areas with high humidity.
- Keep the product out of reach of children and infants.
- Do not use this product near bathtubs, showers, washbasins, or other containers filled with water.
- Do not place the air inlet too close to your hair to prevent it from being sucked into the fan.

WARRANTY

Register One (1)Year Limited WarrantyThis One (1)

Year Limited Warranty applies to purchases made from authorized retailers of Rosewill Inc. ("Rosewill") by the original appliance owner and is not transferable. Please visit www.rosewill.com to register your new Rosewill appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to techsupport@rosewill.com. We will try to contact you as soon as possible. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Rosewill is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the prob-lem you are encountering with the appliance.




Appliances need to be disposed of separately for scrapT
hrowing them directly into the garbage is prohibited.

Rosewill®




Explore more at *Rosewill*.

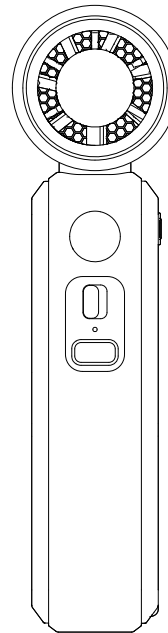

PORTABLE MULTI-FUNCTIONAL FAN

Thank you for choosing Rosewill electric air duster product. This document contains important information regarding your safety, legal rights, and responsibilities. Please read it carefully and follow the instructions to properly set up and use the product. Failure to comply with the guidelines and precautions outlined here may result in injury to yourself or others, and may cause damage to this product or other surrounding equipment. Any illegal use of this product is strictly prohibited. Users are solely responsible for all actions related to the purchase and use of the product. Our company assumes no liability for any risks or consequences (including direct or indirect third-party losses) arising from the setup or use of this product by end users. We do not provide support or services for products obtained through unauthorized channels or used for unknown or unintended purposes.

PRODUCT OVERVIEW

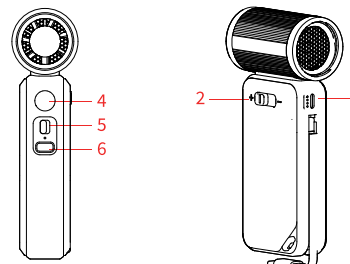


- Charging Port
- Shift Lever
- Output Type-C Cable
- LED Light
- Toggle Switch
- LED Light Power Button

PRODUCT PARAMETER

Product Name	Multi-Functional Fan		
Model Name	RHAD-26001OR	Power Bank	4800mAh (5V / 2A)
	RHAD-26001DG	Output Capacity	
Rated Power	200W	Type-C Charging	≤ 4 h
Battery Capacity	4000mAh x 2	Product Size	1.57" x 2.68" x 5.98"
Max Running Time	160min (Low speed)	Product Weight	0.70 lb
	40min (Mid speed)		
	12min (High speed)		

OPERATING INSTRUCTIONS

- Turn the main switch to the ON position, the main switch will turn on, and the battery indicator will light up.
- Slide the shift level to turn on the fan and adjust the fan speed.
- Short press the power button to activate the low-brightness lighting mode. Press it again to activate the high-brightness lighting mode. Press it once more to turn off the lights.
- Move the main switch to the "OFF" position. The main switch is turned off, the battery indicator light goes out, and all functions are deactivated.

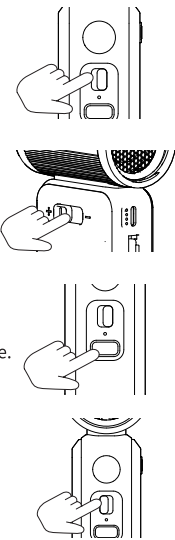


OPERATING INSTRUCTIONS

Charging

During charging the battery level indicator flashes and shows the real-time battery level.

Equipped with four different snap-on air nozzles

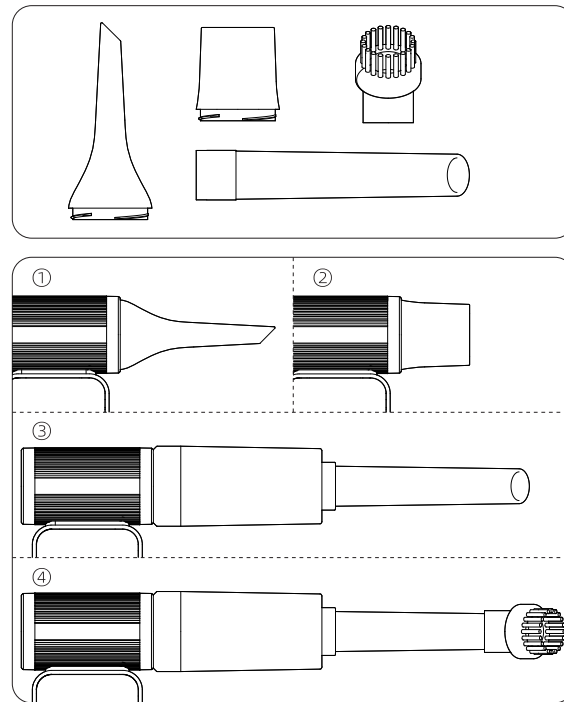

PRECAUTIONS

- Do not disassemble, modify or repair the product without authorization.
- Do not put the product into fire to avoid explosion risk.
- Stop charging immediately if the product overheats or deforms abnormally.
- Avoid long-term direct blowing on the human body, especially the elderly and children, to prevent physical discomfort.
- Do not insert fingers, sharp or metal objects when in use to avoid product malfunction, electric shock or personal injury.
- Do not plug or unplug the power supply with wet hands or a wet towel to prevent electric shock.
- This product is not waterproof. Do not wash it with water or use it in the bathroom. Wipe and dry the surface completely before powering on. Do not use the product if water enters the interior.
- Do not bend or pull the power cord during charging to avoid poor contact.

BATTERY PROCESSING

- Remove the battery from the appliance before discarding the product.
- Ensure the appliance is powered off before removing the battery.
- Dispose of the battery according to its type and local regulations.
- Do not dispose of the battery with household waste.
- The battery must be disposed of safely.

MAINTENANCE

Please keep this product out of reach of children and pets.
Store in a dry environment. Do not place the product in high-temperature areas or leave it in a car exposed to direct sunlight.
Do not overcharge or over-discharge the battery, as this may damage the battery cells.