 




4 IN 1 CORDLESS VACUUM CLEANER

User Manual



Explore more at www.rosewill.com

CONTENTS

IMPORTANT SAFEGUARDS & OPERATIONAL NOTES	1
PRODUCT DESCRIPTION	3
OPERATING INSTRUCTIONS	5
APPLICATION INSTRUCTIONS	6
WARRANTY	9

IMPORTANT SAFEGUARDS & OPERATIONAL NOTES

OPERATIONAL NOTES

- **Motor Noise:** The built-in motor operates at high speeds and may generate slight operational noise. This is a normal characteristic of the product and is not a cause for concern.
- **Charging Restriction:** To preserve battery integrity, the device cannot be operated while actively charging. If immediate use is required, please pause the charging cycle before operating the device.
- **Optimal Charging:** To maximize battery life and usage duration, it is highly recommended to fully charge the product prior to each use.
- **Battery Maintenance:** For long-term storage, ensure the battery is fully charged before placing the device in storage.
- **Periodic Recharging:** To prevent permanent battery damage, please recharge the device at least once every three months during extended periods of non-use.
- **Heat Generation:** It is normal for the unit to emit heat during continuous operation. This thermal generation is safe and does not indicate a malfunction.

⚠ DANGER: CRITICAL SAFETY WARNINGS

To prevent severe injury, fire, or electric shock, please strictly adhere to the following safety precautions:


- **Do NOT vacuum up liquids** – Never attempt to inhale water or any other fluids into the device.
- **Do NOT vacuum hazardous materials** – Avoid inhaling flammable substances, combustible materials, or hot/unquenched ashes to prevent fire.
- **Do NOT submerge in liquid** – Never immerse the vacuum cleaner in water or any other liquid.
- **Do NOT misuse or incinerate** – Do not disassemble, strike, crush, squeeze, or throw the device into fire.
- **Do NOT use if wet** – If the device has been submerged in water, do not operate or turn it on under any circumstances.

PRODUCT DESCRIPTION

Specification

Model	RHVC-26003BK、RHVC-26003PU、RHVC-26003RD
Rated Power	Max 180W
Dust Cup Capacity	8.7 oz (260ml)
Suction & Runing Time	High: 20Kpa & 18min Low: 8Kpa & 40min
Type-C Charging	9V  2A
Charging Time	≤2.5h
Battery Capacity	2600mAh * 3
Dimension	11.81 x 2.17 x 2.17 inch
Weight	1.14 lbs

 
Product Overview

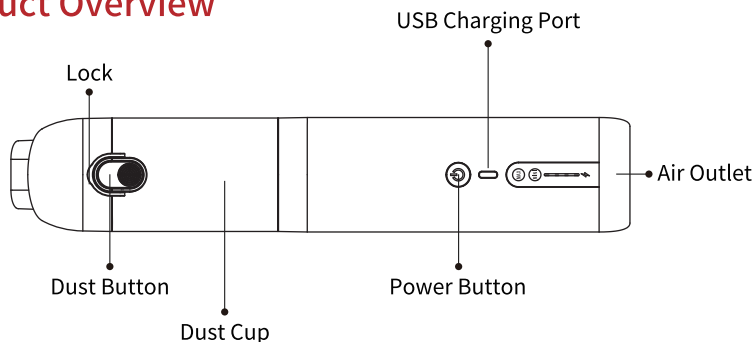


Accessories



 
Wide Suction Nozzle x1



Long Suction Nozzle & Brush x1

 

USB Cable x1

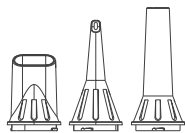 

Air Duster Nozzle x3



Extension Hose x1



HEPA Filter x1



Cleaning Brush x3



User Manual x1

OPERATING INSTRUCTIONS

POWER & SPEED CONTROLS

- **Power On & Speed Adjustment:** Press and hold the power button for 2 seconds to turn the device on. Once powered on, it defaults to Low level. Briefly press the power button to cycle through the speeds:
Low → High → Power Off.
- **Instant Shutdown:** At any time during operation, press and hold the power button for 2 seconds to immediately turn the device off.

DUST CUP MAINTENANCE & FILTER CLEANING

- **Emptying Debris:** Remove the dust cup from the main unit and empty the collected crumbs and debris directly into a trash bin.
- **Deep Cleaning:** Take out the internal vacuum filter located inside the dust cup and clean it thoroughly to remove accumulated fine dust.
- **Filter Maintenance:** To ensure optimal performance and extend the service life of your HEPA filter, we recommend regular cleaning to remove accumulated dust and debris. Depending on your usage frequency and environmental dust levels, please remove the filter every 2 weeks to 2 months for cleaning.

 **Important Reminder:** Always ensure the device is **completely powered off** and the motor has stopped running before attempting to remove or clean the dust cup to ensure safety and prevent damage.

POWER & CHARGING GUIDE

- **Connecting to Power:** Plug the included USB cable into the charging port on the device. Connect the other end to a standard 9V/2A USB power source (e.g., a wall charger, mobile phone adapter, laptop, or portable power bank).
Note: For the fastest and most efficient charging performance, we strongly recommend using a 9V/2A adapter.
- **Charging Status Indicator:** The built-in LED indicator will display the charging status as follows:
 - Charging in progress: The indicator light will flash red.
 - Fully charged: The indicator light will turn solid green and remain continuously lit.

APPLICATION INSTRUCTIONS

This device features dual functionality for vacuuming and blowing/inflating. Please select the appropriate accessories based on your intended use.

- **Vacuuming Mode**

Select the desired vacuuming accessory (brush, crevice tool, or extension tube) based on your cleaning needs.

 
Firmly attach the accessory to the front suction port (the intake side) of the main unit until it clicks securely into place.

- **Blowing / Inflating Mode**

Select the appropriate nozzle attachment for blowing dust or inflating items.


Firmly attach the chosen accessory to the rear exhaust port (the blowing side) of the main unit until it is securely fitted.

(Please refer to the diagram above for correct accessory installation ports.)

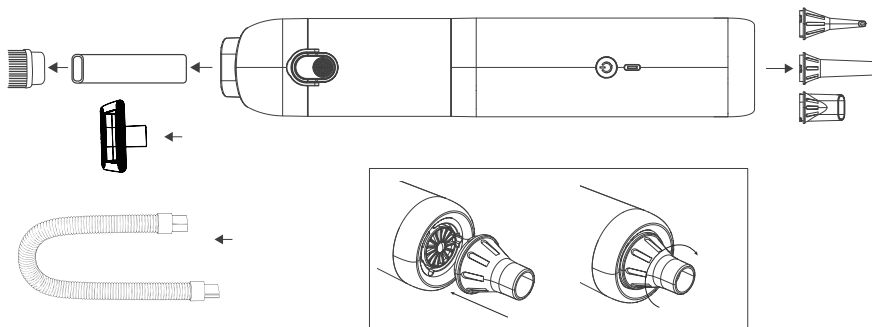


How To Clean?

 
After use, the dust and debris of the dust cup should be cleaned up in time.

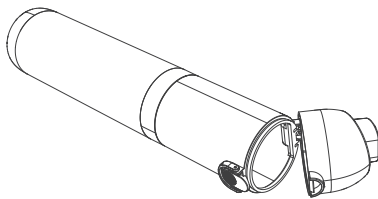

 1. One-click dust pouring: break the lock, press the dust pour button, and the dust cup door can be popped open to pour out the garbage. After the dust cup door is closed, it needs be to be buckled with a lock to prevent accidental touch of the button, causing the garbage to pour out.

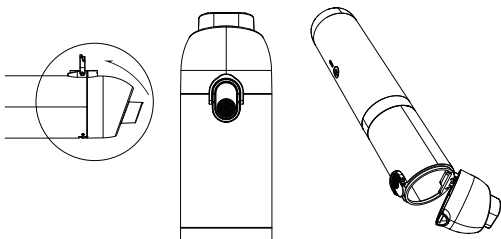

 
2. Rotate the dust cup in the direction shown on the front of the main unit, and then pull the dust cup out.




3. Hook the filter handle to remove the filter assembly from the dust cup. After the filter assembly is removed, the dust inside the dust cup can be emptied.



 
4. Use a cleaning brush to clean the filter.

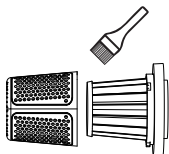

 5. Use clear water to wash the dust cup and filter.

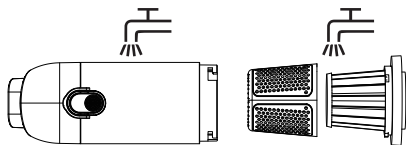

 6. After cleaning, wait for the filter and dust cup to dry completely before reloading them on the main machine.

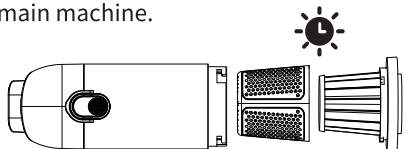

Do not wash the main unit or wet the charging port. It is recommended to replace the filter every 3 months, and if it is used frequently, the cleaning and replacement cycle can be shortened according to the actual situation to maintain strong suction.


Note: Do not use detergent to clean the filter, just clean water!

AIR DUSTER NOZZLE

Nozzle 1: Scrubbing and removal of static-charged dust or stubborn, thick layers of dirt.

Nozzle 2: Blowing off dust and debris from wide surfaces, such as computer cases (hosts), keyboards, and desktop areas.

 Nozzle 3: Inflation for items like swimming rings, beach balls, and yoga balls.

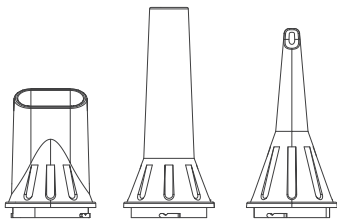

Nozzle1

Nozzle2

Nozzle3

WARRANTY

Register One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made from authorized retailers of Rosewill Inc. ("Rosewill") by the original appliance owner and is not transferable. Please visit www.rosewill.com to register your new Rosewill appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to techsupport@rosewill.com. We will try to contact you as soon as possible. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Rosewill is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.



Appliances need to be disposed of separately for scrap. Throwing them directly into the garbage is prohibited.



Technical Support Information

✉ techsupport@rosewill.com 🌐 www.rosewill.com

Thank you for purchasing a quality Rosewill product.

Please register your product at www.rosewill.com for complete warranty information and support for your product.