
Rosewill®

MULTI-PURPOSE PORTABLE CLEANER

User Manual

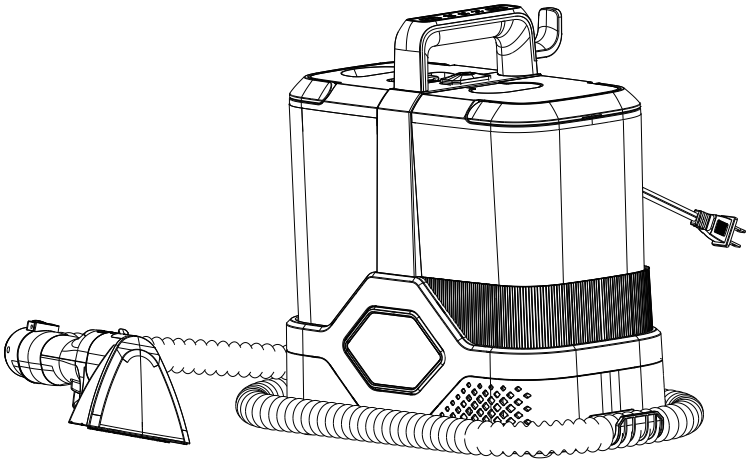

SCAN ME

Explore more at **www.rosewill.com**

CONTENTS

IMPORTANT SAFEGUARDS	1
PRODUCT DESCRIPTION	4
HOW TO USE	7
CLEANING AND MAINTANCE	14
TROUBLE SHOOTING	20
WARRANTY	22

⚠ IMPORTANT SAFEGUARDS

Important

Before using this product, carefully read and understand this user manual and store it in a safe place. This appliance is intended for household or similar-environment use only.

Danger

- Do not submerge the base unit in water or any other liquid. Do not rinse the base under running tap water.
- For household use only. Never leave the appliance unattended while powered on.
- Always place the unit on a flat, stable surface prior to operation.

Warnings

- Before connecting to power, verify that the voltage rating printed on the appliance matches your local mains voltage, and confirm all components are properly assembled.
- This unit shall not be used unsupervised by children or individuals with limited cognitive capabilities.
- Operate only on flat surfaces; do not use on inclined or sloped surfaces.
- Unplug the power cord from the wall outlet when leaving home or during long-term non-use.
- A slight odor may occur during initial startup. Continued use is acceptable if no abnormal conditions appear.
- Never handle power plugs with wet hands to avoid electric shock hazards.

⚠ Warnings

- For safety, do not disassemble the appliance while it is running. Do not attempt self-repair; servicing must be performed only by qualified professionals. Improper disassembly may cause personal injury.
- Stop using the product if the power cord, plug or any accessory shows damage.
- If the power supply cord becomes damaged, it must be replaced by the manufacturer, its authorized service agent or similarly qualified personnel to eliminate safety risks.
- Do not modify or extend the appliance' s power cord in any way.
- Do not use outdoors, and do not repurpose this unit for tasks outside its intended design.
- All supplied accessories are designed exclusively for this cleaner. Do not use them on other devices to prevent potential hazards.
- Do not pull or tension the power cord, and avoid tying the cord around objects.
- Non-qualified personnel must not open internal components, as this creates safety hazards.
- Do not move the appliance while it remains plugged in. If relocation is required, power the unit off and disconnect the plug first.
- Always unplug the unit and allow it to cool fully before cleaning.
- Do not insert any foreign objects into the hot-air exhaust openings.
- Routinely inspect the power cord, hose and brush heads for signs of wear or damage. Discontinue use if any part is damaged. Damaged cords require replacement by

⚠ Warnings

certified technicians.

- Fill the clean-water tank with sufficient clean water before every operation. Operating without adequate water may damage the machine.
- When performing disassembly, ensure the appliance is unplugged and both motor and pump have cooled to room temperature. Never take apart a hot or connected unit.
- Prevent liquid from the appliance from contacting power adapters or internal electrical parts, which could cause permanent damage.
- This appliance is not a toy. Keep away from children under 12 years old. Close adult supervision is required whenever the unit operates near children.
- Always power off all controls and disconnect from mains before cleaning or performing maintenance.
- Only use attachments and accessories recommended by the manufacturer.
- Do not lift or drag the appliance by pulling its power cord. Avoid pinching the cord in doorways, pulling across sharp edges, driving over the cord, or exposing it to high heat.
- Do not operate the cleaner if it has been dropped, exhibits visible damage, or develops leaks.
- Do not vacuum hot or burning materials such as cigarette butts, matches or hot ashes. Avoid picking up dry dust, large debris, plastic bags, fine powders, sharp metal items (needles, pins), sand or pebbles.
- Immediately stop operation if foreign material is drawn into the unit.
- For questions or assistance, contact your service center or authorized dealer.


PRODUCT DESCRIPTION

This multi-purpose portable cleaner handles accidental spills and spot stains quickly. Compact and user-friendly, it targets localized messes without needing a full-size cleaning machine. Effectively treat spills and stains on carpets, upholstery, vehicle interiors and many other surfaces.

Specification


Model	RHFC-26003BL
Rated Power	1500W
Clean Water Tank	74.7 oz
Dirty Water Tank	40.6 oz
Dimension	L x W x H: 14.6 x 9.0 x 14.0 inch
Weight	9.9 lb

Product Presentation

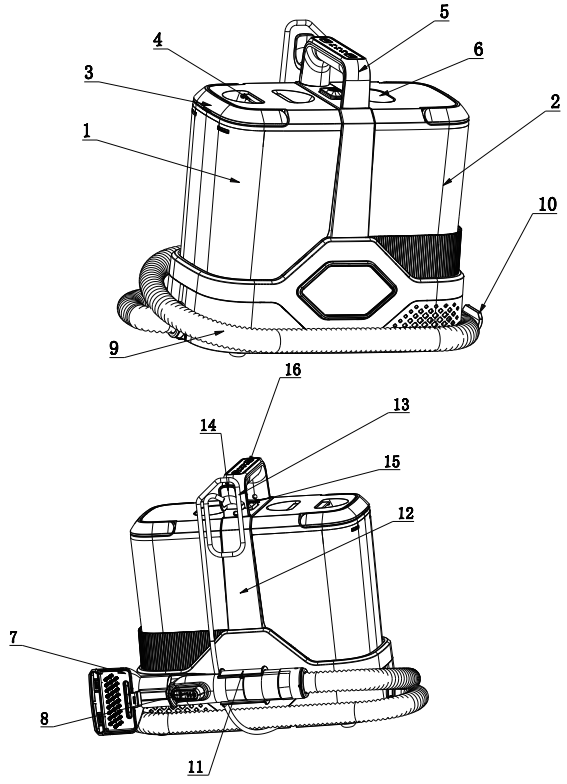

1. Dirty-Water Tank
2. Clean-Water Tank
3. Water-Tank Handle
4. Dirty-Water Tank Release Button
5. Main-Unit Carry Handle
6. Clean-Water Tank Cap
7. Standard Brush Head
8. Water-Spray Trigger Button
9. Flexible Hose
10. Hose Support Bracket
11. Handle Mount Bracket
12. Main Body
13. Power Cord
14. Cord-Winding Hook
15. Power ON/OFF Button
16. Display Screen


Packing details

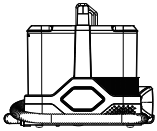


Main Unit




Unclogging Needle




Handle Mount Bracket



Instruction Manual



Standard Brush + Silicone Squeegee Blade




Wide-Surface Brush



Self-Cleaning Brush




Hose Support Bracket

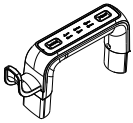


Main-Unit Carry Handle




Kitchen-Brush Adapter



Steel-Wool Brush



Large Nylon Brush




Small Nylon Brush



Triangular Detail Brush



Gap Nozzle



Sponge Brush




Brass Brush

HOW TO USE

Accessory Installation


Install the Main-Unit Carry Handle

- Align the cord-winding hook and power-cord side as shown in the assembly drawing.
- Insert the handle vertically down into its mating socket. A tight fit between handle and main body confirms correct installation.

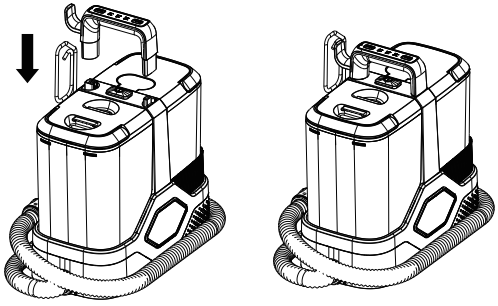


Attach the Hose-Handle Fastener

- Bring the hose-handle assembly toward the main unit and align with the locking slot.
- Press firmly straight down. An audible “click” indicates secure installation.

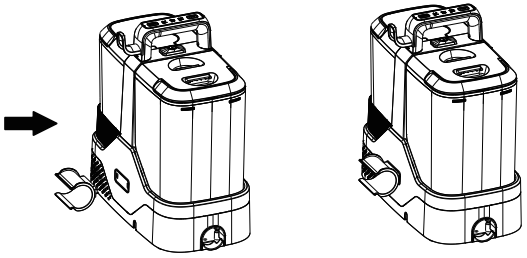


Mount the Hose-Support Bracket

- Flip the main unit upside-down. Align the hose-support bracket with its slots.
- Press vertically downward until you hear two “click” sounds to confirm proper locking.

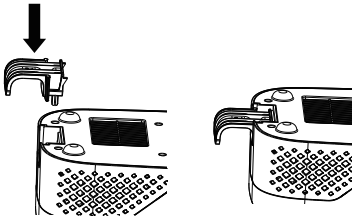


Power-Cord Storage

This appliance includes a long power cord. After use, wrap the cord around the built-in winding hook for tidy storage.

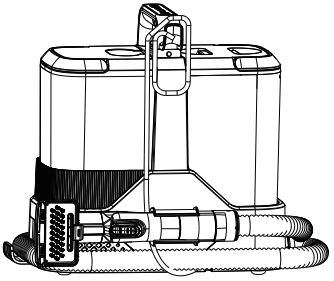

Control-Panel Operation Guide

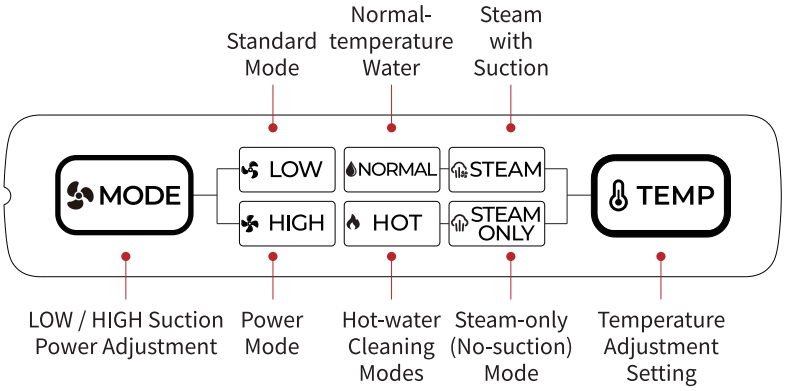

Operating Steps

1. Turn on the main-unit power switch, then activate functions via the control-panel buttons.
2. Upon power-up, the appliance defaults to Normal-Temperature mode; its indicator stays lit.
3. Tap the TEMP icon to enable hot-water mode. The indicator flashes while heating and remains steady once heating completes.
4. Tap the TEMP icon again to activate steam function. The indicator flashes during heating and glows solid white once ready.
5. Repeatedly tap the TEMP icon to engage steam-without-suction; motor speed will reduce automatically once heating finishes.
6. Press the MODE icon to switch to high-suction mode. The unit defaults to Low-Power mode on startup.


General Operating Instructions

- Remove large debris (paper scraps, plastic film, etc.) from target surfaces first to prevent airway blockages.
- This cleaner is optimized for soft flat surfaces such as fabric and plush materials. With compatible attachments, it also works on hard surfaces including glass, tile and marble countertops.
- Set the machine on level ground. Confirm supply voltage matches unit requirements and verify the hose is fully connected.
- Remove the clean-water tank, open its cap, and add water no hotter than 40°C(104°F).
- Disconnect then reconnect the power plug. Power on the main unit.
- The unit starts in room-temperature water mode. Touch the mode-selection key to cycle between hot-water and steam modes; corresponding white indicator lights illuminate.
- Grip the hose handle with brush attached. Press and hold the spray trigger to dispense water or steam from the nozzle; release the trigger to stop output.
- The spray trigger features a self-lock mechanism: push upward to lock continuous spray; push downward to release. You may also press momentarily for intermittent spray.
- Spray water or steam onto stained fabric areas. Scrub repeatedly with the brush head, drawing stains and dirty water into the wastewater tank. Repeat as needed to remove stains.
- Swap accessories according to different cleaning-task requirements.
- Mix the manufacturer-supplied low-foam cleaning solution into the clean-water tank to improve cleaning performance.


Important Note: Always spray fluid first, then extract dirty water. This appliance is not a vacuum cleaner. Do not attempt to vacuum dry debris directly.

Hose, Hose-Handle & Standard-Brush Removal / Installation / Storage (Applicable for detachable-hose models)

1. Removing the hose handle: Grip close to the connector. Press the hose-release latch with your thumb and pull firmly in the release direction. After steam-cleaning cycles, wait for full cool-down before detaching the hose.

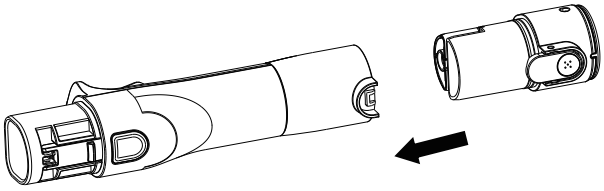


2. Installing the hose handle: Push the hose-handle connector firmly into position until you hear a click. Pull gently backward to confirm it is securely latched.

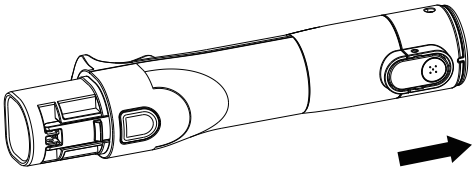


3. Hose storage: After finishing work, coil the hose into the storage grooves on the unit bottom for neat storage.

4. Removing the standard brush: Hold the brush-head body, lift the release latch in the indicated direction, and detach.

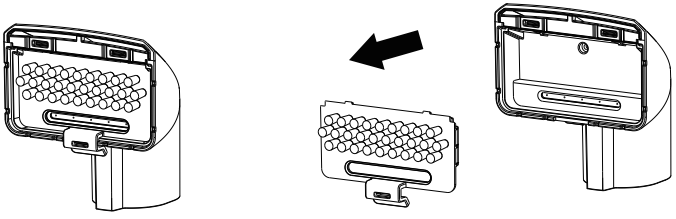

5. Installing the standard brush: Align the two raised tabs on the brush head with the slots on the brush body. Press firmly down until it snaps into position.

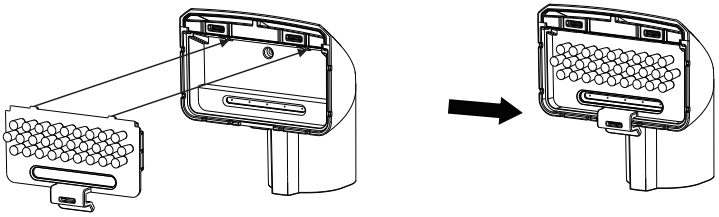

Critical Usage Notes


- Confirm the hose is correctly installed before power-on.
- Always spray liquid before extracting waste. Do not vacuum dry debris.
- Clear large-size debris from surfaces beforehand to avoid airway clogging.


- This unit is designed primarily for soft fabric-type surfaces; compatible accessories extend use to hard surfaces such as tile, glass and marble.
- After cleaning completes, keep the machine running for 10 seconds to pull residual water inside the hose into the dirty-water tank. Otherwise leftover liquid may leak from the nozzle.
- After power-off, hold down the spray trigger to fully vent hot water or steam trapped inside the hose. Failure to release residual steam may cause scald injuries.
- Exercise great caution when operating hot-water or steam modes: burn hazard exists.
- This appliance is not a toy. Do not allow children to play with or sit on the main body.
- Do not operate in ambient temperatures below 5°C(41°F) or above 35°C(95°F).
- Unauthorized modification of the unit or accessories is strictly prohibited.

CLEANING AND MAINTENANCE

Dirty-Water Tank Care

- Clean the dirty-water tank regularly to preserve performance. Suction power will drop if wastewater exceeds the maximum fill mark. Empty and clean promptly when reaching the max--level indicator. Cleaning after every use is recommended.
- Removal procedure: Power off the unit. Pull the dirty-water tank diagonally upward to take it out. Press the lid-release button to open the cover. Empty wastewater and rinse thoroughly.

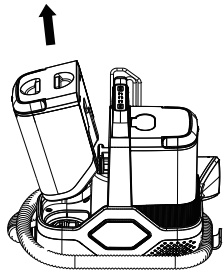


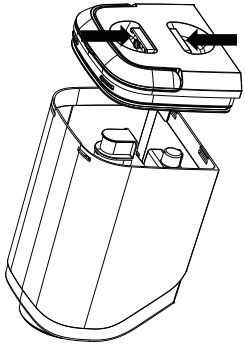

Clean-Water Tank Filling & Maintenance


- Refill promptly when the clean-water tank runs low.
- How to fill: Shut down the appliance, remove the clean-water tank, unscrew its cap, and add appropriate amounts of water.
- Removal procedure: Pull the clean-water tank diagonally upward to separate from the main unit.

Note: Thoroughly clean the interior of the clean-water tank after extended periods of use.

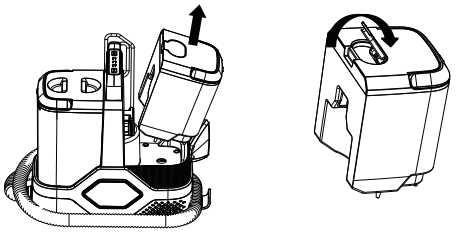

Brush-Head Maintenance


- Promptly clean brushes tangled with hair or clogged with dirt.
- Cut or pull away entangled hair from brush bristles.
- For internal clogging: Remove the transparent top cover of the brush, and clear the internal airway with a suitable tool.
- Most brush assemblies may be rinsed directly under running tap water.

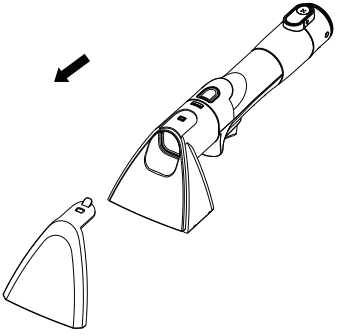

Accessory Function Reference


- Wide-Surface Brush: Treat large-area stains on hard countertops such as glass, ceramic tile and marble.

- Standard Brush: General-purpose accessory for medium-size stain areas. Its 0.25mm-diameter nylon bristles use a single-row four-hole water-dispersion design, supporting hot-water and-steam output for sofas, carpets, mattresses, pillows and other fabric surfaces. The silicone-blade variant uses soft silicone material to safely clean delicate fabrics.
- Self-Cleaning Brush: Flush internal pipelines of the appliance.

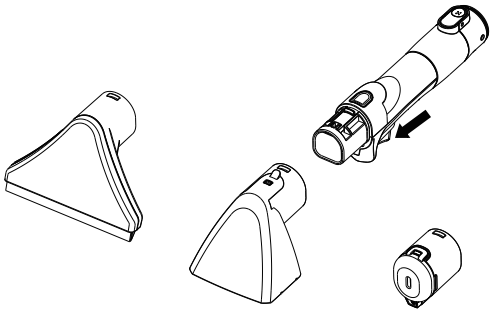


1. Attach self-cleaning brush to the hose handle.
2. Power on the unit.
3. Hold the hose handle vertically. Activate the spray trigger to flush internal tubing.

Note: Extend rinsing time if internal pipes are heavily soiled.

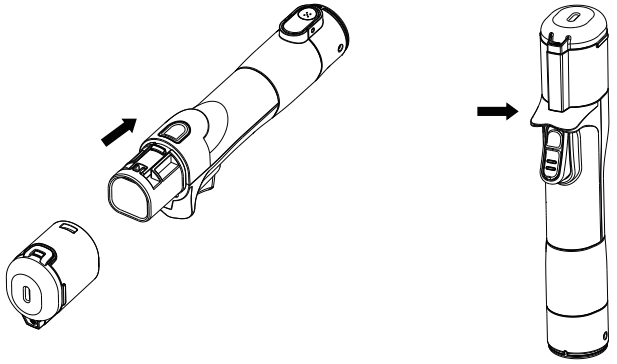


Spray-Trigger Self-Lock Operation

Press the water-spray trigger and slide its lock tab forward to engage continuous-spray lock. Slide the lock tab backward to release.

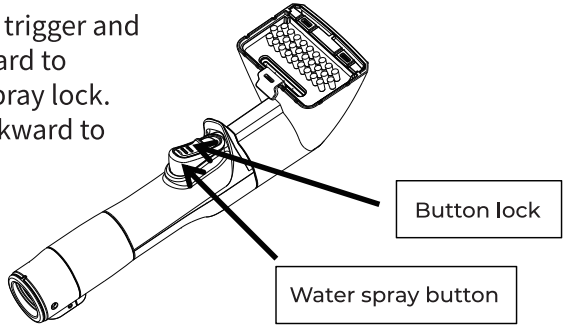


Using the Unclogging Needle

If brush-head spray holes stop dispensing water or produce distorted spray streams, use the supplied unclogging needle to clear blockages in a timely manner.

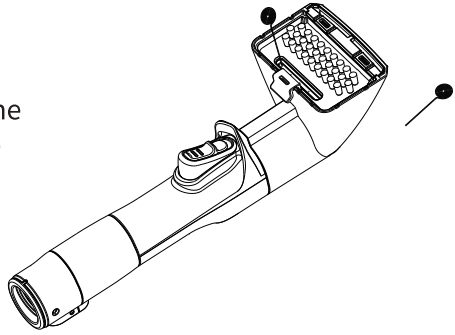


Kitchen-Series Brushes Installation

- Remove the existing brush head. Insert the kitchen-brush adapter and rotate clockwise until fully seated.
- For individual kitchen brush attachments: Align the two small locating tabs with matching grooves, press in, then twist clockwise until locked.

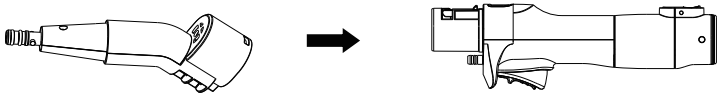

Kitchen-Accessory Usage Scenarios

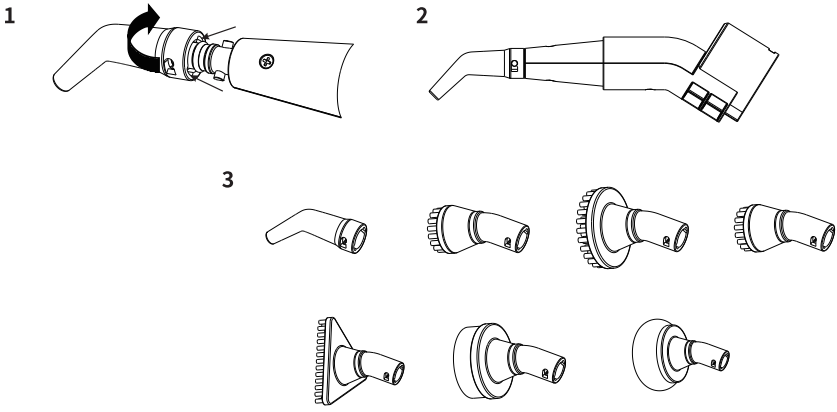

Gap Nozzle: Clean sink crevices, tile corners and tight gaps.
Small / Large Nylon Brushes: Range hoods, gas stoves, ovens, microwaves, air-conditioner filters, window screens and similar surfaces.
Brass Brush: Barbecue grates, wire mesh, gas burner caps and pot supports.
Triangular Detail Brush: Sanitary right-angle corners and hard-to-reach dead corners in kitchens.
Sponge Brush: Cookware, tableware, cutlery and kitchen utensils.
Steel-Wool Brush: Kitchen sinks, stovetop surfaces.

TROUBLE SHOOTING

Issue	Root Cause	Recommended Solution
Abnormal operating noise	Foreign objects drawn into clean-water tank or internal pipelines	1. Promptly disassemble and clear blockages 2. Contact seller/service if problems persist
Weak suction / Fails to extract dirty water	Dirty-water tank is overfilled	Empty wastewater tank immediately
Unit will not start	Power-supply interruption	Check wall outlet, power cord and plug connections

For other unresolved faults, get support from your local service center or contact the service hotline.

Additional Safety Reminders

- Only authorized professional technicians may disassemble this appliance; do not attempt self-disassembly.
- The power cord is long; keep it away from water. Use the cord-winding hook for tidy storage.
- Keep the unit away from cigarette butts, lighters and all open-flame sources.
- Always power off and unplug prior to cleaning the appliance.
- Do not place heavy or sharp objects on or around the cleaner.
- Intended for indoor household use only; outdoor operation is prohibited.
- Do not place items or objects heavier than 10kg on top of the unit.
- Before use, clear fragile objects (glass cups, lamps) and intake-blocking items (power cords, paper scraps, curtains) from the working area.
- Avoid placing the cleaner on unstable surfaces where it may fall (tables, chairs).
- Empty the dirty-water tank before use whenever it is full.
- Operating ambient temperature must stay within 5°C(41°F) - 35°C(95°F). Do not use in excessively hot or cold environments.
- Alert other people in the room during operation to prevent tripping hazards caused by the power cord and hose.

WARRANTY

Register One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made from authorized retailers of Rosewill lnc. ("Rosewill") by the original appliance owner and is not transferable. Please visit www.rosewill.com to register your new Rosewill appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to techsupport@rosewill.com. We will try to contact you as soon as possible. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Rosewill is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.



Appliances need to be disposed of separately for scrap. Throwing them directly into the garbage is prohibited.



Technical Support Information

techsupport@rosewill.com www.rosewill.com

Thank you for purchasing a quality Rosewill product.
Please register your product at www.rosewill.com for complete warranty information and support for your product.