TRAVEL ADAPTER
User Manual

SCAN ME

Explore more at **www.rosewill.com**

Model: OL-A03D-PQ100
Rating:100~250V~10A Max, 50/60Hz
250V~10A/2500W 100V~10A/1000W

SINGLE PORT OUTPUT MODE:
C1/C2 Output: 5.0V ⎓3.0A/9.0V ⎓3.0A/12.0V ⎓3.0A
15.0V ⎓3.0A/20.0V ⎓5.0A(100.0W Max)
C3 Output: 5.0V ⎓3.0A/9.0V ⎓2.22A/12.0V ⎓1.66A(20.0W Max)
A1 Output: 5.0V ⎓3.0A/9.0V ⎓2.0A/12.0V ⎓1.5A(18.0W Max)


DUAL PORT OUTPUT MODE:
C1+C2 Output: 65W+35W(100.0W Max)
C1+C3 Output: 75W+20W(95.0W Max)
C1+A1 Output: 75W+18W(93.0W Max)
C2+C3 Output: 75W+20W(95.0W Max)
C2+A1 Output: 75W+18W(93.0W Max)
C3+A1 Output: 5.0V ⎓3.0A(15.0W Max)

THREE PORT OUTPUT MODE:
C1+C2+C3 Output: 45W+35W+20W(100.0W Max)
C1+C2+A1 Output: 45W+35W+18W(98.0W Max)
C1+(C3+A1) Output: 75W+15W(90.0W Max)
C2+(C3+A1) Output: 75W+15W(90.0W Max)

FOUR PORT OUTPUT MODE:
C1+C2+(C3+A1)Output: 45W+35W+15W(95.0W Max)


LCD Screen Size: 1.47 Inch
Switch: Touch Switch
Display Resolution: 172(H)RGB ×320(V)

Plugs and Connectors

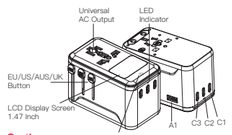


Cautions

- Can plug into type A,B,C,E,F,G,H,I,J,K,L outlets.

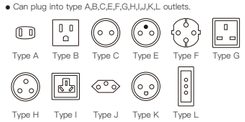

Compatible Devices

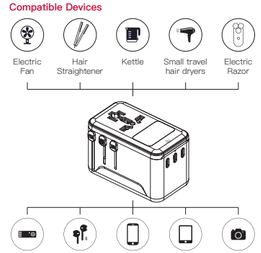

Note: This product may not work with certain high power appliances such as hair dryers more than 2500W.


Compatible countries & regions




EU PLUG/TYPE C
Germany, Denmark, France Finland, Norway, etc.



US PLUG/TYPE A
USA, China, Japan, Panama Mexico, Philippines, etc.



AUS PLUG/TYPE I
China, Australia, New Zealand Argentina, Fiji, etc.

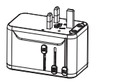


UK PLUG/TYPE G
UK, Singapore, Malaysia, Maldives, etc.

How To Replace The Fuse



1. When the travel adapter is used in conjunction with high-power devices that exceed the standard, the fuse may blow. At this time, a new main fuse needs to be replaced, all pins should be reversed, and a screwdriver or similar item should be used to pry open the main fuse cover.

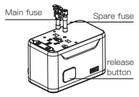

2.The main fuse can be removed together with the fuse cover, at the same time, pry open the spare fuse cover, install the spare fuse into the main fuse cover, and reinstall it in its original position.

This adapter does NOT convert voltage. To use an AC-powered electric device abroad, Please ENSURE it supports Dual Voltage(with "100-250V, 50/60Hz" printed on it).

CAUTIONS:

- Before use, please read this instructions carefully! This product does not convert voltage (AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.
- Each country has its own regulations regarding the use of travel adapters, please check in each country before use.
- No grounding, this product is for use with unearthed or double insulated appliances only.
- Covers more than 180 countries with US/AUS/EU/UK plugs.
- Built-in safety shutters protect users from the direct touch of the live parts on the socket outlet.
- Only one plug-type can be used at one time, other plug-pins are locked automatically.

Waste electrical products should not be disposed of with household waste.Please recycle where facilities exist. Check with your Local Authority for recycling advice.


This device complies with part 15 of the FCC rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Made in China


Single-port usage mode



Two-port usage mode



Three-port usage mode



Four-port usage mode



WARRANTY

Register Three (3) Year Limited Warranty

This Three (3)Year Limited Warranty applies to purchases made from authorized retailers of Rosewill Inc.("Rosewill") by the original appliance owner and is not transferable. Please visit www.rosewill.com to register your new Rosewill appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom ofyour appliance) along with your name and email address.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to techsupport@rosewill.com or call to 1-800-575-9885.We will try to contact you as soon as possible. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for g uality inspection. Rosewill is not responsible for shipping costs related to warranty service.When returning your appliance, please include your name, mailing address,email address, phone number, and proof of the original purchase date as well as a description ofthe problem you are encountering with the appliance.

Appliances need to be disposed of separately for scrap. Throwing them directly into the garbage is prohibited.

Technical Support Information

techsupport@rosewill.com 1-800-575-9885 www.rosewill.com

Thank you for purchasing a quality Rosewill product.
Please register your product at www.rosewill.com for complete warranty information and support for your product.